

HTRise DUB-6RB-1BF

HTRise Disco Ball Home Party Light Show Speaker Instruction Manual

Model: DUB-6RB-1BF

1. INTRODUCTION

Welcome to the instruction manual for your HTRise Disco Ball Home Party Light Show Speaker. This device combines a portable Bluetooth speaker with dynamic RGB LED disco lights, designed to enhance your home parties, gatherings, and personal entertainment. Please read this manual carefully to ensure proper use and to maximize your enjoyment of the product.

Key Features:

- RGB LED lights with rotating colorful patterns.
- Sound-controlled light effects that respond to music.
- Bluetooth 2.1 + EDR wireless connectivity.
- Built-in rechargeable battery for portable use.
- Multiple playback options: Bluetooth, TF Card, USB Disk, AUX input.

2. SAFETY INFORMATION

To prevent damage or injury, please observe the following safety precautions:

- Do not expose the device to water or moisture. This product is **not waterproof**.
- Keep the device away from heat sources, direct sunlight, and flammable materials.
- Do not attempt to disassemble, repair, or modify the device. This will void the warranty.
- Use only the provided charging cable or a certified equivalent.
- Ensure proper ventilation when operating the device.
- Avoid direct eye exposure to the LED lights for extended periods.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check the box for the following items:

- 1 x HTRise Disco Ball Speaker
- 1 x Charging Cable

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your disco ball speaker.



Image 4.1: Front view of the HTRise Disco Ball Speaker. The control panel is visible below the crystal dome, featuring buttons for LED control, track navigation, play/pause, and ports for TF card, USB, and AUX input, along with the power switch.

Control Panel Features:

- **LED Button:** Toggles the disco lights on/off.

- **Previous Track / Volume Down Button:** Short press for previous track, long press to decrease volume.
- **Play/Pause Button:** Plays or pauses audio.
- **Next Track / Volume Up Button:** Short press for next track, long press to increase volume.
- **TF Card Slot:** For playing music from a MicroSD/TF card.
- **USB Port:** For playing music from a USB flash drive.
- **AUX DC 5V Port:** For wired audio input and charging.
- **ON/OFF Switch:** Powers the device on or off.

5. SETUP

5.1. Charging the Device

1. Locate the provided charging cable.
2. Insert the small end of the charging cable into the AUX DC 5V port on the speaker.
3. Connect the other end of the charging cable to a standard USB power adapter (not included) or a computer's USB port.
4. The charging indicator light (if present) will illuminate during charging and turn off when fully charged.
5. A full charge typically takes 2-3 hours and provides 3-5 hours of playback at maximum volume.

5.2. Powering On/Off

1. To power on the device, slide the **ON/OFF Switch** to the 'ON' position. You will hear an audible prompt.
2. To power off the device, slide the **ON/OFF Switch** to the 'OFF' position.

6. OPERATING INSTRUCTIONS

6.1. Bluetooth Connection

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing light or audible prompt.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select 'HTRise Speaker' (or similar name) from the list.
4. Once connected, you will hear a confirmation sound. The light indicator will stop flashing.
5. You can now play audio from your device through the speaker.

6.2. Music Playback

- **Play/Pause:** Press the **Play/Pause Button** to start or pause music playback.
- **Volume Control:** Long press the **Next Track / Volume Up Button** to increase volume. Long press the **Previous Track / Volume Down Button** to decrease volume.
- **Track Navigation:** Short press the **Next Track / Volume Up Button** for the next song. Short press the **Previous Track / Volume Down Button** for the previous song.

6.3. Light Modes

- Press the **LED Button** to toggle the disco lights on or off.
- When the lights are on and music is playing, the RGB LED lights will automatically change patterns and colors in response to the music's rhythm and volume.
- *Note:* If the music volume is too low, the sound-controlled light effect may not be noticeable, and the lights

might appear static. Increase the volume for dynamic light changes.

6.4. Other Playback Modes

The speaker supports multiple input sources:



Image 6.1: Visual representation of the four available broadcast modes: Bluetooth, TF Card, U Disk (USB), and AUX Mode.

- **TF Card Mode:** Insert a MicroSD/TF card with MP3 audio files into the **TF Card Slot**. The speaker will automatically switch to TF Card mode and begin playback.
- **USB Disk Mode:** Insert a USB flash drive with MP3 audio files into the **USB Port**. The speaker will automatically switch to USB Disk mode and begin playback.
- **AUX Mode:** Connect an audio device (e.g., MP3 player, laptop) to the **AUX DC 5V Port** using a 3.5mm audio cable (not included). The speaker will automatically switch to AUX mode. Control playback from your connected device.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the device at least once every three months if not used regularly.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted.	Charge the device using the provided cable.
No sound from speaker.	Volume is too low or muted. Device not connected. Incorrect input mode.	Increase volume. Ensure Bluetooth is paired or AUX cable is properly connected. Select correct playback mode (Bluetooth, TF, USB, AUX).
Bluetooth pairing fails.	Speaker is not in pairing mode. Device is too far. Interference.	Ensure speaker is on and in pairing mode. Move device closer to speaker (within 10 meters). Turn off other Bluetooth devices.
Lights are not dynamic or not working.	LED button is off. Music volume is too low.	Press the LED button to turn lights on. Increase music volume for sound-controlled effects.
Poor sound quality.	Low battery. Device too far from speaker (Bluetooth). Source audio quality.	Charge the speaker. Move Bluetooth device closer. Use high-quality audio files.

9. SPECIFICATIONS

Feature	Specification
Model Name	DUB-6RB-1BF
Brand	HTRise
Speaker Type	Outdoor (Portable)
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth 2.1 + EDR
Bluetooth Range	10 Meters
Speaker Maximum Output Power	10 Watts
Audio Output Mode	Surround
Control Method	Voice (via connected device), Button
Power Source	Corded Electric (for charging), Battery

Feature	Specification
Battery Type	1 Lithium Polymer battery (included)
Item Weight	9.6 ounces
Product Dimensions	4.41"D x 4.41"W x 5.43"H
Color	White
Water Resistance Level	Not Water Resistant
Included Components	1* Disco ball speaker, 1*Charging cable

10. WARRANTY AND SUPPORT

This HTRise product comes with a Limited Warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support or customer service inquiries, please contact your retailer or visit the official HTRise website for contact information.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

