

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Briggs & Stratton](#) /
- › [Briggs & Stratton V-Belt 1736516YP Instruction Manual](#)

Briggs & Stratton 1736516YP

Briggs & Stratton V-Belt 1736516YP Instruction Manual

Genuine OEM Replacement Part

INTRODUCTION

This manual provides essential information for the proper installation, maintenance, and understanding of your Briggs & Stratton V-Belt, model 1736516YP. This V-belt is a genuine OEM replacement part designed to ensure optimal performance and compatibility with various Briggs & Stratton outdoor power equipment models. Please read these instructions carefully before proceeding with any installation or maintenance.

SAFETY INFORMATION

WARNING: Always prioritize safety when working with power equipment. Failure to follow safety instructions can result in serious injury or equipment damage.

- Always disconnect the spark plug wire or remove the battery before performing any maintenance or installation.
- Wear appropriate personal protective equipment (PPE), including safety glasses and gloves.
- Ensure the equipment is on a stable, level surface and cannot move unexpectedly.
- Allow the engine and any moving parts to cool down completely before handling.
- Refer to your equipment's specific owner's manual for additional safety guidelines and detailed instructions.

PRODUCT OVERVIEW

The Briggs & Stratton V-Belt 1736516YP is a critical component in the drive system of your outdoor power equipment. It transmits power from the engine to various moving parts, such as mower blades or drive wheels. This genuine OEM belt is manufactured to precise specifications for durability and reliable performance.



Image 1: The Briggs & Stratton V-Belt, model 1736516YP. This image shows the typical appearance of the replacement V-belt.

INSTALLATION (SETUP)

Follow these general steps for replacing a V-belt. Specific procedures may vary depending on your equipment model. Always consult your equipment's owner's manual for detailed instructions.

1. **Prepare Equipment:** Ensure the equipment is turned off, the engine is cool, and the spark plug wire is disconnected or battery removed to prevent accidental starting.
2. **Access Belt Area:** Depending on your equipment, you may need to remove deck covers, guards, or other components to access the old belt.
3. **Remove Old Belt:** Carefully note the routing of the old belt around pulleys. Use appropriate tools to relieve tension on idler pulleys and remove the worn or broken belt.
4. **Install New Belt:** Route the new Briggs & Stratton V-Belt 1736516YP exactly as the old belt was routed. Ensure it sits correctly in all pulley grooves.
5. **Tension Adjustment:** Verify that the belt tension is correct. Some systems have automatic tensioners, while others may require manual adjustment. Refer to your equipment manual.
6. **Reassemble:** Reinstall any covers or guards that were removed.
7. **Test:** Reconnect the spark plug wire or battery. Start the equipment and test its function in a safe, open area.

to ensure the new belt operates correctly.

OPERATION

After successful installation, the V-belt should operate smoothly, transmitting power efficiently. Listen for any unusual noises, such as squealing or grinding, which could indicate improper installation or a faulty component. If issues arise, immediately shut down the equipment and inspect the belt and pulley system.

MAINTENANCE

Regular inspection and maintenance can extend the life of your V-belt and ensure consistent equipment performance.

- **Inspect Regularly:** Periodically check the belt for signs of wear, cracking, fraying, glazing, or stretching. Replace the belt if any damage is observed.
- **Keep Clean:** Remove any debris, grass clippings, or dirt that may accumulate on the belt or pulleys.
- **Check Tension:** Ensure the belt maintains proper tension. A loose belt can slip, causing loss of power, while an overly tight belt can put undue stress on bearings and the belt itself.
- **Pulley Inspection:** Inspect pulleys for wear, damage, or misalignment, which can prematurely wear out the belt.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Belt Squealing	Loose belt, glazed belt, misaligned pulleys, worn pulleys.	Check belt tension, inspect belt for glazing, verify pulley alignment and condition. Replace belt or pulleys if necessary.
Loss of Power / Slipping	Loose belt, worn belt, oil/grease on belt.	Adjust belt tension, replace worn belt, clean belt and pulleys if contaminated.
Belt Breaks Prematurely	Incorrect belt type, misaligned pulleys, worn pulleys, excessive load, foreign object.	Ensure correct OEM belt is used, check pulley alignment and condition, avoid overloading equipment, inspect for obstructions.

SPECIFICATIONS

The following specifications apply to the Briggs & Stratton V-Belt, model 1736516YP:

Model Number: 1736516YP

Brand: Briggs & Stratton

Product Dimensions: Approximately 20 x 6 x 1.5 inches

Item Weight: Approximately 1 pound

Material: Plastic (typical for V-belts, often a rubber/synthetic blend)

Belt Style: V Belt

Compatible Devices: Various Briggs & Stratton Engines and equipment requiring this OEM part.

Manufacturer: Briggs and Stratton

WARRANTY INFORMATION

Briggs & Stratton genuine replacement parts are typically covered by the manufacturer's warranty against defects in material and workmanship. For specific warranty terms and conditions applicable to your 1736516YP V-Belt, please refer to the official Briggs & Stratton warranty documentation or contact their customer support directly. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have questions regarding the installation, operation, or maintenance of your Briggs & Stratton V-Belt 1736516YP, or require technical assistance, please contact Briggs & Stratton customer support through their official website or the contact information provided in your equipment's owner's manual.

For more information, visit the official [Briggs & Stratton Store](#).