

EGLO 94189A

EGLO Tarbes 3-Light Pendant Lighting Fixture

Model: 94189A

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before beginning installation. Failure to do so may result in electric shock, fire, or other injuries that could be fatal or cause property damage.

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Contact a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- This fixture is designed for indoor, dry location use only. Do not install in wet or damp areas.
- Ensure the mounting surface can support the weight of the fixture.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

PRODUCT OVERVIEW

The EGLO Tarbes 3-Light Pendant is an adjustable lighting fixture designed for indoor use, suitable for kitchen islands, hallways, and dining rooms. It features three individual pendant lights with geometric metal shades, suspended from a linear canopy. The fixture is finished in matte black, offering a contemporary aesthetic.



Image: EGLO Tarbes 3-Light Pendant Fixture. This image shows the complete pendant light fixture with three individual lights, each featuring a geometric metal shade, suspended from a linear bar in matte black finish.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer support for assistance.

- Light Fixture Assembly (Canopy, Suspension Rods, 3 Pendant Shades with Sockets)
- Mounting Hardware (Crossbar, Mounting Screws, Wire Nuts)
- Instruction Manual

Note: Light bulbs are not included and must be purchased separately.

SPECIFICATIONS

Feature	Detail
Brand	EGLO

Feature	Detail
Model Number	94189A
Color	Matte Black
Material	Metal (Fixture), Glass (Shade)
Style	Contemporary / Transitional
Light Fixture Form	Pendant
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Light Source	Incandescent (E26 base recommended)
Number of Light Sources	3
Voltage	120 Volts
Wattage (Max per bulb)	100 watts
Mounting Type	Protruding
Required Assembly	Yes
Certification	UL Listed
Item Dimensions (L x W x H)	31.06" x 6.3" x 10.5" (Fixture body)
Adjustable Height	Up to 72 inches (total height)
Item Weight	4.43 Pounds

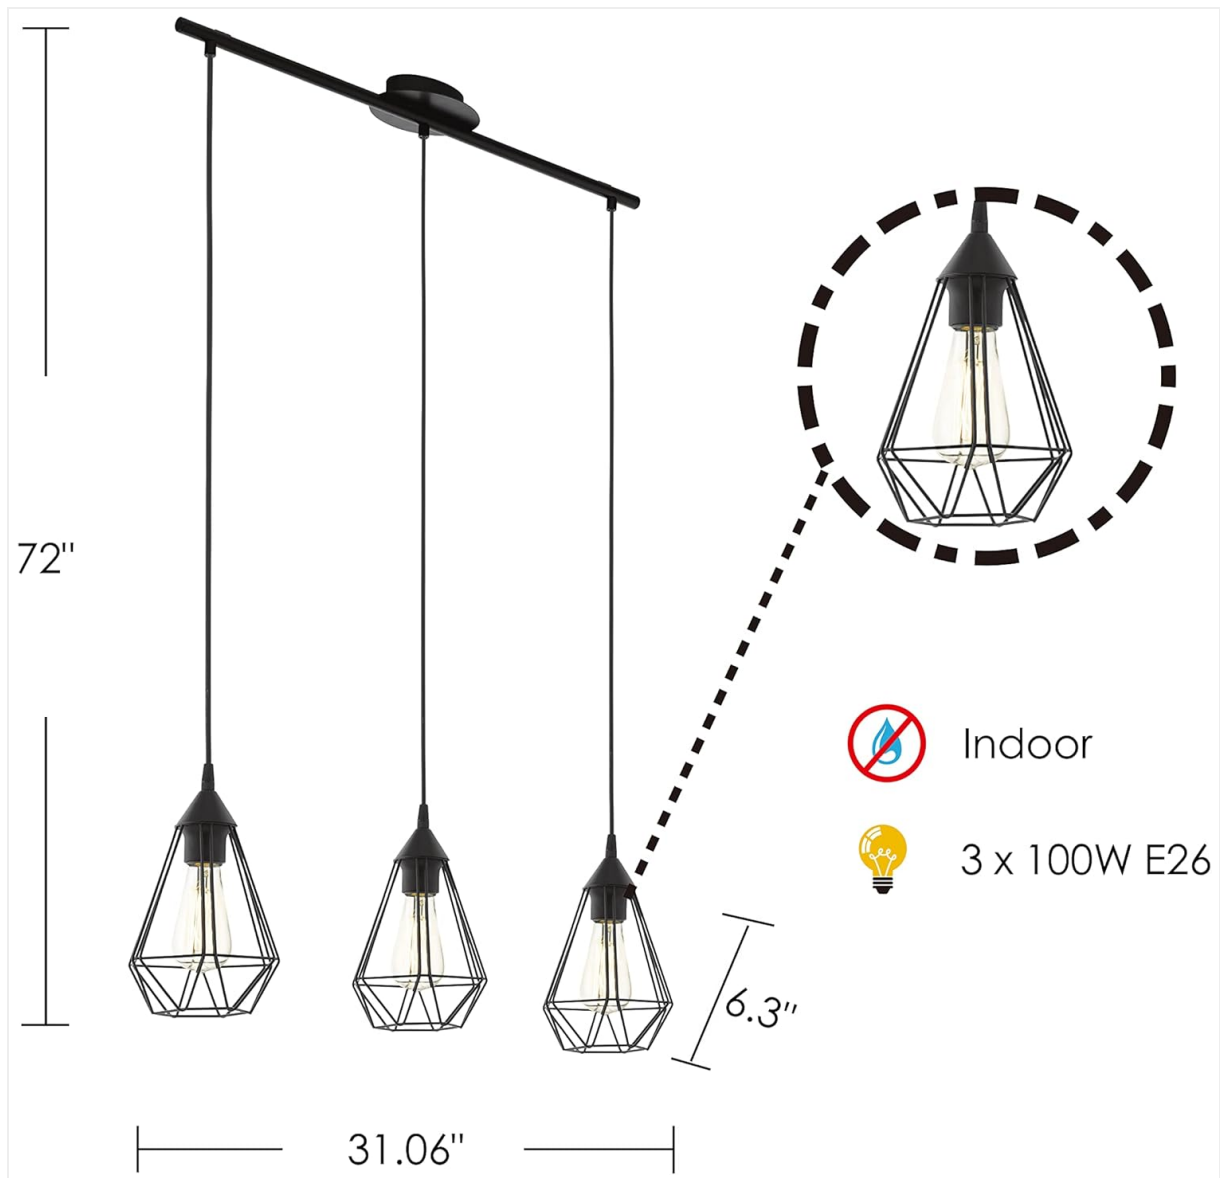


Image: EGLO Tarbes 3-Light Pendant with dimensions. This diagram illustrates the overall dimensions of the fixture, including the 31.06-inch length of the bar, 6.3-inch width of the shades, and an adjustable maximum hanging height of 72 inches. It also indicates "Indoor" use and "3 x 100W E26" bulb requirements.

INSTALLATION GUIDE

Tools Required (Not Included):

- Phillips Head Screwdriver
- Flat Head Screwdriver
- Wire Strippers
- Electrical Tape
- Ladder
- Safety Glasses

Step-by-Step Installation:

1. **Turn Off Power:** Before starting, ensure the power to the circuit at the circuit breaker or fuse box is completely OFF. This is a critical safety step.
2. **Prepare Mounting Surface:** If replacing an existing fixture, carefully remove it. Ensure the junction box is securely mounted and capable of supporting the fixture's weight.

3. **Install Mounting Crossbar:** Attach the mounting crossbar to the junction box using the provided mounting screws. Ensure it is firmly secured.
4. **Adjust Pendant Height:** The length of each pendant cord can be adjusted. Determine the desired hanging height for each light. Loosen the set screw on the canopy where the cord enters, adjust the cord to the desired length, and then tighten the set screw to secure it. Repeat for all three pendants.
5. **Make Electrical Connections:**
 - Connect the **black** wire from the fixture to the **black** (Live) wire from the junction box using a wire nut.
 - Connect the **white** wire from the fixture to the **white** (Neutral) wire from the junction box using a wire nut.
 - Connect the **ground** wire (bare copper or green) from the fixture to the **ground** wire from the junction box and to the mounting crossbar's ground screw.
 - Ensure all wire nuts are securely tightened and connections are covered with electrical tape if necessary.
6. **Mount Fixture Canopy:** Carefully tuck all wires into the junction box. Align the fixture canopy with the mounting screws on the crossbar and secure it in place using the provided cap nuts or screws.
7. **Install Light Bulbs:** Screw in three (3) incandescent bulbs with an E26 base, not exceeding 100 watts each.
8. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker or fuse box. Test the fixture.



Image: EGLO Tarbes 3-Light Pendant installed over a kitchen island. This image demonstrates the fixture's appearance in a typical home environment, highlighting its use over a kitchen island.

OPERATING INSTRUCTIONS

This pendant light fixture operates with standard wall switches. Ensure appropriate E26 base incandescent bulbs (max 100W per bulb) are installed. The fixture is designed for use with 120V electrical systems.

- **Power On/Off:** Use the wall switch connected to the fixture to turn the lights on or off.
- **Bulb Type:** Use E26 base bulbs. Incandescent bulbs up to 100 watts per socket are supported. For energy efficiency, LED or CFL bulbs with an E26 base can also be used, provided their wattage equivalent does not exceed 100W and they are compatible with the fixture's electrical system.

MAINTENANCE

Cleaning:

- Always disconnect power before cleaning.
- Wipe the fixture with a soft, dry cloth.
- Do not use harsh chemicals, abrasive cleaners, or polishes as they may damage the finish.

Bulb Replacement:

- Ensure the power is OFF and the bulbs have cooled completely before attempting to replace them.
- Carefully unscrew the old bulb from the socket.
- Screw in a new E26 base bulb, ensuring it does not exceed 100 watts.
- Restore power and test the new bulb.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	<ol style="list-style-type: none">1. Power is off.2. Loose wire connection.3. Faulty bulb.4. Faulty wall switch.	<ol style="list-style-type: none">1. Check circuit breaker/fuse.2. Ensure all wire connections are secure (with power off).3. Replace bulb with a known good one.4. Consult a qualified electrician.
Light flickers.	<ol style="list-style-type: none">1. Loose bulb.2. Incorrect bulb type/wattage.3. Loose wire connection.	<ol style="list-style-type: none">1. Tighten bulb securely.2. Ensure bulb is E26 base, max 100W.3. Check wire connections (with power off).

WARRANTY INFORMATION

EGLO products are covered by a **1-year warranty** from the date of original shipment when purchased on Amazon. This warranty covers items and conditions identified in the original manufacturer's warranty. Additionally, a **30-day replacement parts policy** is in place to ensure a fully working item.

Exclusions: The warranty specifically does not cover loss and theft, water damage, customer abuse, and finish deterioration due to UV or coastal exposure.

CUSTOMER SUPPORT

For further assistance, missing parts, or warranty claims, please contact EGLO customer support. You can visit the official EGLO store on Amazon for more information and contact options: [EGLO Amazon Store](#)