

Kichler 43118NBR

Kichler Armstrong 8-Light Chandelier (Model 43118NBR) Instruction Manual

Model: 43118NBR | Brand: Kichler

IMPORTANT SAFETY INFORMATION

WARNING: To avoid electric shock, always disconnect power at the main circuit breaker or fuse box before beginning installation or performing any maintenance. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. If you are unsure about any part of the installation process, consult a qualified electrician.

Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Please check your local laws before purchasing this product.

Always use a stable ladder and ensure all connections are secure. Do not exceed the maximum wattage specified for the bulbs.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. The package should include:

- Chandelier fixture body with adjustable arms
- Mounting bracket and hardware (screws, nuts, washers)
- Canopy
- Chain (if applicable for hanging height adjustment)
- Instruction manual
- Warranty information

Note: Light bulbs are typically sold separately. This fixture requires eight medium G40 up to 100W bulbs.

INSTALLATION INSTRUCTIONS

Tools Required (Not Included):

- Phillips head screwdriver

- Flathead screwdriver
- Wire strippers
- Pliers
- Electrical tape
- Voltage tester
- Step ladder

Step 1: Prepare for Installation

1. **Disconnect Power:** Locate the main circuit breaker or fuse box for your home and turn off the power to the circuit where you will be installing the chandelier.
2. **Verify Power is Off:** Use a voltage tester to confirm that the power is completely off at the junction box where the fixture will be installed.
3. **Remove Old Fixture:** Carefully remove any existing light fixture from the ceiling, disconnecting its wiring.
4. **Unpack and Inspect:** Unpack the new Kichler Armstrong Chandelier and all its components. Inspect for any damage or missing parts.

Step 2: Install Mounting Bracket

5. Attach the mounting bracket to the ceiling junction box using the provided screws. Ensure it is securely fastened.
6. Thread the fixture's wires through the mounting box and prepare them for connection.



Image: The Kichler Armstrong 8-Light Chandelier in Natural Brass finish, showcasing its adjustable arms and exposed bulbs.

Step 3: Wire Connections

7. **Ground Wire:** Connect the bare copper ground wire from the fixture to the ground wire from the junction box (usually bare copper or green) using a wire nut. If your junction box has a ground screw, wrap the ground wire around it before connecting.
8. **Neutral Wire:** Connect the white wire from the fixture to the white (neutral) wire from the junction box using a wire nut.
9. **Hot Wire:** Connect the black wire from the fixture to the black (hot) wire from the junction box using a wire nut.
10. **Secure Connections:** Ensure all wire nuts are tightly secured. Wrap electrical tape around each wire nut and connection for added safety.
11. **Tuck Wires:** Carefully tuck all connected wires into the junction box, ensuring no wires are pinched.

Step 4: Mount the Fixture

12. Raise the canopy of the chandelier to the ceiling, aligning it with the mounting bracket.
13. Secure the canopy to the mounting bracket using the provided hardware (e.g., decorative nuts or screws).
14. Adjust the arms of the chandelier to your desired horizontal or vertical configuration.



Image: The Kichler Armstrong Chandelier configured with its arms spread horizontally, ideal for wider spaces.



Image: The Kichler Armstrong Chandelier configured with its arms clustered vertically, suitable for narrower or taller spaces.

Step 5: Install Light Bulbs

15. Carefully screw the eight medium G40 bulbs (up to 100W each) into the sockets. Do not overtighten.

Installation Video Guide:



Video: A step-by-step guide on how to install Kichler Chandeliers and Pendants. This video demonstrates general installation procedures for Kichler lighting fixtures.

OPERATING INSTRUCTIONS

Once installation is complete and verified, restore power at the main circuit breaker. Operate the chandelier using your wall switch. The adjustable arms allow for customization of light direction and aesthetic. Gently reposition the arms as desired, ensuring not to apply excessive force.

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, dry cloth. Do not use abrasive cleaners or solvents as they may damage the finish.
- **Bulb Replacement:** Always turn off power before replacing bulbs. Allow bulbs to cool before handling. Replace with eight medium G40 bulbs, not exceeding 100W per bulb.
- **Inspection:** Periodically check all connections and mounting hardware for tightness.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	Power is off at the breaker. Loose wire connections. Faulty bulb.	Check the circuit breaker and turn power on. Verify all wire connections are secure (with power off). Replace bulb with a new one.
Flickering lights	Loose bulb. Incorrect bulb type/wattage. Loose wire connection.	Tighten bulb. Ensure bulbs meet specifications. Check wire connections (with power off).

SPECIFICATIONS

Model Number	43118NBR
Brand	Kichler
Color	Natural Brass
Material	Alloy Steel, Glass
Style	Modern, Contemporary/Mid-Century Modern
Light Fixture Form	Chandelier
Room Type	Living Room, Dining Room, Kitchen, Foyer
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Light Source	Incandescent
Number of Light Sources	8
Voltage	120 Volts
Wattage	100 watts (per bulb)
Bulb Base	E26

Item Dimensions L x W x H	30"L x 30"W x 26"H
Item Weight	8 Pounds
Required Assembly	Yes

WARRANTY AND SUPPORT

Manufacturer Warranty: This Kichler product comes with a limited warranty of one (1) year from the date of purchase. For additional support, troubleshooting, or to explore coordinating products, please visit the official Kichler Store: [Kichler Store on Amazon](#).