

Sceptre E345B-QUN168W

Sceptre IPS 34-inch UltraWide Monitor User Manual

Model: E345B-QUN168W

INTRODUCTION

Thank you for purchasing the Sceptre IPS 34-inch UltraWide Monitor. This manual provides essential information for setting up, operating, and maintaining your monitor to ensure optimal performance and longevity. Please read this manual thoroughly before using your new monitor.

SETUP

1. Unboxing and Package Contents

Carefully remove the monitor and all accessories from the packaging. Ensure all items listed below are present:

- Sceptre IPS 34-inch UltraWide Monitor
- Monitor Stand (Base and Neck)
- Power Adapter and Power Cable
- DisplayPort Cable
- HDMI Cable
- USB-C Cable
- User Manual (this document)
- Screws for stand assembly
- 2 AAA batteries (for remote control, if included)

2. Stand Assembly

To assemble the monitor stand:

1. Attach the stand neck to the monitor panel using the provided screws.
2. Secure the stand base to the stand neck using the remaining screws.
3. Place the assembled monitor on a stable, flat surface.



Figure 1: The monitor stand allows for height, tilt, and swivel adjustments for optimal viewing comfort.

3. VESA Mounting (Optional)

The Sceptre E345B-QUN168W monitor is VESA compatible, allowing it to be mounted on a wall or an articulating arm (mount sold separately). Follow the instructions provided with your VESA mount for proper installation. Ensure the VESA mount is rated to support the monitor's weight (20.9 pounds).

4. Connecting Cables

Connect the necessary cables to your monitor and computer:

- **Power:** Connect the power adapter to the monitor's DC input and then plug the power cable into a power outlet.
- **Video:** Connect one end of the DisplayPort, HDMI, or USB-C cable to the corresponding port on your monitor and the other end to your computer's video output.
- **USB Hub:** Connect the USB-B 3.0 upstream cable from the monitor to your computer to enable the monitor's USB-A 3.0 ports.
- **Audio:** If desired, connect headphones or external speakers to the 3.5mm audio output jack on the monitor.

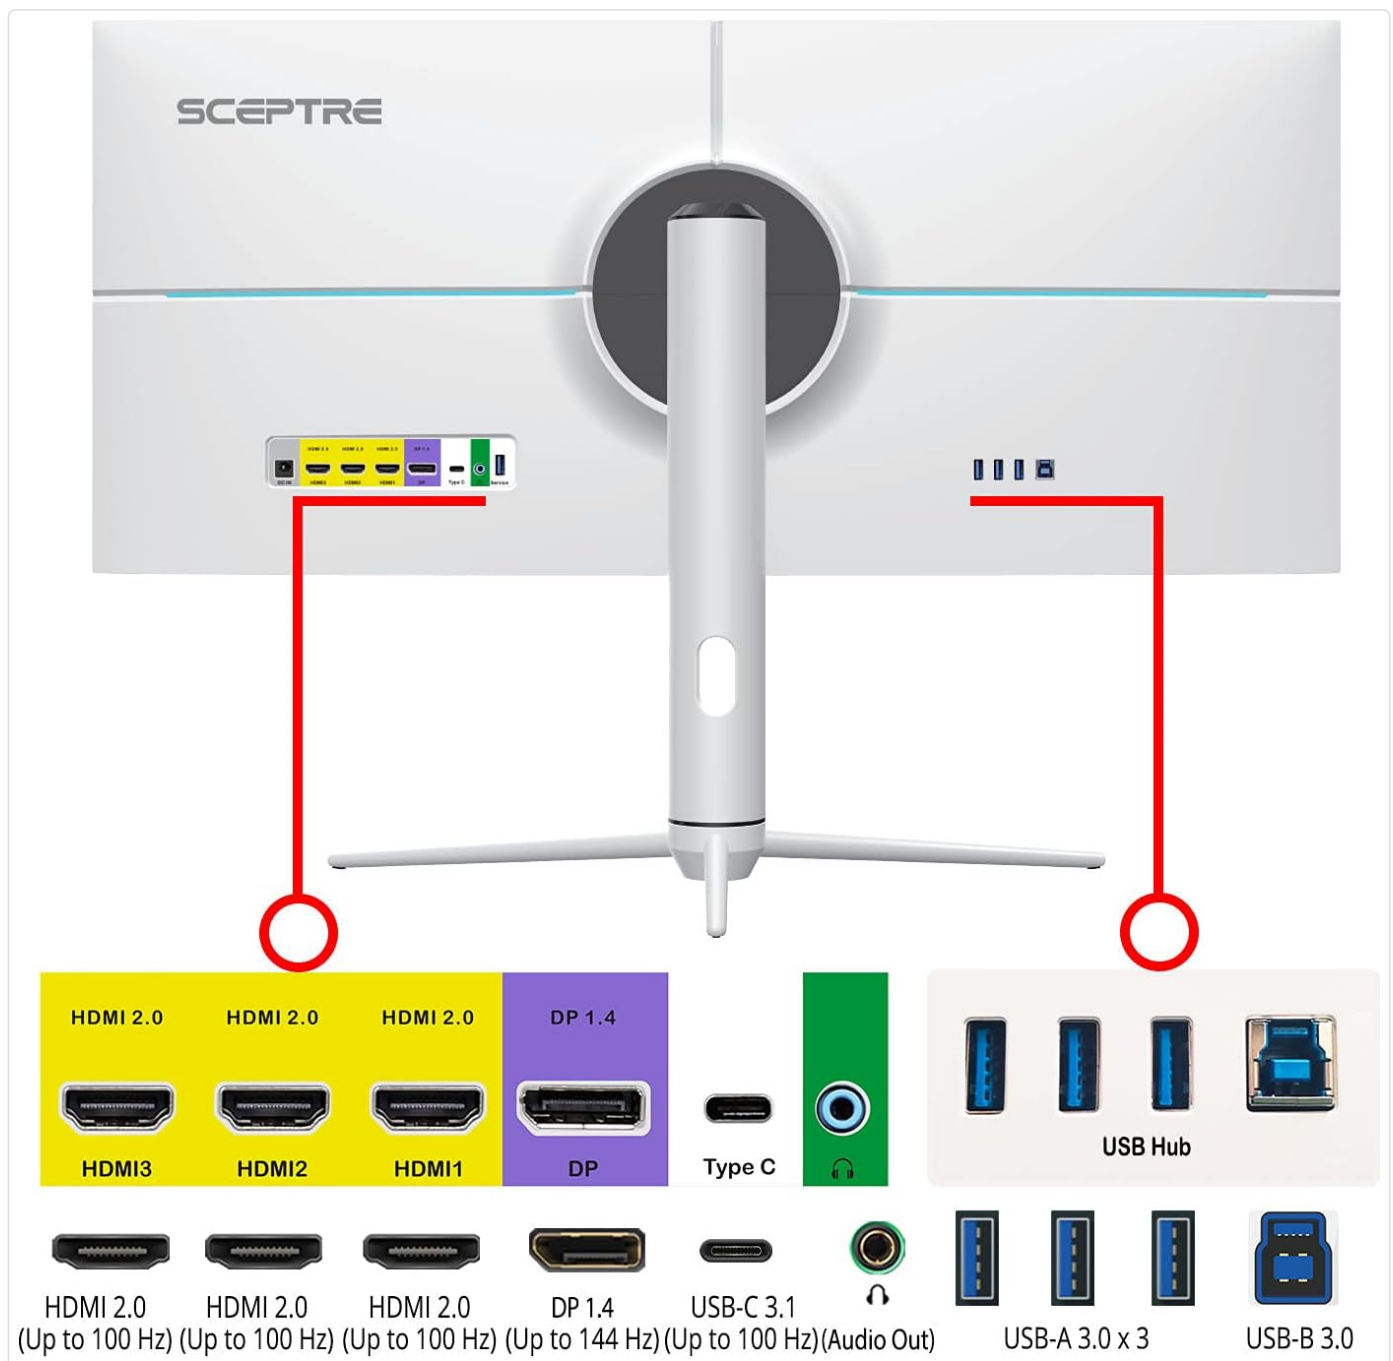


Figure 2: Rear view illustrating the monitor's connectivity options, including multiple HDMI, DisplayPort, USB-C, and USB-A ports.

OPERATING THE MONITOR

1. Power On/Off

Press the power button (usually a joystick or dedicated button on the bottom/rear of the monitor) to turn the monitor on or off. The power indicator light will illuminate when the monitor is on.

2. On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various monitor settings. Use the joystick/buttons to navigate the menu:

- **Picture Settings:** Adjust brightness, contrast, sharpness, color temperature, and HDR modes.
- **Display Settings:** Configure aspect ratio, input source, and FreeSync Premium.
- **Audio Settings:** Control volume and mute.
- **PIP/PBP:** Enable Picture-in-Picture or Picture-by-Picture modes to view multiple sources simultaneously.
- **System Settings:** Access language, OSD timeout, and factory reset options.

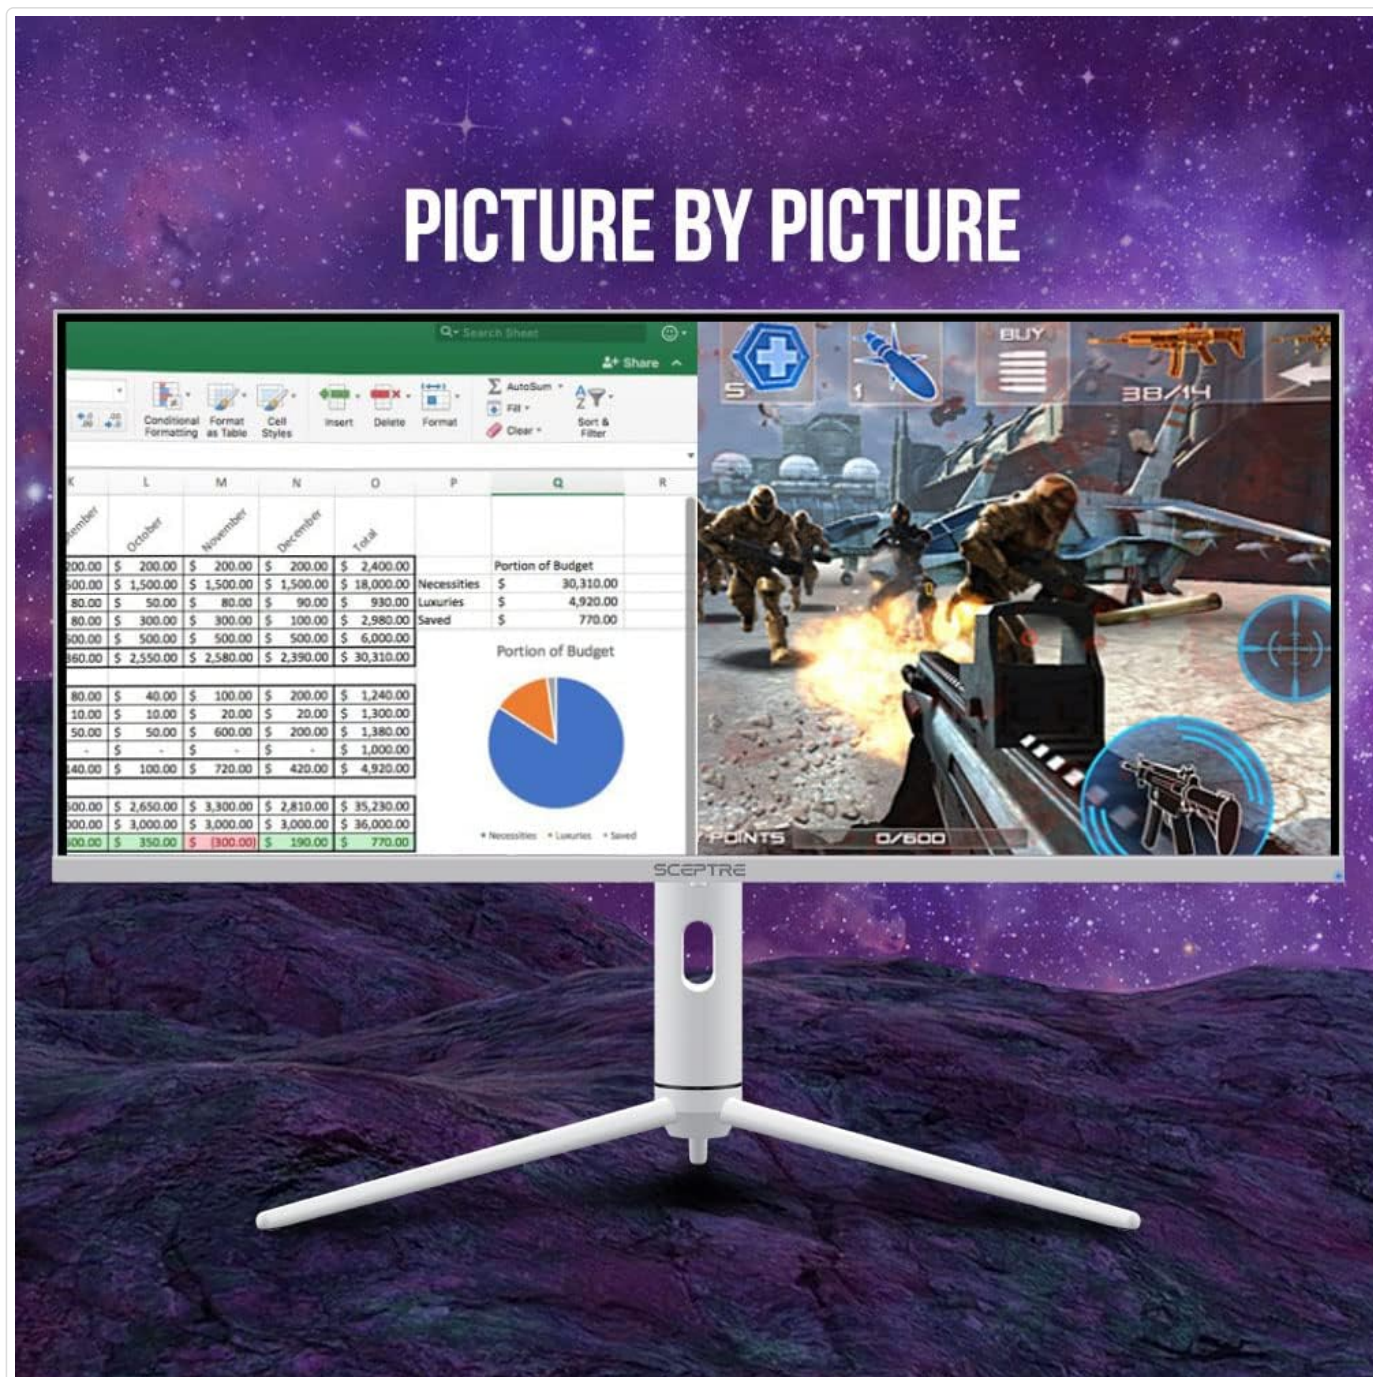


Figure 3: The monitor supports Picture-in-Picture (PIP) and Picture-by-Picture (PBP) functions, allowing multiple video sources to be displayed simultaneously for enhanced multitasking.

3. Key Features

- **144Hz Refresh Rate:** Provides smooth visuals, especially beneficial for fast-paced gaming.
- **1ms MPRT:** Minimizes motion blur for crisp imagery.
- **HDR400:** Enhances dynamic contrast and color vibrancy.
- **AMD FreeSync Premium:** Synchronizes refresh rates to eliminate screen tearing and stuttering.
- **IPS Panel:** Offers consistent color performance and wide viewing angles.

MAINTENANCE

To ensure the longevity and optimal performance of your Sceptre monitor, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a monitor-specific cleaning solution applied to the cloth, not directly to the screen.

- **Cleaning the Casing:** Use a soft, dry cloth to clean the monitor's casing. Avoid abrasive cleaners or solvents.
- **Ventilation:** Ensure the monitor's ventilation openings are not blocked to prevent overheating.
- **Power Off When Not in Use:** Turn off the monitor when not in use for extended periods to save energy and prolong its lifespan.

TROUBLESHOOTING

If you encounter issues with your monitor, refer to the following common troubleshooting steps:

- **No Power:** Check if the power cable is securely connected to both the monitor and the power outlet. Ensure the power outlet is functional.
- **No Signal:** Verify that the video cable (DisplayPort, HDMI, or USB-C) is correctly connected to both the monitor and your computer. Ensure the correct input source is selected in the OSD menu.
- **Flickering/Distorted Image:** Check the video cable for damage. Try a different cable or port. Ensure your graphics card drivers are up to date.
- **Buttons Not Responding:** Try resetting the monitor to factory defaults via the OSD menu.
- **Sound Issues:** Check the volume settings in the OSD menu and on your computer. Ensure external speakers or headphones are properly connected.

SPECIFICATIONS

Model Number	E345B-QUN168W
Screen Size	34 Inches
Panel Type	IPS (In-Plane Switching)
Resolution	3440 x 1440 (Wide Quad HD)
Aspect Ratio	21:9
Refresh Rate	Up to 144Hz
Response Time	1ms MPRT
HDR Support	HDR400 Ready
Color Gamut	95% DCI-P3
Brightness	350 nits
Connectivity	DisplayPort 1.4 x 1, HDMI 2.0 x 3, USB-C 3.1 x 1 (Audio Out), USB-A 3.0 x 3, USB-B 3.0 x 1 (Upstream)
Adaptive Sync	AMD FreeSync Premium
Dimensions (with stand)	32.16 x 11.28 x 22.43 inches
Weight (with stand)	20.9 pounds

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or visit

the official Sceptre website. Keep your proof of purchase for any warranty claims.