



**Manuals.plus /**

› **My Arcade /**

› My Arcade Retroplay Controller User Manual

## **My Arcade DGUN-2579**

# **My Arcade Retroplay Controller User Manual**

Model: DGUN-2579

## **PRODUCT OVERVIEW**

---

The My Arcade Retroplay Controller is a compact, plug-and-play gaming system designed for direct connection to your television. It features 200 built-in 8-bit video games, offering a wide variety of entertainment without the need for an expensive console. Its portable design allows for gaming enjoyment in various locations.



Image: The My Arcade Retroplay Controller, showing its compact design. The controller features a red joystick on the left, red 'A' and 'B' action buttons on the right, and smaller 'Start' and 'Reset' buttons below the joystick. An AV cable is connected to the top, and labels for 'OFF', 'ON', and 'AV' are visible. The text '200 GAMES' is printed on the lower left, and 'TV VIDEO GAMES' on the lower right.

## SETUP INSTRUCTIONS

### 1. Battery Installation

The Retroplay Controller requires batteries for operation. Locate the battery compartment on the back of the controller. Open the compartment cover and insert the required batteries (typically AAA, check the compartment for specific type and polarity). Close the cover securely.

### 2. Connecting to Your Television

1. Ensure your television is turned off.
2. Locate the AV input ports on your television. These are typically color-coded (yellow for video, white for left audio, red for right audio).
3. Connect the included 5-foot AV cable from the Retroplay Controller to the corresponding AV input ports on your television.

Match the colors of the plugs to the colors of the ports.

4. Turn on your television and select the correct AV input channel (e.g., AV1, Video 1, Input).

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off

Locate the ON/OFF switch on the top of the controller. Slide the switch to the "ON" position to power on the device. Slide it to the "OFF" position when you are finished playing.

### 2. Game Selection

Upon powering on, the main game selection menu will appear on your television screen. Use the joystick to navigate through the list of 200 built-in games. Press the **Start** button to select a game and begin playing.

### 3. Gameplay Controls

- **Joystick:** Used for directional movement within games and for navigating menus.
- **'A' Button:** Primary action button, typically used for jumping, firing, or confirming selections.
- **'B' Button:** Secondary action button, often used for different actions depending on the game.
- **Start Button:** Used to begin a game, pause gameplay, or confirm selections in menus.
- **Reset Button:** Press this button to return to the main game selection menu at any time during gameplay.

## MAINTENANCE

---

### Cleaning

To clean the controller, gently wipe the surface with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the device. Ensure the device is powered off before cleaning.

### Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage and potential damage to the device.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No power/Controller does not turn on.	<ul style="list-style-type: none"><li>• Batteries are dead or incorrectly inserted.</li><li>• Power switch is in the OFF position.</li></ul>	<ul style="list-style-type: none"><li>• Replace batteries with fresh ones and ensure correct polarity.</li><li>• Slide the power switch to the ON position.</li></ul>
No video or audio on TV.	<ul style="list-style-type: none"><li>• AV cable not properly connected.</li><li>• Incorrect TV input selected.</li><li>• Controller not powered on.</li></ul>	<ul style="list-style-type: none"><li>• Ensure AV cable is securely connected to both the controller and the TV.</li><li>• Select the correct AV input channel on your television.</li><li>• Verify the controller is powered on.</li></ul>
Controller not responding during gameplay.	<ul style="list-style-type: none"><li>• Game may be paused.</li><li>• Temporary software glitch.</li></ul>	<ul style="list-style-type: none"><li>• Press the <b>Start</b> button to unpause.</li><li>• Press the <b>Reset</b> button to return to the main menu, then re-select the game.</li><li>• Power off and then power on the controller.</li></ul>

## SPECIFICATIONS

---

- **Model:** DGUN-2579
- **Games:** 200 built-in 8-bit video games
- **Connectivity:** AV (Audio/Video) cable
- **Cable Length:** 5 feet (AV cable)
- **Product Dimensions:** 5.25 x 1.5 x 6.75 inches
- **Item Weight:** 4 ounces
- **Power Source:** Batteries (type not specified, typically AAA - user to check compartment)
- **Manufacturer:** dreamGEAR

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage and technical support, please refer to the packaging or contact My Arcade customer service directly. Contact details are typically available on the official My Arcade website or product packaging.

Please retain your proof of purchase for warranty claims.

