

[Manuals.plus](#) /

› [Brother](#) /

› Brother S03245001 Bobbin Case Instruction Manual for Industrial Sewing Machines

Brother S03245001

Brother S03245001 Bobbin Case Instruction Manual

Original Part for Brother Industrial Single Needle Sewing Machines

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of the Brother S03245001 Bobbin Case. This component is an original Brother part designed for specific industrial single needle sewing machines, ensuring optimal performance and compatibility.

Please read these instructions carefully before attempting to install or use the bobbin case to ensure safe and efficient operation of your sewing machine.

2. PRODUCT OVERVIEW



Image showing the Brother S03245001 Bobbin Case, a crucial component for industrial single needle sewing machines. This view highlights its metallic construction and design.

The Brother S03245001 is an authentic replacement bobbin case. It is engineered to meet the precise specifications of Brother industrial sewing machines, contributing to consistent stitch quality and machine longevity.

3. COMPATIBILITY

This bobbin case (part number S03245001 or S03245-0-01) is compatible with the following Brother industrial single needle sewing machine models, among others:

- DB2-B705, DB2-B706, DB2-B707
- DB2-B715, DB2-B716
- DB2-B730, DB2-B735, DB2-B736, DB2-737, DB2-738
- DB2-B772, DB2-B774, DB2-b777, DB2-B778
- DB2-B790, DB2-B791, DB2-B792, DB2-B795
- DD7000, S-7000, S-7200 Series machines

Always verify your machine's model number and consult your machine's specific manual for exact part requirements.

4. INSTALLATION

Follow these steps to correctly install the bobbin case into your Brother industrial sewing machine:

1. **Power Off:** Ensure the sewing machine is turned off and unplugged from the power source to prevent accidental operation.
2. **Access Bobbin Area:** Open the bobbin compartment or remove the slide plate, typically located beneath the needle plate, to access the shuttle hook area.
3. **Remove Old Bobbin Case (if applicable):** If replacing an existing bobbin case, carefully remove it. Note its orientation for reference.
4. **Insert New Bobbin Case:** Hold the new S03245001 bobbin case by its latch. Align it with the shuttle hook mechanism. Gently push it into place until it clicks or seats firmly. Ensure it is fully engaged and does not wobble.
5. **Verify Seating:** Lightly rotate the handwheel of the sewing machine to confirm that the bobbin case is properly seated and moves freely with the shuttle hook.
6. **Close Compartment:** Replace the slide plate or close the bobbin compartment.

If you encounter resistance or difficulty, do not force the bobbin case. Re-check alignment and consult your machine's specific service manual.

5. OPERATION (INSERTING AND THREADING THE BOBBIN)

Once the bobbin case is installed, follow these steps to prepare it for sewing:

1. **Insert Bobbin:** Place a wound bobbin into the bobbin case. Ensure the thread unwinds in the correct direction (usually clockwise or counter-clockwise, depending on your machine and bobbin case design – refer to your machine's manual).
2. **Thread Bobbin Case:** Guide the bobbin thread through the tension spring slot on the side of the bobbin case. Pull the thread gently until it slides under the tension spring and emerges from the small opening.

3. **Check Tension:** The bobbin thread should pull smoothly with a slight, consistent resistance. If the tension is too loose or too tight, it may need adjustment. For precise tension adjustment, consult your sewing machine's manual or a qualified technician.
4. **Place Bobbin Case in Machine:** If you removed the bobbin case to insert the bobbin, re-insert it into the shuttle hook area as described in the "Installation" section.
5. **Draw Up Bobbin Thread:** Hold the needle thread, turn the handwheel towards you to lower and raise the needle, catching the bobbin thread loop. Pull the needle thread to bring the bobbin thread up through the needle plate hole.

6. MAINTENANCE

Regular maintenance of your bobbin case ensures smooth operation and extends its lifespan:

- **Cleaning:** Periodically remove the bobbin case and use a small brush or lint picker to clear any lint, dust, or broken thread accumulated around the tension spring and inside the case. Accumulation can affect thread tension and stitch quality.
- **Inspection:** Visually inspect the bobbin case for any signs of wear, nicks, burrs, or damage, especially on the edges where the thread passes. Damaged areas can snag thread and cause breakage or skipped stitches.
- **Lubrication:** While the bobbin case itself typically does not require lubrication, ensure the shuttle hook area of your sewing machine is properly oiled according to your machine's maintenance schedule.

Replace the bobbin case if significant wear or damage is observed to maintain optimal sewing performance.

7. TROUBLESHOOTING

If you experience issues related to the bobbin thread, consider the following:

- **Skipped Stitches or Loose Bottom Thread:**
 - Ensure the bobbin is inserted correctly and the thread is properly guided through the tension spring.
 - Check for lint or debris under the tension spring.
 - Verify the bobbin case is fully seated in the machine.
- **Thread Breakage (Bobbin Thread):**
 - Inspect the bobbin case for nicks or burrs that could be snagging the thread.
 - Ensure the bobbin is wound evenly and not overfilled.
 - Check if the bobbin thread tension is too tight.
- **No Bobbin Thread Pick-Up:**
 - Confirm the bobbin is inserted and threaded correctly in the bobbin case.
 - Ensure the bobbin case is properly installed in the machine.
 - Verify the needle is inserted correctly and is not bent or dull.

For persistent issues, consult your sewing machine's comprehensive troubleshooting guide or contact a qualified service technician.

8. SPECIFICATIONS

Part Number	S03245001 (S03245-0-01)
Type	Bobbin Case
Brand	Brother (Original Part)
Compatibility	Brother Industrial Single Needle Sewing Machines (e.g., DB2-B705, DB2-B737, DB2-B790, DD7000, S-7000, S-7200 Series)

9. WARRANTY AND SUPPORT

This Brother S03245001 Bobbin Case is an original part, designed for reliability. For specific warranty information, please refer to the terms provided by your original point of purchase or the official Brother documentation for replacement parts.

For technical support, service, or inquiries regarding this part, please contact the authorized Brother service center or the retailer from whom you purchased the product. Always provide the part number (S03245001) and your sewing machine model number when seeking assistance.