

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch Steam Iron 2800W TDI902836A User Manual

Bosch TDI902836A

Bosch Steam Iron 2800W TDI902836A User Manual

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient operation of your Bosch Steam Iron 2800W, model TDI902836A. This advanced steam iron is designed for effective garment care, featuring a powerful 2800W motor, a CeraniumGlissée soleplate, and advanced steam systems for optimal ironing results across various fabric types.

Key features include:

- **2800 Watts Power:** For rapid heating and powerful steam output.
- **CeraniumGlissée Soleplate:** With gliding lines, steam channels, and a 3-phase design for ideal steam distribution and excellent gliding.
- **Steam Motor:** Ensures deeper steam penetration into fabrics.
- **i-Temp Advanced Technology:** Provides an optimal combination of temperature and steam for all ironable fabrics.
- **AntiShine Program:** Offers special protection for dark and delicate fabrics.
- **Continuous Steam 55 g/min:** For consistent wrinkle removal.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the rating plate corresponds to your mains voltage.
- Do not immerse the iron, power cord, or plug in water or other liquids.
- Keep the iron out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Always unplug the iron from the power outlet when filling with water, emptying, or when not in use.
- Place the iron on a stable, heat-resistant surface when in use or when resting.
- Never leave the iron unattended while it is switched on or connected to the mains.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Only use the iron for its intended household purpose.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Bosch Steam Iron TDI902836A:



Image: The Bosch Steam Iron TDI902836A, showcasing its ergonomic design and CeraniumGlissée soleplate. The iron features a multi-color finish.

1. Water Tank Inlet
2. Spray Nozzle
3. Steam Button (for continuous steam or steam shot)
4. Spray Button
5. Temperature Control Dial
6. Indicator Light
7. CeraniumGlissée Soleplate
8. Power Cord
9. Ergonomic Handle with Thumb Rest

4. SETUP

Follow these steps for initial setup and preparing your iron for use:

1. **Unpacking:** Carefully remove the iron and all accessories from the packaging. Remove any protective films or labels from the soleplate.
2. **First Use Cleaning:** Before first use, it is recommended to iron an old piece of fabric to remove any manufacturing residues from the soleplate.
3. **Filling the Water Tank:** Ensure the iron is unplugged. Open the water tank inlet and fill the tank with tap water up to the 'MAX' mark. For areas with hard water, using distilled or demineralized water is recommended to prevent limescale buildup. Do not use perfumed water or additives.
4. **Placement:** Place the iron on a stable, heat-resistant ironing board.

5. OPERATING INSTRUCTIONS

Operating your Bosch Steam Iron for effective wrinkle removal:

1. **Power On:** Plug the iron into a suitable power outlet.
2. **Temperature Selection:** Turn the temperature control dial to select the appropriate temperature setting for your fabric type. Refer to the fabric care labels on your garments. The i-Temp Advanced technology provides an optimal setting for most ironable fabrics. For dark or delicate fabrics, consider using the AntiShine program.
3. **Heating:** The indicator light will illuminate, indicating the iron is heating. Once the desired temperature is reached, the light will turn off.
4. **Steam Ironing:** For steam ironing, ensure the water tank is filled and the temperature is set to a steam-compatible level (usually indicated on the dial). Press the steam button for continuous steam or for powerful steam shots to tackle stubborn wrinkles. The 'Steam on Demand' feature releases steam only when the button is pressed.
5. **Dry Ironing:** For dry ironing, ensure the steam function is off and the water tank is empty or the steam setting is at minimum.
6. **Spray Function:** Use the spray button to lightly moisten fabrics for easier ironing.
7. **Vertical Steaming:** The iron can be used for vertical steaming of hanging garments or curtains. Hold the iron vertically and press the steam button.
8. **After Use:** Unplug the iron and allow it to cool down completely before storing.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your steam iron:

- **Emptying the Water Tank:** After each use, empty any remaining water from the tank to prevent limescale buildup and odors.
- **Cleaning the Soleplate:** Once the iron has cooled, wipe the soleplate with a damp cloth to remove any fabric residue. For stubborn marks, use a specialized soleplate cleaner, following its instructions. Avoid abrasive cleaners or metallic scouring pads.
- **Descaling:** Regular descaling is crucial, especially in hard water areas. Refer to the full product manual for specific descaling instructions for your model. Generally, this involves filling the tank with a descaling solution (or vinegar/water mixture) and activating a self-clean function.
- **Exterior Cleaning:** Wipe the exterior of the iron with a soft, damp cloth.
- **Storage:** Store the iron upright on its heel rest in a dry, safe place once it has completely cooled. Secure the power cord.

7. TROUBLESHOOTING

If you encounter issues with your iron, consult the following common troubleshooting tips:

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to 'OFF' or minimum.	Check power connection; try a different outlet; turn temperature dial to a fabric setting.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam button not pressed.	Fill water tank; set temperature to a steam-compatible level; press the steam button.
Water drips from soleplate.	Temperature too low for steam; iron is tilted too much.	Increase temperature to steam setting; keep iron horizontal during steaming.
White flakes coming from soleplate.	Limescale buildup.	Perform a descaling procedure as per the full manual. Use distilled water.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Bosch Steam Iron TDI902836A:

- **Brand Name:** Bosch
- **Model:** TDI902836A
- **Power:** 2800 Watts
- **Continuous Steam Output:** 55 g/min
- **Soleplate Type:** CeraniumGlissée with 3-phase design
- **Special Features:** Steam Motor, i-Temp Advanced Technology, AntiShine Program, Steam on Demand, Comfort Design (Thumb rest, large buttons)
- **Color:** Multi-color
- **Style:** Modern
- **Manufacturer:** Bosch

9. WARRANTY AND SUPPORT

For information regarding the product warranty, terms, and conditions, please refer to the warranty card or documentation included with your purchase. For technical support, spare parts, or service inquiries, please visit the official Bosch website or contact their authorized service centers in your region. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01A9D1254>

More documents and user manuals: <https://manuals.plus/>