

Klip Xtreme KSD-345

Klip Xtreme KSD-345 Security Cable

USER MANUAL

Introduction

Thank you for choosing the Klip Xtreme KSD-345 Combination and Key Security Cable. This manual provides detailed instructions on how to set up, operate, and maintain your security cable to protect your valuable electronic devices. This practical and durable cable is designed to secure laptops, external hard drives, flat monitors, and other peripherals. Constructed from robust steel with a PVC coating, it offers reliable protection against theft.

Package Contents

- Klip Xtreme KSD-345 Security Cable with Combination Lock
- Two (2) Identical Keys
- Foam Spacer
- User Guide (this document)

Setup

The Klip Xtreme KSD-345 security cable is designed for easy installation. It fits any device equipped with a standard rectangular security slot, commonly found on laptops and other electronic peripherals.

Attaching the Security Cable

1. Locate the standard rectangular security slot on your device. This slot is typically found on the side or back of laptops.
2. Insert the lock head into the security slot.
3. Rotate the lock head 90 degrees clockwise to secure it in place. You should feel a click indicating it is locked.
4. Wrap the steel cable around a secure, immovable object (e.g., a heavy desk leg, a bolted-down anchor point).
5. Pass the lock head through the loop at the other end of the cable to create a secure loop.



Image: The Klip Xtreme KSD-345 security cable attached to a laptop, showing the lock mechanism, combination dials, and an accompanying key. This illustrates how the cable secures a device to a fixed object.

Setting Your Combination

The KSD-345 cable features a 4-digit resettable combination lock, offering 10,000 possible combinations.

1. Ensure the lock is unlocked (either by key or by the current combination, usually 0-0-0-0 from factory).
2. With the lock head inserted into the security slot (or in the unlocked position if not attached to a device), locate the reset button or mechanism. This is typically a small button or a rotatable cylinder on the side of the lock.
3. Using a small pointed object (like a pen tip), press and hold the reset button.
4. While holding the reset button, set your desired 4-digit combination by rotating the dials.
5. Release the reset button. Your new combination is now set.
6. **Important:** Write down your new combination and store it in a safe place. Without the combination or the key, the lock cannot be opened.

Operating the Lock

Using the Combination Lock

1. To lock: Scramble the dials after securing the lock head to your device and a fixed object.
2. To unlock: Align the dials to your preset 4-digit combination. The lock head will then be able to rotate and be removed from the security slot.

Using the Key Lock

The KSD-345 also provides a key-based locking mechanism for convenience or in case the combination is forgotten.

1. Insert one of the provided keys into the keyhole on the lock head.
2. Turn the key clockwise to lock the cable to your device.
3. Turn the key counter-clockwise to unlock the cable and remove it.
4. Remove the key after locking or unlocking.



Image: The Klip Xtreme KSD-345 security cable coiled, highlighting the durable steel cable with PVC coating and the combination lock mechanism. This view shows the full length and material of the cable.

Maintenance

To ensure the longevity and proper functioning of your Klip Xtreme KSD-345 security cable, follow these simple

maintenance guidelines:

- **Cleaning:** Wipe the cable and lock mechanism with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as they may damage the PVC coating or the lock's internal components.
- **Lubrication:** If the lock mechanism becomes stiff, apply a small amount of graphite lubricant or a silicone-based spray to the keyhole and combination dials. Do not use oil-based lubricants, as they can attract dust and debris.
- **Storage:** When not in use, store the cable in a clean, dry place away from extreme temperatures and direct sunlight. Coiling the cable neatly, as shown in the product image, can prevent tangling and damage.
- **Inspection:** Periodically inspect the cable for any signs of wear, fraying, or damage to the PVC coating. Ensure the lock head rotates smoothly and the combination dials move freely.

Troubleshooting

Problem	Possible Cause	Solution
Lock will not open with combination.	Incorrect combination entered; dials not aligned precisely; combination was reset unintentionally.	Ensure dials are perfectly aligned with your combination. Try the factory default (0-0-0-0) if you suspect an accidental reset. Use the key to unlock if available.
Key does not turn or is stuck.	Debris in keyhole; lock mechanism is stiff.	Gently try to remove any visible debris. Apply a small amount of graphite lubricant into the keyhole and try again. Do not force the key.
Lock head is stuck in device slot.	Lock not fully disengaged; slot obstruction.	Ensure the lock is fully unlocked (either by key or combination). Gently wiggle the lock head while pulling it out. Check for any foreign objects in the device's security slot.
Cannot reset combination.	Reset button not fully pressed; lock not in unlocked position.	Ensure the lock is in the unlocked position. Press the reset button firmly and hold it while setting the new combination.

Specifications

Brand	Klip Xtreme
Model Number	KSD-345
Part Number	KSD-345
Device Type	Components Other (Security Cable)
Material	Steel with Polyvinyl Chloride (PVC) coating
Lock Type	4-digit Resettable Combination & Key Lock
Combinations	10,000 programmable combinations
Dimensions (L x W x H)	200 x 1 x 2 cm (approx. 78.7 x 0.4 x 0.8 inches)
Weight	199.2 g (approx. 0.44 lbs)
Included Accessories	Cable with Lock, Set of Keys, User Guide

Warranty and Support

For warranty information or technical support regarding your Klip Xtreme KSD-345 security cable, please refer to the warranty card included with your purchase or visit the official Klip Xtreme website.

Klip Xtreme Official Website: www.klipxtreme.com

© 2024 Klip Xtreme. All rights reserved.

Documents - Klip Xtreme – KSD-345



[\[pdf\] User Manual](#)

KSD 345 DS POR klip xtreme frontend s3 amazonaws media docs |||

Bolt IV Cabo com cadeado de segurança com combinação e chave 10.000 Combinaciones posibles Chave de acesso ... como um questionamento a qualquer outro direito inerente a determinada marca. Fabricado na China. **KSD-345** ...

lang:pt score:41 filesize: 507.3 K page_count: 1 document date: 2018-11-08



[\[pdf\]](#)

KSD 345 DS SPA Amazon AWS klip xtreme frontend s3 amazonaws media docs |||

Bolt IV Cable de seguridad con combinación y llave 10.000 combinaciones posibles Llave de acceso A ... uye reclamo alguno a uno o a todos los derechos pertenecientes a tales marcas. Fabricado en China. **KSD-345** ...

lang:es score:40 filesize: 506.35 K page_count: 1 document date: 2018-11-08




[\[pdf\] Specifications Datasheet Warranty](#)

KSD 345 Data Sheet ENG 2018 08 13 V02 AA Combination cable lock with key klipxtreme Bolt IV

KlipXtreme Klip Xtreme® is a registered trademark All rights reserved other brand names and trademarks are the media

Bolt IV Combination cable lock with key 10,000 possible combinations Unique access key Galvanized ... shall not be construed as a claim to any or all rights pertaining to those brands. Made in China. **KSD-345** ...

lang:en score:35 filesize: 505.7 K page_count: 1 document date: 2018-11-13

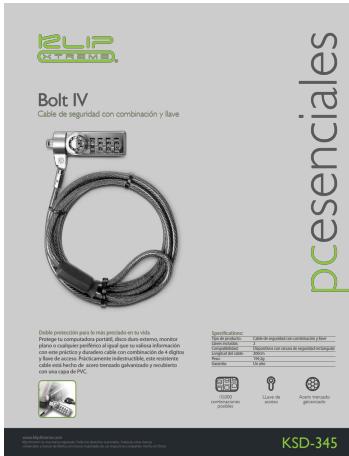

[\[pdf\]](#)

KSD345 DS SPA 9 02 2014 ACB ksd 345 spanish spec sheet klipxtreme 80 pe dl file id 1123

pcesenciales Bolt IV Cable de seguridad con combinaciⁿ y llave Doble protecciⁿ para lo ms preciado ... comerciales y marcas de fbrica son marcas registradas de sus respectivas compa^{ias}. Hecho en China. **KSD-345** ...

lang:es score:29 filesize: 129.61 K page_count: 1 document date: 2014-09-02