

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Plixio](#) /
- › [Plixio 61-Key Digital Electric Piano Keyboard Instruction Manual](#)

**Plixio 10766396**

# Plixio 61-Key Digital Electric Piano Keyboard Instruction Manual

Model: 10766396

## 1. PRODUCT OVERVIEW

The Plixio 61-Key Digital Electric Piano Keyboard is a versatile and portable musical instrument designed for beginners of all ages, including kids and adults. It serves as an excellent first instrument for learning and practice.

This keyboard offers a rich array of features to enhance your musical experience, including a wide selection of rhythms, tones, and demo songs. Its lightweight design makes it easy to transport for music lessons or on-the-go practice sessions.



Figure 1: Plixio 61-Key Digital Electric Piano Keyboard

## 2. SETUP

### 2.1 Power Supply

Your Plixio keyboard can be powered in two ways:

- **AC Adapter:** Use the included power adapter. Connect the adapter to the DC 9V port on the back of the keyboard and plug it into a standard wall outlet.
- **Batteries:** For portable use, insert 6 AA batteries (not included) into the battery compartment located on the underside of the keyboard. Ensure correct polarity.



Figure 2: Power Adapter Included

### 2.2 Connecting Accessories

The keyboard features various ports for connecting external devices:

- **Headphones:** Connect 3.5mm headphones to the 'PHONE' jack for private practice.
- **Microphone:** Connect a microphone (not included) to the 'MIC' jack to use the keyboard for karaoke or vocal practice.
- **Auxiliary Cable:** Use the included auxiliary cable to connect external audio devices (e.g., smartphone, MP3 player) and play music through the keyboard's speakers.



Figure 3: Headphone, Microphone, and Power Ports

## 2.3 Initial Power On

To turn on the keyboard, locate the red 'POWER' button on the left side of the control panel and slide it to the 'ON' position. The LED display will illuminate.

*Video 1: Official product overview demonstrating features including power-on and sound.*

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Playback

The keyboard features 61 full-sized keys, allowing for comfortable and familiar play. Simply press any key to produce a sound.

### 3.2 Tones (Instrument Sounds)

The keyboard includes 40 different tones (instrument sounds). To select a tone:

1. Press the 'TONE' button.
2. Use the numeric keypad (0-9) to enter the desired two-digit tone number (e.g., 00 for Acoustic Grand Piano, 01 for Orchestral Harp).



Figure 4: 40 Tones Selection Area



*Figure 5: Full Tone List*

### **3.3 Rhythms (Accompaniment Styles)**

The keyboard offers 100 rhythms to accompany your playing. To select a rhythm:

1. Press the 'RHYTHM' button.
2. Use the numeric keypad (0-9) to enter the desired two-digit rhythm number (e.g., 00 for Club Pop, 01 for Rock'n Roll 1).
3. Press 'START/STOP' to begin or end the rhythm.



Figure 6: 100 Rhythms Selection Area

# TONE LIST

---

T00	ACOUSTIC GRAND PIANO	T30	VIOLA
T01	ORCHESTRAL HARP	T31	CELLO
T02	CHURCH ORGAN	T33	SOPRANO SAX
T03	VIBRAPHONE	T34	TENOR SAX 1
T04	ELECTRIC GUITAR (JAZZ)	T35	BARITONE SAX
T05	VIOLIN	T36	BASSOON
T06	STRING ENSEMBLE 1	T37	PICCOLO
T07	ACOUSTIC GUITAR (STEEL)	T38	PAN FLUTE
T08	RHODES PIANO	T39	LEAD 1 (SQUARE)
T09	XYLOPHONE 1		
T10	TRUMPET		
T11	TUBA		
T12	ELECTRIC BASS (FINGER)		
T13	CLARINET		
T14	FLUTE		
T15	BANJO		
T16	OBOE		
T17	TRMBONE		
T18	ALTO SAX		
T19	HARMONICA		
T20	ACOUSTIC GUITAR (NYLON)		
T21	ELECTRIC GUITAR (CLEN) 1		
T22	DISTORTION GUITAR		
T23	ACOUSTIC BASS		
T24	ELECTRIC BASS (PICK)		
T25	FRETLESS BASS		
T26	SLAP BASS 1		
T27	SLAP BASS 2		
T28	SYNTH BASS 1		
T29	SYNTH BASS 2		

Figure 7: Full Rhythm List

## 3.4 Demo Songs

The keyboard includes 60 demo songs for listening or playing along. To play a demo song, press the 'DEMO' button

and select a song number.

### 3.5 Volume and Tempo Control

Adjust the overall volume using the 'VOLUME' buttons (+/-). The tempo of rhythms and demo songs can be adjusted using the 'TEMPO' buttons (+/-).

### 3.6 Special Effects

Utilize the 'SUSTAIN', 'VIBRATO', and 'ECHO' buttons on the control panel to add various effects to your playing.

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your Plixio keyboard, follow these maintenance guidelines:

- **Cleaning:** Wipe the keyboard surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, which may damage the finish.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Handle the keyboard with care to prevent physical damage. Avoid dropping or placing heavy objects on it.
- **Power Off:** Always turn off the keyboard when not in use. If storing for an extended period, remove the batteries to prevent leakage.

## 5. TROUBLESHOOTING

If you encounter issues with your keyboard, refer to the following common problems and solutions:

- **No Sound:**
  - Ensure the keyboard is powered on and the volume is turned up.
  - Check if headphones are plugged in; if so, unplug them to enable speaker output.
  - Verify that the power adapter is securely connected or that batteries are correctly inserted and not depleted.
- **Volume Resets to High Level:**
  - The keyboard is designed to reset to a default volume level (often 11/16) upon power cycling or after a period of inactivity. Manually adjust the volume using the '-' button after turning it on or resuming play.
- **Distorted Sound / Keys Not Responding Correctly:**
  - Ensure the power supply is stable. Try using the AC adapter if you are on batteries, or a different outlet.
  - If specific keys produce distorted sounds or no sound, gently clean around the keys. If the issue persists, it may indicate a hardware fault.
  - For persistent issues, try turning the keyboard off and on again to reset its internal system.
- **No Power:**
  - Check the power adapter connection and the wall outlet.

- If using batteries, ensure they are fresh and correctly inserted.

## 6. SPECIFICATIONS

Feature	Description
Brand	Plixio
Model Number	10766396
Number of Keys	61
Key Size	Full Size
Product Dimensions	12"D x 34"W x 3.5"H
Item Weight	6.98 pounds
Style	Digital
Power Source	AC adapter and battery (6 AA)
Tones	40
Rhythms	100
Demo Songs	60
Connectivity Technology	USB (Note: Keyboard does not include a USB port for data transfer, only for power if applicable to certain models)
Included Components	Power adapter, music note sheet music stand, auxiliary cable

## 7. WARRANTY INFORMATION

The Plixio 61-Key Digital Electric Piano Keyboard comes with a full one-year warranty. This warranty protects against any manufacturing defects or damage that may occur under normal use conditions.

# RHYTHM LIST

R00	CLUB POP	R34	CLASSIC PIANO	R68	POP ROCK
R01	ROCK'N ROLL 1	R35	CUMBIA	R69	LOVE SONG
R02	ROCK'N ROLL 2	R36	DISCO	R70	MEDIUM JAZZ
R03	WALTZ	R37	LATIN ROCK	R71	MODERN COUNTRY POP
R04	BOSSANOVA	R38	EARLY POLKA	R72	MODERN R&B
R05	SLOW ROCK	R39	POLKA POP	R73	PASO DOBLE
R06	SLOW ROCK 2	R40	TWIST	R74	SAMBA
R07	SLOW ROCK 3	R41	UNPLUGGED BAND STYLE	R75	SAMBA 2
R08	SOUL MUSIC	R42	SLOW BLUE	R76	SCHLAGER ROCK 1
R09	16 BEAT POP	R43	SLOW BLUE 2	R77	SCHLAGER ROCK 2
R10	8 BEAT POP	R44	SLOW BLUE 3	R78	TARANTELLA
R11	8 BEAT SOUL	R45	CHA CHA	R79	TIJUANA
R12	8 BEAT ROCK	R46	SATURDAY NIGHT	R80	ELECTRO POP
R13	RAP POP	R47	FOLK POP	R81	FUSION JAZZ
R14	POP ROCK	R48	POP WALTZ	R82	HIP FOXTROT
R15	60'S SOUL	R49	BRITISH POP	R83	LIMBO ROCK
R16	70'S SOUL	R50	CLUB LATIN	R84	ACOUSTIC BALLAD
R17	PASSION ROCK	R51	DISCO CHOCOLATE	R85	PIANO BALLAD
R18	TECHNO 1	R52	DISCO FOX	R86	R&B BALLAD
R19	TECHNO 2	R53	DISCO FUNK	R87	ROCK BALLAD
R20	FUNK	R54	DISCO HANDS	R88	REGGAE
R21	MAMBO	R55	DISCO LATIN	R89	SLOW & EASY
R22	MAMBO 2	R56	DISCO PARTY	R90	SWING WALTZ
R23	COUNTRY	R57	DISCO SAMBA	R91	PUB PIANO
R24	COUNTRY 2	R58	DIXIE JAZZ	R92	JAZZ BIG BAND
R25	16 BEAT SHUFFLE	R59	NEW AGE POP	R93	JAZZ CLUB
R26	8 BEAT ADRIA	R60	UK POP	R94	JAZZ WALTZ 2
R27	BIG BAND SHUFFLE	R61	USA MARCH	R95	JAZZ WALTZ
R28	BIG BAND SHUFFLE 2	R62	DANCE CLUB	R96	JAZZ ROCK
R29	BIG BAND SHUFFLE 3	R63	RUMBA	R97	SALSA
R30	FAST BAND	R64	8 BEAT MODERN	R98	ANALOG BALLAD
R31	FAST BAND 2	R65	COUNTRY BALLAD	R99	SHOW TUNE
R32	BOLERO	R66	HARD ROCK		
R33	CAT GROOVE	R67	HULLY GULLY		

Figure 8: 1 Year Warranty Included

Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or contact Plixio customer support.

## 8. SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Plixio customer service. You can typically find contact information (phone number, email, or support website) on the product packaging, in the included documentation, or by visiting the official Plixio website.

When contacting support, please have your product model number (10766396) and proof of purchase readily available to expedite the process.

