

[manuals.plus](#) /› [Panasonic](#) /› [Panasonic VIERA TH-32D300 32-inch LCD TV Instruction Manual](#)

Panasonic TH-32D300

Panasonic VIERA TH-32D300 32-inch LCD TV Instruction Manual

Model: TH-32D300 | Brand: Panasonic

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Panasonic VIERA TH-32D300 32-inch LCD TV. Please read it thoroughly before operating the television and retain it for future reference.

The Panasonic VIERA TH-32D300 offers a high-definition viewing experience and includes features such as USB HDD recording for easy program storage, and Room Jump Link compatibility, allowing you to access recorded content from other compatible devices in your home. It also supports Audio Return Channel (ARC) for enhanced audio connectivity with home theater systems.

1. SETUP

1.1 Unpacking and Checking Contents

Carefully remove the TV from its packaging. Ensure all the following accessories are present:

- Remote Control
- AAA Batteries (x2)
- Power Cord
- B-CAS Card
- TV Stand (assembly required)
- Anti-Tip Prevention Parts
- Instruction Manual (this document)
- Warranty Card

1.2 Stand Installation

Place the TV screen face down on a soft, clean cloth to prevent scratches. Attach the stand to the TV using the provided screws, following the diagrams in the quick start guide (if included). Ensure the stand is securely fastened.



Image: Front view of the Panasonic VIERA TH-32D300 television with its dimensions indicated. The TV measures 73.4 cm in width, 47.8 cm in height, and 18.4 cm in depth.

1.3 Connecting Cables

1. **Antenna Connection:** Connect your terrestrial or satellite antenna cable to the appropriate input on the back of the TV.
2. **Power Connection:** Plug the power cord into the TV's power input, then into a wall outlet.
3. **HDMI Devices:** Connect external devices like Blu-ray players or game consoles to the HDMI ports (HDMI 1, HDMI 2).
4. **USB HDD (Optional):** For recording, connect a compatible USB hard disk drive to the USB port.
5. **LAN Cable (Optional):** Connect an Ethernet cable to the LAN port for network features (if supported by your model and network setup).

1.4 Initial Setup

Upon first power-on, the TV will guide you through the initial setup process. This typically includes:

- Language selection
- Country/Region selection
- Automatic channel tuning for terrestrial and satellite broadcasts
- Network setup (if LAN is connected)

2. OPERATING INSTRUCTIONS

2.1 Basic TV Functions

- **Power On/Off:** Press the **Power** button on the remote control or the TV.
- **Channel Selection:** Use the **Channel Up/Down** buttons or the number buttons to select channels.
- **Volume Adjustment:** Use the **Volume Up/Down** buttons.
- **Input Selection:** Press the **Input** button to switch between HDMI inputs, TV tuner, etc.

2.2 Remote Control Overview

Familiarize yourself with the remote control buttons for optimal use.





Image: The remote control for the Panasonic VIERA TV. Key buttons include Power (red), Channel Up/Down, Volume Up/Down, Input, Menu, Guide, and dedicated buttons for recording and playback functions.

2.3 USB HDD Recording

To record TV programs, connect a compatible USB hard disk drive to the TV's USB port. Follow the on-screen prompts to format the drive if necessary. You can then schedule recordings using the TV's electronic program guide (EPG) or record instantly by pressing the **Record** button on the remote control.

2.4 Room Jump Link

The Room Jump Link feature allows you to access and play content recorded on compatible Panasonic recorders (e.g., DIGA series) located in other rooms within your home network. Ensure both your TV and the recorder are connected to the same home network.

2.5 ARC (Audio Return Channel)

ARC simplifies audio connections between your TV and a compatible home theater system or soundbar. Connect an HDMI cable from the TV's ARC-enabled HDMI port to the ARC-enabled HDMI input on your audio system. This allows audio from the TV to be sent back to the audio system without needing a separate optical cable.

3. MAINTENANCE

3.1 Cleaning the TV Screen and Body

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to gently wipe the screen and TV body.
- For stubborn marks, slightly dampen the cloth with water or a mild, non-abrasive TV screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals, abrasive pads, or solvents, as these can damage the TV's surface.

3.2 Remote Control Care

- Keep the remote control dry and clean.
- Replace batteries when the remote's response becomes sluggish. Use only the specified battery type (AAA).
- Do not mix old and new batteries, or different types of batteries.

4. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions before contacting support.

Problem	Possible Cause / Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Ensure the wall outlet is functional.
No picture, but sound is present	Check the input source. Ensure the antenna or HDMI cable is properly connected. Try another input source.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. If using external audio, check its connections and volume.
Remote control not working	Check and replace the batteries. Ensure there are no obstructions between the remote and the TV's remote sensor.
Cannot record to USB HDD	Ensure the USB HDD is properly connected and formatted for the TV. Check if the HDD has sufficient free space.

5. SPECIFICATIONS

Feature	Specification
Model Number	TH-32D300
Screen Size	32 inches
Display Type	LCD
Display Resolution	1366 x 768 (HD)
Aspect Ratio	16:9
Tuner Type	Terrestrial Digital x1 / BS Digital x1 / CS Digital x1
HDMI Ports	2
USB Ports	1
LAN Ports	1
Audio Output	10 W
Power Consumption	63 W

Feature	Specification
Annual Power Consumption	42 kWh/year
Product Dimensions (W x H x D)	73.4 x 47.8 x 18.4 cm
Product Weight	6 kg
Color	Black
Release Year	2016
Included Functions	External HDD Recording, Wired LAN
Internet Services	Activila
Viewing Angle	178 degrees
Speaker Features	Full-range speakers (x2)
Wall Mount Compatible	Yes

6. WARRANTY AND SUPPORT

6.1 Product Warranty

Your Panasonic VIERA TH-32D300 TV comes with a manufacturer's warranty. Please refer to the included warranty card for specific terms, conditions, and duration of coverage. Keep your proof of purchase in a safe place, as it may be required for warranty claims.

6.2 Customer Support

For technical assistance, service, or further inquiries regarding your television, please contact Panasonic customer support. Contact information can typically be found on the Panasonic official website or in the warranty documentation.