

[Manuals.plus](#) /

> [WENKO](#) /

> WENKO Telescopic Atlas Shoe Rack (Model 6200070100) - Instruction Manual

## WENKO 6200070100

# WENKO Telescopic Atlas Shoe Rack

MODEL: 6200070100

## Introduction

---

Thank you for choosing the WENKO Telescopic Atlas Shoe Rack. This innovative, space-saving storage solution is designed to organize your footwear efficiently without occupying valuable floor space. Its tension-mounted design allows for flexible installation between your floor and ceiling, providing adjustable storage for various shoe sizes. Constructed from powder-coated metal and high-quality plastic, it offers a sturdy and durable solution for your home.



Image: The WENKO Telescopic Atlas Shoe Rack, showcasing its full height and capacity for storing shoes.

## Safety Instructions

---

- Ensure the installation surface (floor and ceiling) is stable and capable of supporting the rack's tension and weight of stored shoes.
- Do not overload the rack. Distribute weight evenly across the shoe holders.
- Verify that the rack is securely tensioned between the floor and ceiling before placing any items on it.
- Keep small parts away from children during assembly to prevent choking hazards.
- Avoid placing the rack in high-traffic areas where it could be accidentally dislodged.

## Package Contents

---

Please check that all components are present before beginning assembly:

- Telescopic metal poles (main vertical supports)
- Adjustable plastic joints/connectors
- Shoe holders (clips)
- Top and bottom tension caps/feet

- Assembly instructions (this manual)

## Assembly Instructions

The WENKO Telescopic Atlas Shoe Rack is designed for easy assembly without the need for additional tools. Follow these steps for a secure installation:

1. **Prepare the Poles:** Connect the telescopic metal poles to achieve the desired height. The poles are adjustable to fit ceiling heights between approximately 39.37 inches (100 cm) and 118.11 inches (300 cm).
2. **Attach Tension Caps:** Securely attach the top and bottom tension caps to the ends of the assembled poles. These caps provide stability and protect your floor and ceiling surfaces.
3. **Position the Rack:** Place the assembled pole vertically in your desired location, ensuring it is aligned between the floor and ceiling.
4. **Tension the Pole:** Extend the telescopic pole by twisting or pulling the sections until it creates firm tension between the floor and ceiling. Ensure it is stable and does not wobble.
5. **Attach Shoe Holders:** Once the main pole is secure, attach the plastic shoe holders to the pole at your preferred heights. The holders can be moved up and down to accommodate different shoe sizes and types. Each holder is designed to securely grip a pair of shoes.



Image: Detail of the easy clamping mechanism for floor-to-ceiling installation.



Image: Easy setup without tools, showing the connection of pole segments.



Image: Detail of a shoe holder for individual shoes.



Image: Detail of the adjustable tension rod for height customization.

## Assembly Video

Your browser does not support the video tag.

Video: Official WENKO demonstration of the shoe rack organizer, showing its assembly and use. This video illustrates the space-saving design and how shoes are placed on the rack.

## Operating Instructions

---

Using your WENKO Telescopic Atlas Shoe Rack is straightforward:

- **Placing Shoes:** Gently slide the heel of your shoe into the opening of a shoe holder. The design allows shoes to hang vertically, maximizing space.
- **Adjusting Holders:** To adjust the height of a shoe holder, simply slide it up or down the main pole. This flexibility allows you to customize the rack for different types of footwear, from flats to boots.
- **Capacity:** The rack can hold up to 42 pairs of shoes, depending on their size and how they are arranged.



Image: The shoe rack displaying its capacity, holding multiple pairs of shoes.

## Maintenance

---

To ensure the longevity and appearance of your shoe rack:

- **Cleaning:** Wipe down the metal poles and plastic components with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Regular Checks:** Periodically check the tension of the pole to ensure it remains securely fixed between the floor and ceiling. Re-tension if necessary.
- **Dusting:** Dust the rack regularly to prevent buildup.

## Troubleshooting

---

- **Rack is unstable:** Ensure the telescopic pole is fully extended and properly tensioned between the floor and ceiling. Check that the top and bottom caps are firmly pressed against the surfaces.
- **Shoes do not fit:** Adjust the height of the individual shoe holders to accommodate taller shoes or boots. The holders can be spaced further apart as needed.
- **Difficulty attaching shoe holders:** Ensure the plastic clips are aligned correctly with the pole. Apply

firm, even pressure to snap them into place.

## Specifications

---

Feature	Detail
Brand	WENKO
Model Number	6200070100
Dimensions (D x W x H)	3.35" x 26.97" x 39.37" (Adjustable height up to 118.11")
Material	Powder-coated Metal, High-quality Plastic
Color	White
Installation Type	Tension Mounted (Floor to Ceiling)
Assembly Required	Yes (No tools required)
Max Capacity	Up to 42 pairs of shoes
Weight	3600 Grams (approx. 7.9 lbs)

## Warranty and Support

---

For warranty information or product support, please refer to the retailer where you purchased this product or visit the official WENKO website. Keep your purchase receipt as proof of purchase.