

[Manuals.plus](#) /

› [Salter](#) /

› Salter 60 Minute Mechanical Kitchen Timer User Manual

Salter 338 SSBKXR15

Salter 60 Minute Mechanical Kitchen Timer User Manual

Model: 338 SSBKXR15

PRODUCT OVERVIEW

The Salter 60 Minute Mechanical Kitchen Timer is a battery-free analog timer designed for precise timing in the kitchen. Featuring a premium brushed stainless steel design, it offers a responsive and ergonomic dial for easy operation and a powerful alarm to indicate when the set time has elapsed. This timer is ideal for various cooking tasks, ensuring your meals are prepared perfectly.



Image: Front angled view of the Salter 60 Minute Mechanical Kitchen Timer, showcasing its stainless steel body and black dial.

KEY FEATURES

- **Easy Cooking:** Designed for precise cooking times, suitable for various kitchen tasks.
- **Ergonomic Design:** Features a comfortable, easy-grip, soft-touch rubber rotating dial with clear, clock-style numbers for precise duration setting.
- **60-Minute Capacity:** Capable of timing durations up to one hour, useful for cooking, study, or games.
- **Audible Alarm:** An alarm sounds when the set time is over, indicating that your task is complete.
- **Durable Construction:** Finished with an attractive brushed stainless steel design for enhanced durability and a modern aesthetic.

SETUP

The Salter Mechanical Kitchen Timer requires no batteries or complex setup. It is ready for use directly out of the box.

1. **Unpack:** Carefully remove the timer from its packaging.
2. **Placement:** Place the timer on a stable, flat surface in your kitchen or desired location.



Image: The Salter timer placed on a clean white kitchen counter, ready for use.

OPERATING INSTRUCTIONS

To ensure proper function and accurate timing, follow these steps:

1. **Wind Up Fully:** Before setting your desired time, turn the dial clockwise all the way to the 60-minute mark. This action winds the internal mechanism, ensuring the alarm will sound.
2. **Set Desired Time:** After winding, turn the dial counter-clockwise to your desired time setting. For example, if you need 10 minutes, turn the dial counter-clockwise until the indicator aligns with the '10' mark.
3. **Start Timing:** The timer will begin counting down immediately after you set the desired time.
4. **Alarm:** Once the set time has elapsed, the timer will emit an audible alarm to notify you.

Note: Always wind the timer fully to 60 minutes before setting your desired time to activate the alarm mechanism correctly.



Image: A user's hands demonstrating the process of winding and setting the timer dial.

MAINTENANCE AND CARE

To maintain the performance and appearance of your Salter Mechanical Kitchen Timer, follow these simple care instructions:

- **Cleaning:** Wipe the timer with a soft, damp cloth. Do not immerse the timer in water or use abrasive cleaners, as this can damage the internal mechanism and the stainless steel finish.
- **Storage:** Store the timer in a dry place when not in use. Avoid extreme temperatures.
- **Handling:** Handle the timer with care. Avoid dropping it or subjecting it to strong impacts, which could affect its accuracy or cause damage.



Image: The timer neatly stored in a kitchen drawer alongside other utensils, demonstrating proper storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not ring or rings faintly.	The timer was not fully wound to 60 minutes before setting the desired time.	Always turn the dial clockwise to the 60-minute mark first, then turn counter-clockwise to set your desired time. This ensures the alarm mechanism is properly engaged.
Timer stops before reaching zero.	Insufficient winding or internal mechanism issue.	Ensure the timer is fully wound to 60 minutes before setting. If the problem persists, the internal mechanism may be faulty.

Problem	Possible Cause	Solution
Inaccurate timing.	Damage from dropping or rough handling.	Handle the timer with care. If accuracy issues arise after impact, the internal components may be damaged.

SPECIFICATIONS

Feature	Detail
Model Number	338 SSBKXR15
Color	Black / Silver
Brand	Salter
Material	Plastic (dial), Stainless Steel (body)
Product Dimensions (D x W x H)	3.74"D x 3.9"W x 2.36"H (approx. 9.5cm D x 9.9cm W x 6cm H)
Item Weight	0.17 Kilograms (approx. 6 ounces)
Timer Capacity	60 Minutes
Power Source	Mechanical (Battery-Free)



Image: The timer shown with its approximate dimensions (9cm width, 6cm height) for reference.

WARRANTY AND SUPPORT

The Salter 60 Minute Mechanical Kitchen Timer comes with a **2-Year Warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or further inquiries, please contact Salter customer service through their official website or the retailer from whom the product was purchased. Please retain your proof of purchase for warranty validation.

© 2024 Salter. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01AFNR658>

More documents and user manuals: <https://manuals.plus/>