

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Briggs & Stratton](#) /
- › [Briggs & Stratton 809878 Air Cleaner Clamp Instruction Manual](#)

Briggs & Stratton 809878

Briggs & Stratton 809878 Air Cleaner Clamp Instruction Manual

Model: 809878

INTRODUCTION

This manual provides essential information for the proper installation, maintenance, and care of your Briggs & Stratton 809878 Air Cleaner Clamp. Please read these instructions carefully before use to ensure optimal performance and longevity of the part.

PRODUCT OVERVIEW

The Briggs & Stratton 809878 is an Original Equipment Manufacturer (O.E.M.) authorized replacement part designed to secure the air cleaner assembly on various Briggs & Stratton engine models. This clamp ensures a tight seal, preventing unfiltered air from entering the engine and protecting internal components from dust and debris.

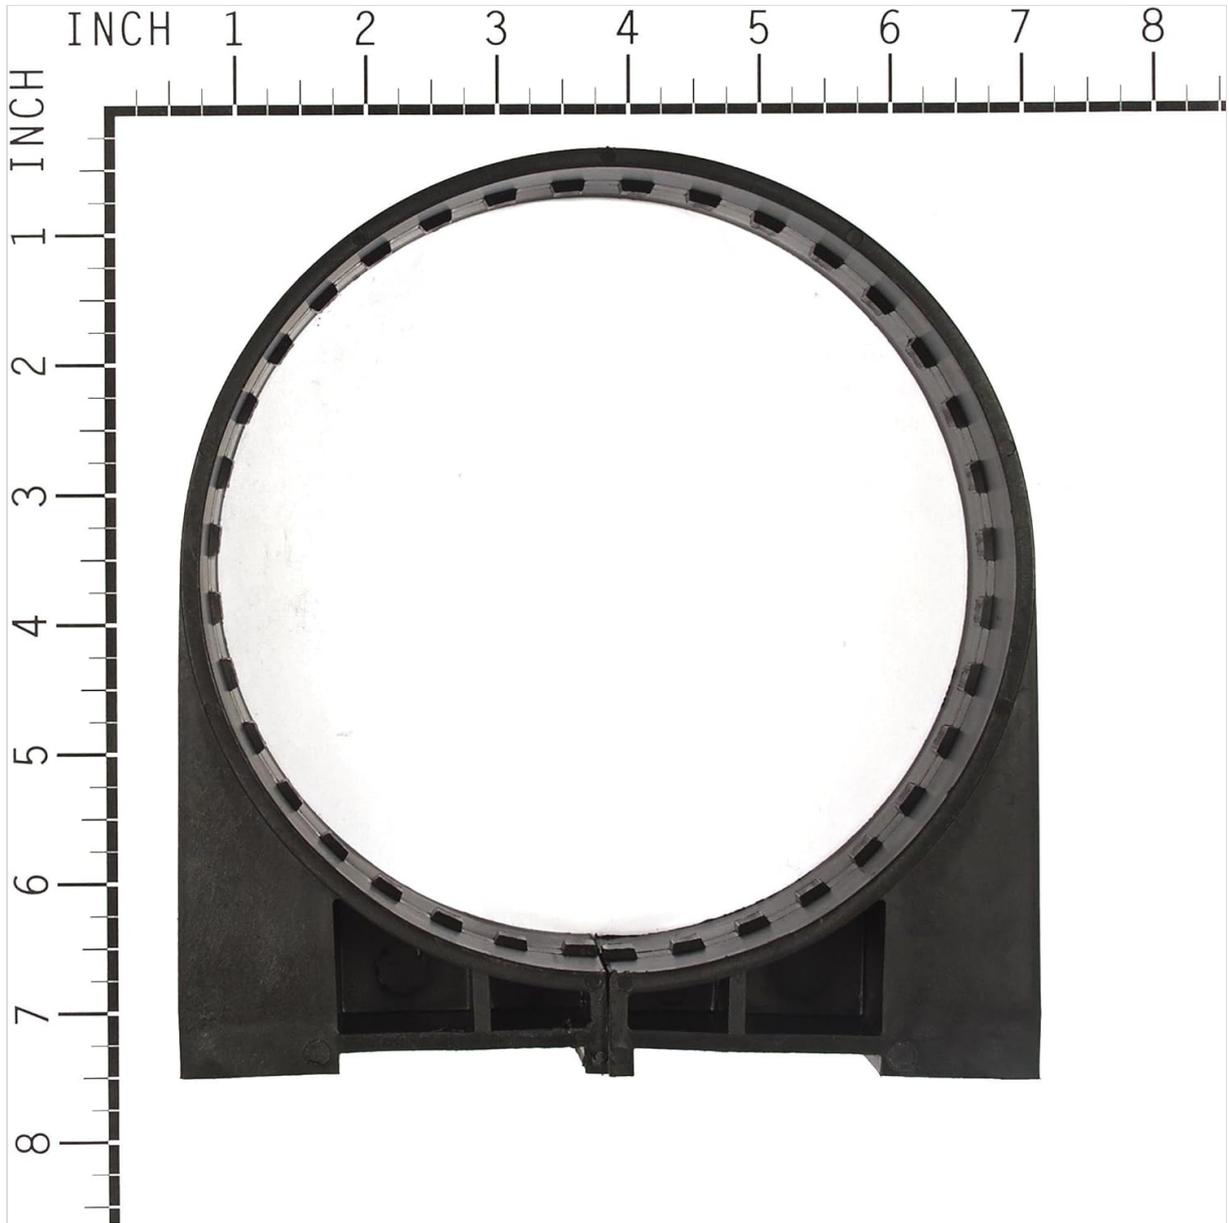


Image: The Briggs & Stratton 809878 Air Cleaner Clamp, showing its circular design and securing mechanism.

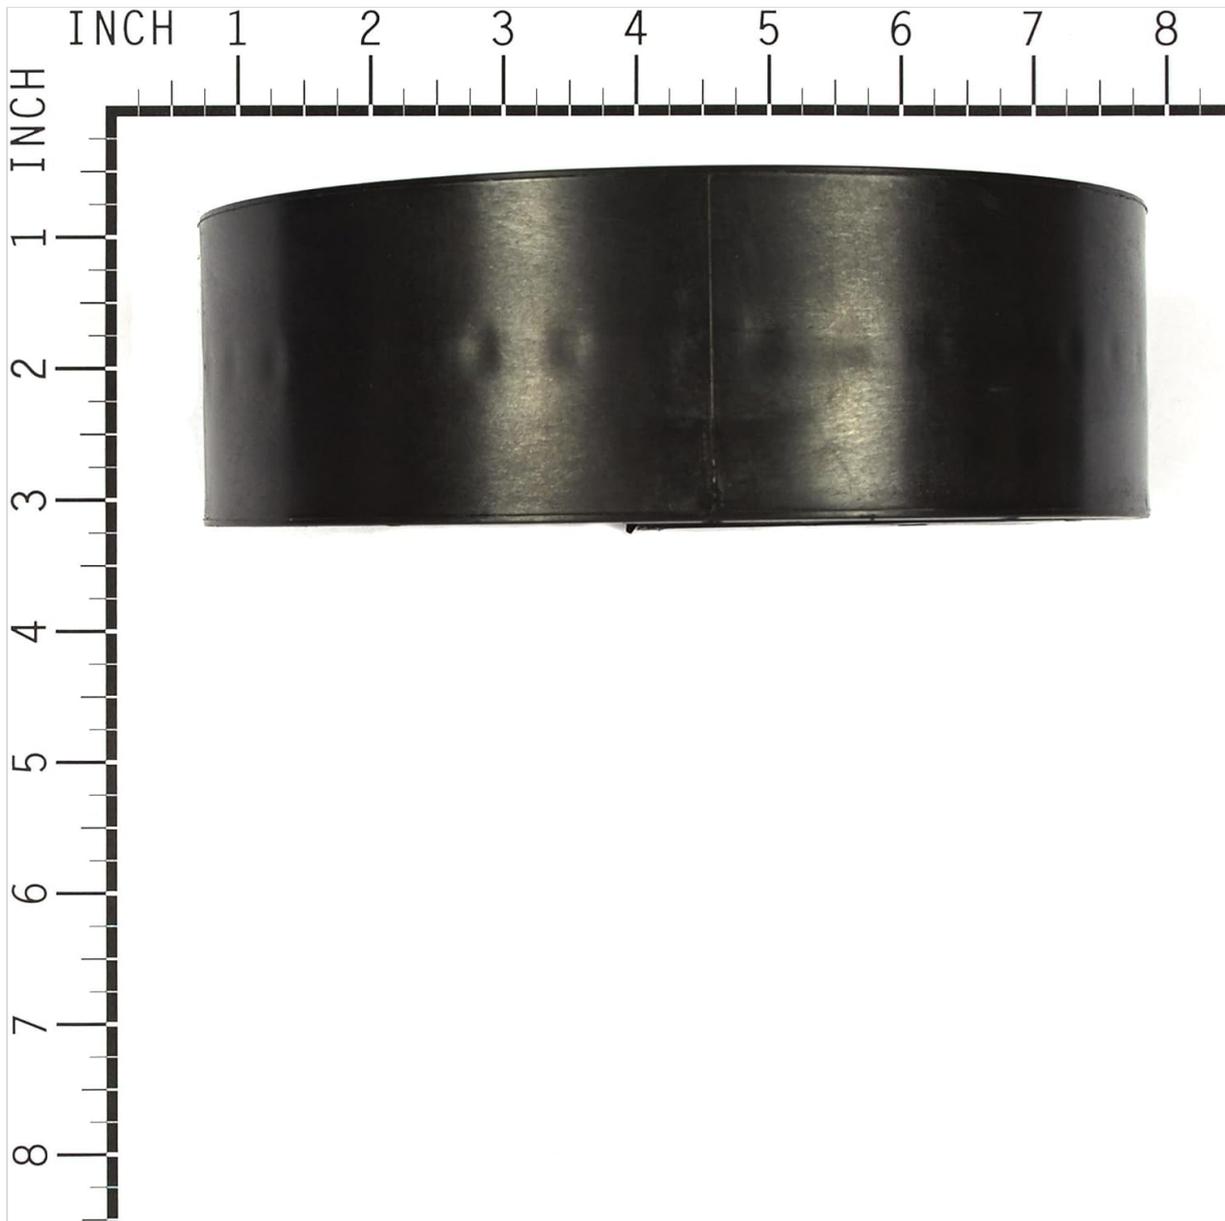


Image: Side view of the Briggs & Stratton 809878 Air Cleaner Clamp, illustrating its profile and material thickness.

INSTALLATION INSTRUCTIONS

Safety Precautions

- Ensure the engine is turned off and cool before beginning any installation or maintenance.
- Wear appropriate safety gear, such as gloves and eye protection.

Installation Steps

1. **Locate the Air Cleaner Assembly:** Identify the air cleaner housing on your Briggs & Stratton engine.
2. **Remove Old Clamp (if applicable):** If replacing an existing clamp, carefully unfasten and remove the old clamp. Note its orientation.
3. **Position the New Clamp:** Place the Briggs & Stratton 809878 Air Cleaner Clamp around the air cleaner housing and its mating component (e.g., carburetor intake). Ensure it is seated correctly and evenly.
4. **Secure the Clamp:** Fasten the clamp securely. Ensure a snug fit that holds the air cleaner assembly firmly in place without overtightening, which could damage components.
5. **Verify Seal:** After installation, visually inspect the air cleaner assembly to confirm a proper seal.

MAINTENANCE

Regular inspection of the air cleaner clamp is crucial for engine health. Periodically check the clamp for:

- **Tightness:** Ensure the clamp remains securely fastened. Vibrations during engine operation can sometimes loosen components.
- **Damage:** Look for cracks, deformities, or signs of wear that could compromise its sealing ability.
- **Corrosion:** Inspect for any rust or corrosion, especially if the engine operates in damp environments.

Replace the clamp immediately if any damage or significant wear is observed to maintain proper air filtration.

TROUBLESHOOTING

Air Cleaner Assembly Not Sealing Properly

- **Check Clamp Position:** Ensure the clamp is correctly seated around both components of the air cleaner assembly.
- **Inspect for Obstructions:** Verify there are no foreign objects or debris preventing a tight seal.
- **Examine Clamp for Damage:** A damaged or deformed clamp will not provide an adequate seal. Replace if necessary.
- **Verify Component Compatibility:** Ensure the air cleaner clamp is the correct part for your specific Briggs & Stratton engine model.

SPECIFICATIONS

Feature	Detail
Part Number	809878
Product Dimensions	1 x 1 x 1 inches
Item Weight	9.6 ounces
Manufacturer	Briggs and Stratton
Origin	Belgium

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Briggs & Stratton 809878 Air Cleaner Clamp, please refer to the documentation provided with your engine or contact Briggs & Stratton customer service directly. You can find contact details on the official Briggs & Stratton website or through authorized service centers.