

manuals.plus /

› [Schleich](#) /

› [Schleich Horse Club Big Horse Show Playset Instruction Manual](#)

Schleich 42338

Schleich Horse Club Big Horse Show Playset Instruction Manual

Model: 42338

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of the Schleich Horse Club Big Horse Show Playset. This 59-piece playset is designed for imaginative play, allowing children to create their own horse show scenarios. The set features detailed components and adjustable obstacles to enhance play experiences.

2. PACKAGE CONTENTS

Verify that all the following components are included in your package:

- 1 x podium with roof
- 1 x gate
- 21 x fence sections
- 1 x Trakehner stallion figure
- 1 x red show jumping rider figure
- 1 x show jumping saddle
- 2 x bridle
- 1 x tournament rider figure
- 1 x tournament saddle
- 1 x blue jump obstacle
- 1 x red jump obstacle
- 1 x green jump obstacle
- 1 x jump wall obstacle
- 1 x jump water trench with flowers
- 4 x large flags
- 2 x small flags
- 2 x boxtree decorations
- 1 x trophy
- 1 x silver medal
- 1 x yellow victory ribbon
- 1 x red victory ribbon

- 1 x purple victory ribbon
- 1 x victory wreath
- 2 x stickers
- 7 x jump numbers

3. ASSEMBLY INSTRUCTIONS

The Schleich Horse Club Big Horse Show Playset is designed for straightforward assembly. Follow these general guidelines to set up your playset:

1. **Unpack Components:** Carefully remove all pieces from the packaging. It is recommended to lay them out on a clean, flat surface.
2. **Assemble Fences:** Connect the 21 fence sections to create the perimeter of the horse show arena. The fence pieces are designed to interlock.
3. **Set Up Podium and Gate:** Position the podium with its roof and the main gate within the arena as desired. These pieces typically snap together or stand independently.
4. **Arrange Jumps and Obstacles:** Place the various jump obstacles (blue, red, green jumps, jump wall, water trench) around the arena. Many of these obstacles feature adjustable elements, allowing for different course configurations.
5. **Add Decorations:** Place the boxtrees, flags, and apply stickers as desired to enhance the realism of the horse show.
6. **Prepare Figures:** Attach the saddles and bridles to the horse figures. Position the rider figures on the horses.

Refer to the image below for visual guidance on the assembled playset.



Image 3.1: Overview of the assembled Schleich Horse Club Big Horse Show Playset.

4. OPERATING INSTRUCTIONS

The Schleich Horse Club Big Horse Show Playset is designed to encourage creative and imaginative play. Here are some ways to interact with the playset:

- **Course Design:** Utilize the various fence sections and jump obstacles to design different show jumping courses. The obstacles can be adjusted in height and configuration to create varied challenges.
- **Horse and Rider Interaction:** Use the horse and rider figures to simulate a horse show. Practice jumping over obstacles, performing dressage routines, or competing for the trophy and ribbons.
- **Storytelling:** Develop narratives around the horse show, including preparing the horses, competing, and celebrating victories on the podium.
- **Expand Play:** This playset can be integrated with other Schleich Horse Club figures and playsets to create a larger, more comprehensive play world.



Image 4.1: Detailed view of the playset during simulated play.

5. MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your Schleich Horse Club Big Horse Show Playset, follow these care instructions:

- **Cleaning:** Wipe all figures and playset components with a damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with a clean damp cloth and air drying. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the playset in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation and color fading.
- **Handling:** Handle figures and small parts with care to prevent breakage.

6. SAFETY INFORMATION

This playset is recommended for children aged **5 to 12 years**. It contains small parts which may pose a choking hazard for children under 3 years of age. Adult supervision is recommended during play.

7. SPECIFICATIONS

Product Dimensions	15.35 x 6.5 x 14.76 inches
Item Weight	5.72 pounds
Model Number	42338
Manufacturer	Schleich
Recommended Age	5 - 12 years
Number of Pieces	59

8. WARRANTY AND SUPPORT

For any questions regarding this product, including assembly assistance, missing parts, or general inquiries, please contact Schleich customer support. Refer to the official Schleich website for the most current contact information and warranty details.

[Visit Schleich Official Website](#)

