

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MoKo](#) /

> [MoKo Bluetooth Wireless Keyboard for Microsoft Surface Pro Series Instruction Manual](#)

MoKo LYSB01AJOX7LU-ELECTRNCS

MoKo Bluetooth Wireless Keyboard for Microsoft Surface Pro Series Instruction Manual

Model: LYSB01AJOX7LU-ELECTRNCS

1. OVERVIEW

The MoKo Bluetooth Wireless Keyboard is designed to enhance your Microsoft Surface Pro experience, offering a comfortable typing solution with advanced features. This keyboard provides a seamless wireless connection, a practical trackpad, and customizable 7-color backlighting, making it suitable for various environments and tasks.



ATTENTION



- ✔ Surface Pro 7 Plus (2021) /
- ✔ Surface Pro 7 (2019)/
- ✔ Surface Pro 6 /
- ✔ Surface Pro 5th Gen (2017) /
- ✔ Surface Pro 4/
- ✔ Surface Pro 3 /
- ✔ Surface Pro LTE



- ✘ Surface Go (2018)
- ✘ Surface Go 2

Image: MoKo Bluetooth Wireless Keyboard attached to a Microsoft Surface Pro tablet, showcasing its sleek design and integration.

2. PACKAGE CONTENTS

Please check the package for the following items:

- MoKo Bluetooth Wireless Keyboard
- USB Charging Cable
- User Manual (this document)

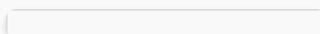


Image: A USB Type-C charging cable, included for recharging the keyboard's internal battery.

3. COMPATIBILITY


This keyboard is designed for specific Microsoft Surface Pro models. Please verify your device model before use.

- Microsoft Surface Pro 7 Plus (2021)
- Microsoft Surface Pro 7 (2019)
- Microsoft Surface Pro 6
- Microsoft Surface Pro 5 (Pro 2017)
- Microsoft Surface Pro 4
- Microsoft Surface Pro 3


Note: This keyboard is NOT compatible with Surface Go (2018) or Surface Go 2.




Lightweight
& Slim

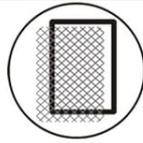

Tablet Screen
Protection

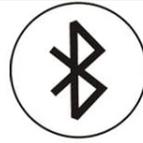

Bluetooth Wireless
Connection

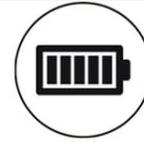

Large Capacity
Battery



Image: A visual guide indicating compatible Microsoft Surface Pro models (Pro 7 Plus, Pro 7, Pro 6, Pro 5, Pro 4, Pro 3, Pro LTE) and incompatible models (Surface Go, Surface Go 2).

4. SETUP

4.1. Charging the Keyboard

Before initial use, fully charge the keyboard. Connect the provided USB charging cable to the keyboard's charging port and a USB power source. The charging indicator light will show the charging status.

- Battery Capacity: 750mAh (rechargeable lithium battery)
- Charging Time: Approximately 2-3 hours
- Working Time (backlight off): Up to 180 hours
- Working Time (backlight on): Up to 5 hours
- Standby Time: Up to 180 days

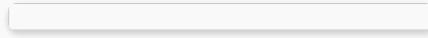


Image: An illustration depicting the keyboard's battery and charging specifications, including charge time and standby duration.

4.2. Bluetooth Pairing

Follow these steps to pair your keyboard with your Microsoft Surface Pro:

1. Turn on the keyboard by sliding the power switch to the 'ON' position. The indicator light will flash.
2. Press the **Fn + C** keys simultaneously to activate Bluetooth pairing mode. The Bluetooth indicator light will start blinking rapidly.
3. On your Microsoft Surface Pro, go to **Settings > Devices > Bluetooth & other devices**.
4. Ensure Bluetooth is enabled and select **Add Bluetooth or other device**.
5. Choose **Bluetooth** from the options.
6. Select the keyboard (usually named "Bluetooth Keyboard" or similar) from the list of available devices.
7. Follow any on-screen prompts to complete the pairing process. Once paired, the Bluetooth indicator light on the keyboard will stop blinking.



CUSTOMIZED FOR SURFACE PRO 7+ / 7 / 6 / 5 (PRO 2017) / 4 / 3 / LTE

Easily clicks into place, tablet turned into notebook in an instant, but bring more superior typing experience.

Image: A diagram illustrating the Bluetooth wireless connection process, showing the keyboard both attached and detached from the tablet, with a note on connection distance.

5. OPERATING INSTRUCTIONS

5.1. Backlight Control

The keyboard features a 7-color LED backlight with adjustable brightness levels.

- To turn the backlight ON/OFF: Press the **Light Bulb** key.
- To change backlight color: Press **Alt + Light Bulb** key. Cycle through 7 different colors.
- To adjust backlight brightness: Press **Fn + Alt** keys. This will cycle through different brightness modes.



BLUETOOTH WIRELESS CONNECTION

In-built advanced bluetooth chip gurantees fast, no-delay and stable connection. Attach or detach to connect your tablet is both available, choose as you like.

Attached



Detached



■ Note: The valid connection distance is within 10m.

Image: Instructions on how to change the backlight color by pressing Alt + Light Bulb key.



Image: Instructions on how to adjust backlight brightness by pressing Fn + Alt keys.

5.2. Using the Trackpad

The integrated trackpad provides precise cursor control, similar to a mouse. It supports multi-touch gestures for enhanced navigation.

- To activate/deactivate the trackpad: Press **Fn + Trackpad icon** key.
- Left Click: Press the left side of the trackpad or tap once.
- Right Click: Press the right side of the trackpad or tap with two fingers.
- Scrolling: Use two fingers to scroll up or down.

DUAL-ANGLE ADJUSTMENT

Attach to provide two different typing angles to meet your different needs.



Image: An illustration highlighting the responsive trackpad with left and right click areas, and the scissor switch mechanism of the keys for comfortable typing.

5.3. Dual-Angle Adjustment

The keyboard features a magnetic attachment stripe that allows for two different typing angles, providing ergonomic comfort for various uses.

SEVEN-COLOR BACKLIT KEYBOARD

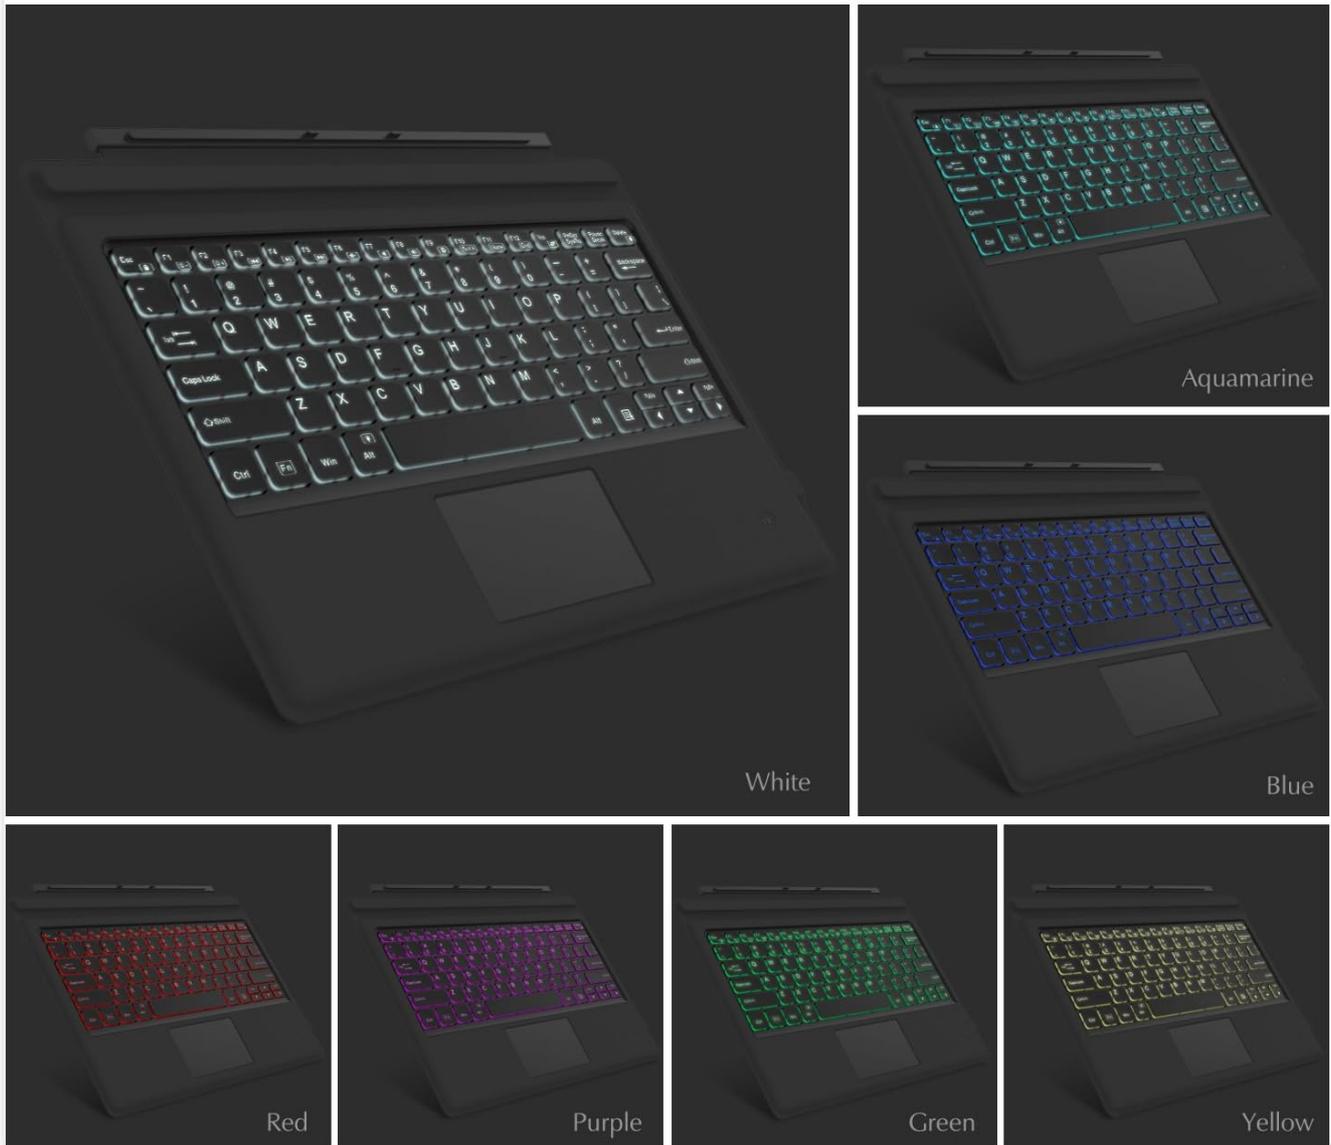


Image: A visual representation of the keyboard's dual-angle adjustment, showing two distinct positions for typing comfort.

6. MAINTENANCE

- Keep the keyboard away from liquids and extreme temperatures.
- Clean the keyboard with a soft, damp cloth. Avoid harsh chemicals.
- Do not attempt to disassemble the keyboard, as this may void the warranty.
- Store in a dry place when not in use for extended periods.

7. TROUBLESHOOTING

7.1. Keyboard Not Connecting via Bluetooth

- Ensure the keyboard is fully charged.
- Make sure the keyboard's power switch is ON.
- Verify that Bluetooth is enabled on your Surface Pro.

- Re-enter pairing mode on the keyboard (Fn + C) and attempt to pair again from your Surface Pro's Bluetooth settings.
- If previously paired, try 'forgetting' the device on your Surface Pro and then re-pairing.

7.2. Backlight Not Working

- Ensure the keyboard is sufficiently charged.
- Press the Light Bulb key to toggle the backlight.
- Adjust brightness using Fn + Alt keys.

7.3. Trackpad Not Responding

- Ensure the trackpad is activated by pressing Fn + Trackpad icon key.
- Clean the trackpad surface to remove any dirt or debris.
- Restart the keyboard and your Surface Pro.

8. SPECIFICATIONS

Feature	Detail
Brand	MoKo
Model Number	LYSB01AJOX7LU-ELECTRNCS
Color	Grey
Connectivity Technology	Bluetooth
Keyboard Description	Ergonomic, QWERTY US International
Special Features	Wireless, Magnetic, Backlit (7 Colors), Trackpad
Power Source	Battery (Rechargeable Lithium)
Battery Capacity	750mAh
Battery Voltage	3 Volts
Product Dimensions	29.49 x 21.69 x 0.58 cm (11.6 x 8.54 x 0.23 inches)
Product Weight	500 g
Compatible Devices	Microsoft Surface Pro 7 Plus (2021) / Pro 7 (2019) / Pro 6 / Surface Pro 5 (Pro 2017) / Pro 4 / Pro 3
Operating System	Windows

COMFORTABLE TYPING AND PRECISE CONTROL



Image: A diagram illustrating the precise dimensions of the MoKo Bluetooth Wireless Keyboard.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the product packaging or contact MoKo customer service directly. Keep your purchase receipt for warranty claims.