

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [HORI](#) /
- > [HORI Fighting Stick Mini for Nintendo Switch Instruction Manual](#)

HORI RM

HORI Fighting Stick Mini for Nintendo Switch Instruction Manual

Model: RM

INTRODUCTION

This manual provides instructions for the HORI Fighting Stick Mini, an officially licensed arcade-style controller for the Nintendo Switch. Please read this manual thoroughly before use to ensure proper operation and to maximize your gaming experience.

PACKAGE CONTENTS

- HORI Fighting Stick Mini (Model: RM)
- Instruction Manual

PRODUCT FEATURES

- **Compact and Portable Design:** Approximately 8 inches by 6 inches, designed for easy storage and transport.
- **Full 8-Button Layout:** Standard arcade button configuration.
- **Micro Switch Activated Joystick:** Provides precise and responsive control.
- **Comfortable Ergonomics:** Ample wrist rest area for extended play sessions.
- **Stable Operation:** Rubberized feet ensure firm grip on smooth surfaces.
- **Wired Connectivity:** Features a long USB cable for reliable connection.
- **Dedicated Buttons:** Includes Home, Capture, and Volume Control buttons.
- **Officially Licensed:** Approved by Nintendo for use with the Nintendo Switch.

SETUP

1. **Connect to Nintendo Switch:** Plug the USB cable of the Fighting Stick Mini into an available USB port on the Nintendo Switch dock.

2. **Power On:** Ensure your Nintendo Switch console is powered on and docked.
3. **Controller Recognition:** The Nintendo Switch should automatically recognize the Fighting Stick Mini as a wired controller.
4. **Game Selection:** Launch your desired arcade or fighting game.

Note: This controller is designed for use with the Nintendo Switch when docked. It connects via USB-A.

OPERATING INSTRUCTIONS

Basic Controls

The HORI Fighting Stick Mini features a standard arcade layout with a joystick for directional input and eight action buttons. Additionally, it includes Home, Capture, and Volume Control buttons for system functions.

Turbo Feature

The Turbo feature allows a single button press to be repeated continuously as long as the button is held down. This can be useful in certain games for rapid input.

1. **To Program Turbo:** Press and hold the **Turbo button** (located on the top panel of the stick). While holding the Turbo button, press the desired action button (e.g., B button) that you wish to apply the Turbo function to. The green indicator light on the stick will flash when Turbo is active for that button.
2. **To Use Turbo:** Once programmed, simply hold down the assigned action button, and the input will be repeated automatically.
3. **To Deactivate Turbo:** To return a button to normal single-press functionality, press and hold the **Turbo button** and the **Screenshot button** simultaneously. The indicator light will turn off, and the button will revert to its standard operation.

Product Overview



Image: The HORI Fighting Stick Mini, illustrating its compact design, joystick, and eight action buttons. The top panel includes additional function buttons.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the surface of the Fighting Stick Mini. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Do not sharply bend or pull the USB cable. Store it neatly to prevent damage.

TROUBLESHOOTING

Controller Not Responding

- **Check Connection:** Ensure the USB cable is securely plugged into both the Fighting Stick Mini and the Nintendo Switch dock.
- **Restart Console:** Try restarting your Nintendo Switch console.
- **Test USB Port:** If possible, try connecting the controller to a different USB port on the dock or another compatible device (e.g., PC) to rule out a port issue.

Buttons or Joystick Not Working Correctly

- **Check Turbo Setting:** If a button is not responding as expected, ensure the Turbo feature is not accidentally activated for that button (refer to "To Deactivate Turbo" in Operating Instructions).
- **Game Compatibility:** Verify that the game you are playing supports arcade stick input.

Intermittent Disconnections

- **Cable Integrity:** Inspect the USB cable for any visible damage. A damaged cable may cause intermittent connections.
- **Avoid Interference:** Ensure the controller is not placed near strong electromagnetic interference sources.

SPECIFICATIONS

Feature	Detail
Model Name	RM
Brand	HORI
Compatible Devices	Nintendo Switch
Controller Type	Joystick
Connectivity Technology	USB (Wired)
Button Quantity	16
Power Source	Corded Electric
Item Weight	0.5 Kilograms
Item Dimensions (L x W x H)	6.89 x 3.86 x 8.98 inches
Additional Features	Portable

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official HORI website or contact their customer service directly. Specific warranty terms may vary by region.

HORI Official Website: <https://stores.hori.jp/>