

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Taylor](#) /
- › [Taylor Digital Indoor/Outdoor Thermometer \(Model 1700\) User Manual](#)

Taylor 1700



TAYLOR®

Taylor Digital Indoor/Outdoor Thermometer (Model 1700) User Manual

Your guide to accurate temperature monitoring.

INTRODUCTION

Thank you for choosing the Taylor Digital Indoor/Outdoor Thermometer. This versatile device provides accurate temperature readings for both indoor and outdoor environments. Featuring a reversible suction cup for flexible mounting and an easy-to-read LCD display, it tracks temperatures in both Fahrenheit and Celsius, including daily minimum and maximum readings.



Image: The Taylor Digital Indoor/Outdoor Thermometer, a compact black device with a clear LCD screen, designed for versatile temperature monitoring.

SAFETY INFORMATION

- Do not expose the thermometer to extreme temperatures beyond its operating range (-4°F to 140°F / -20°C to 60°C).
- While weather-resistant, avoid direct exposure to heavy rain, snow, or prolonged direct sunlight to ensure longevity and accuracy.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.
- Do not attempt to disassemble or repair the unit. Contact customer support for assistance.

PACKAGE CONTENTS

- 1 x Taylor Digital Indoor/Outdoor Thermometer (Model 1700)
- 1 x LR44 Battery (pre-installed or included separately)

PRODUCT FEATURES

- **Indoor and Outdoor Use:** Designed for versatile placement.
- **Wide Temperature Range:** Measures from -4°F to 140°F (-20°C to 60°C).
- **Reversible Suction Cup:** Allows for easy mounting on windows or smooth surfaces, facing either inward or outward.
- **Min/Max Temperature Record:** Automatically records the highest and lowest temperatures over a 24-hour period.
- **Clear LCD Display:** Features oversized digits for enhanced readability.
- **Battery Operated:** Requires 1 LR44 battery (included).

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the thermometer.
2. Open the battery compartment cover.
3. Insert one LR44 battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely. The display should activate.

2. Mounting the Thermometer

The thermometer features a reversible suction cup for flexible mounting.

- **For Indoor Reading of Outdoor Temperature:** Attach the suction cup to the outside of a clean window, with the display facing inward.
- **For Outdoor Reading:** Attach the suction cup to the inside of a clean window, with the display facing outward.
- Ensure the surface is clean and dry for optimal suction. Press firmly to secure.
- For best accuracy, place the thermometer in a shaded area, away from direct sunlight, which can cause elevated readings.

OPERATING INSTRUCTIONS

1. Reading the Temperature

Once the battery is installed, the current temperature will be displayed on the LCD screen. The large digits ensure easy readability.

2. Switching Temperature Units (°F/°C)

Locate the small button on the back or side of the thermometer, usually labeled "°F/°C". Press this button to toggle between Fahrenheit and Celsius temperature displays.

3. Viewing and Resetting Min/Max Temperatures

The thermometer automatically records the minimum and maximum temperatures reached since the last reset.

- To view the minimum temperature, press the "MIN" button (if available, or a multi-function button).
- To view the maximum temperature, press the "MAX" button (if available, or a multi-function button).
- To reset the Min/Max readings, press and hold the "RESET" button (or the Min/Max button for a few seconds) until the display clears or resets. The 24-hour period for Min/Max tracking begins from the time of the last reset.

MAINTENANCE

- **Cleaning:** Wipe the thermometer with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Battery Replacement:** When the display becomes dim or stops functioning, replace the LR44 battery as described in the "Battery Installation" section.
- **Storage:** If storing the thermometer for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery; incorrect battery installation.	Replace the LR44 battery, ensuring correct polarity.
Inaccurate temperature readings.	Direct sunlight exposure; proximity to heat/cold sources; unit not calibrated (unlikely for this model).	Relocate the thermometer to a shaded area. Ensure it is not near vents, windows with direct sun, or other appliances that emit heat/cold. Allow time for the unit to stabilize.
Suction cup not holding.	Surface is dirty, wet, or not smooth; suction cup is damaged.	Clean and dry the mounting surface thoroughly. Ensure the suction cup is clean. If damaged, it may need replacement.
Display goes blank in very cold weather.	Temperature is below the operating range of the LCD.	This is normal for some LCDs in extreme cold. The display should return when temperatures rise within the operating range. The internal sensor may still be functioning.

SPECIFICATIONS

Model Number	1700
Temperature Range	-4°F to 140°F (-20°C to 60°C)
Power Source	1 x LR44 Battery (included)
Display Type	LCD
Material	Plastic
Dimensions (Approx.)	5 Inches (Length)
Weight (Approx.)	1.41 ounces
Indoor/Outdoor Usage	Yes

WARRANTY AND SUPPORT

This Taylor Digital Indoor/Outdoor Thermometer (Model 1700) comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, unauthorized service, or other causes not arising from defects in material or workmanship.

For warranty claims, technical support, or general inquiries, please visit the official Taylor website or contact their customer service department.

Online Support: [Visit the Taylor Store on Amazon](#)