

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Taylor](#) /

› **Taylor Precision Products 1733 Indoor/Outdoor Digital Thermometer with Barometer & Timer, Black, Universal**

### Taylor 1733

# Taylor Precision Products 1733 Indoor/Outdoor Digital Thermometer with Barometer & Timer

Model: 1733

## INTRODUCTION

The Taylor Precision Products 1733 Indoor/Outdoor Digital Thermometer with Barometer & Timer is designed to provide accurate readings of indoor and outdoor temperatures, along with barometric pressure. This device also includes a timer and alarm function, making it a versatile tool for monitoring environmental conditions.



Image: The main display unit of the Taylor 1733 Digital Thermometer and Barometer, shown alongside its white wireless outdoor sensor. The display unit shows indoor and outdoor temperatures, time, date, and weather forecast icons.

## SAFETY INFORMATION

### Refund and cancel order not acceptable.

Please read all instructions carefully before operating the device. Keep the device away from extreme temperatures, direct sunlight, and moisture. Do not attempt to disassemble or repair the unit yourself, as this may void the warranty and cause damage.

## PACKAGE CONTENTS

- Digital Thermometer Main Unit
- Wireless Outdoor Sensor
- Instruction Manual

## FEATURES

- Monitors indoor/outdoor temperature in °F/°C
- Snooze/alarm function
- 24-hour countdown timer
- Programmable temperature alert
- Displays low-battery indicator
- Barometric pressure display

## SETUP

### 1. Battery Installation

The main unit and the outdoor sensor both require batteries for operation. Ensure you use fresh batteries of the correct type (typically AAA or AA, refer to the battery compartment for specifics).



Image: The rear view of both the main display unit and the outdoor sensor, with their battery covers removed, showing the battery compartments. The main unit uses two AAA batteries, and the outdoor sensor uses two AA batteries.

1. **Main Unit:** Open the battery compartment cover on the back of the main unit. Insert the required batteries, observing the correct polarity (+/-). Close the cover securely.

2. **Outdoor Sensor:** Open the battery compartment cover on the back of the outdoor sensor. Insert the required batteries, observing the correct polarity (+/-). Close the cover securely.

## 2. Placement

- **Main Unit:** Place the main unit indoors, away from direct sunlight, heat sources, or drafts that could affect temperature readings. It can be placed on a tabletop using its integrated stand or mounted on a wall.
- **Outdoor Sensor:** Position the outdoor sensor in a shaded area, protected from direct rain and sunlight, to ensure accurate temperature readings. Avoid placing it near metal objects or large electrical appliances that could interfere with the wireless signal. The maximum wireless range is approximately 200 feet (60 meters) in open air.

## 3. Synchronization

The main unit and outdoor sensor should automatically synchronize once batteries are installed. If they do not connect, try resetting both units by removing and reinserting the batteries, ensuring they are within range of each other.

# OPERATING INSTRUCTIONS

## 1. Display Overview

The main display shows indoor temperature, outdoor temperature, time, date, barometric pressure, and weather forecast icons. Familiarize yourself with the layout of the display.



Image: The Taylor 1733 Digital Thermometer and Barometer main unit displayed on a wooden table, with the outdoor sensor visible in the background. The screen clearly shows indoor and outdoor temperatures, time, and weather forecast.

## 2. Setting Time and Date

Refer to the instruction manual included with your product for specific button functions and sequences to set the time, date, and 12/24 hour format.

## 3. Temperature Unit Selection (°F/°C)

Press the designated button (often labeled "°F/°C" or "MODE") to switch between Fahrenheit and Celsius temperature displays.

## 4. Alarm and Snooze Function

The device features an alarm function. Consult your manual for instructions on setting the alarm time and activating the snooze feature.

## 5. Countdown Timer

Utilize the 24-hour countdown timer for various purposes. Instructions for setting and starting the timer are detailed

in the full manual.

## 6. Programmable Temperature Alert

Set custom high or low temperature alerts for either indoor or outdoor readings. The device will notify you when the temperature exceeds or falls below your set thresholds.

## MAINTENANCE

### Cleaning

To clean the device, simply wipe it with a clean, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the display or casing.

### Battery Replacement

When the low-battery indicator appears on the display, replace the batteries in both the main unit and the outdoor sensor promptly to ensure continuous and accurate operation. Dispose of old batteries responsibly.

## TROUBLESHOOTING

| Problem  | Solution  |
|--|---|
| No display on main unit.                         | Check battery polarity. Replace batteries if depleted.  |
| Outdoor temperature not displayed or inaccurate. | Ensure outdoor sensor is within range and free from obstructions. Replace sensor batteries. Re-synchronize units. |
| Inaccurate indoor temperature.                   | Relocate main unit away from direct sunlight, heat sources, or drafts.  |
| Buttons not responding.                          | Remove and reinsert batteries to reset the unit.  |

## SPECIFICATIONS

- Model:** 1733
- Item Weight:** 0.31 Pounds
- Power Source:** Battery Powered
- Batteries Required:** Yes
- Finish Type:** Glossy
- Care Instructions:** Wipe Clean
- Assembly Required:** No
- Special Feature:** High Accuracy
- Included Components:** Thermometer, Instructions
- Manufacturer:** Taylor Precision Products
- Place of Business:** GARDEN CITY, NY, 11530 US

## WARRANTY INFORMATION

This product comes with a **1 YEAR** guarantee from the date of purchase. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included with your product or contact

customer support.

## CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Taylor Precision Products customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.

**Manufacturer:** Taylor Precision Products

**Place of Business:** GARDEN CITY, NY, 11530 US

Visit the official Taylor website for the most up-to-date support information:[www.taylorusa.com](http://www.taylorusa.com)

© 2024 Taylor Precision Products. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.