

Manuals.plus /

› Outsunny /

› Outsunny Outdoor Hammock with Stand & Accessories User Manual

Outsunny 01-0858

Outsunny Outdoor Hammock with Stand & Sun Shade Canopy

Model: 01-0858

1. INTRODUCTION

Thank you for choosing the Outsunny Outdoor Hammock with Stand and Sun Shade Canopy. This manual provides essential information for the safe assembly, operation, and maintenance of your new hammock. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1.1: The Outsunny Outdoor Hammock with Stand and Sun Shade Canopy.

2. SAFETY INFORMATION

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

- Ensure safety ropes are properly secured before each use.
- Do not exceed the maximum weight capacity of 396 lbs (180 kg).
- Always inspect all components for damage or wear before each use. Do not use if any part is damaged.
- Keep children and pets away from the hammock during assembly and ensure proper supervision during use.
- Place the hammock on a flat, stable surface to prevent tipping.
- Avoid sharp objects or excessive force that could damage the hammock fabric or wooden frame.

3. PACKAGE CONTENTS

Before assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Wooden Hammock Stand Components
- Hammock Bed (Natural Cotton)
- Sun Shade Canopy
- Assembly Hardware (bolts, nuts, washers, chains, clips)
- 4 Extra Safety Ropes
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended that two people assemble the hammock to ensure ease and safety. Approximate assembly time is 30 minutes.

1. **Unpack and Inspect:** Carefully unpack all components. Inspect the wooden frame for any cracks or damage. Verify all hardware is present. If any part, especially structural components like the wooden beams, appears cracked or damaged upon arrival, do not proceed with assembly. Contact customer support for replacement parts.
2. **Assemble the Wooden Stand:** Follow the detailed diagrams provided in the separate assembly guide (not included in this manual) to connect the curved wooden sections and the base supports. Ensure all bolts are securely tightened.
3. **Attach the Hammock Bed:** Securely attach the natural cotton hammock bed to the wooden stand using the provided chains and clips. Ensure the hammock is evenly suspended.
4. **Install Safety Ropes:** Attach the four extra safety ropes as indicated in the assembly guide to enhance stability and prevent excessive swaying. Ensure these ropes are taut and properly secured.
5. **Mount the Sun Shade Canopy:** Attach the sun shade canopy to the top frame of the stand. Ensure it is securely fastened and provides adequate shade. If the canopy feels too tight, gently adjust its position or the frame to ensure a proper fit without straining the material.



Figure 4.1: Initial assembly of the wooden hammock stand.

STURDY & STABLE



Figure 4.2: Details of the sturdy and stable construction elements.

4 Extra safety ropes included for added stability



Figure 4.3: Illustration of the four extra safety ropes for enhanced stability.

5. OPERATING INSTRUCTIONS

Once assembled, your Outsunny hammock provides a comfortable and relaxing space. The design allows for a single person to stretch out comfortably.

- **Entering the Hammock:** Approach the hammock from the center. Gently sit down, allowing the fabric to conform to your body. Slowly recline.
- **Exiting the Hammock:** Carefully sit up and place your feet on the ground before standing.
- **Using the Canopy:** The detachable sunshade canopy provides additional shade. It can be added or removed based on your preference and sun exposure.

PRACTICAL CANOPY

Provides more shade to keep cool



Figure 5.1: The practical sun shade canopy in use.

Breathable Cotton Polyester Hammock Bed



Figure 5.2: The breathable and comfortable hammock bed material.

6. MAINTENANCE

Proper maintenance will extend the life of your hammock.

- **Cleaning the Hammock Fabric:** The natural cotton hammock can be spot cleaned with mild soap and water. Allow to air dry completely. For prolonged life, consider bringing the hammock fabric indoors during inclement weather or extended periods of non-use.
- **Cleaning the Canopy:** The polyester canopy can be wiped clean with a damp cloth.
- **Wood Frame Care:** The larch wood frame is varnished for outdoor use. To maintain its appearance and durability, especially in harsh weather conditions, consider applying a weather protectant or sealant annually. Regularly check for signs of wear, such as delamination or cracking, and address them promptly.
- **Hardware Inspection:** Periodically check all bolts, chains, and clips to ensure they remain tight and secure. Tighten as necessary.
- **Storage:** During off-season or extended periods of non-use, it is recommended to disassemble the hammock and store it in a dry, protected area to prevent weather damage.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Cracked wooden beam/component	Manufacturing defect or damage during shipping/assembly.	Do not use. Contact customer support for a replacement part.
Missing hardware/parts	Packaging error.	Check all packaging thoroughly. Contact customer support for missing items.
Canopy too tight or difficult to fit	Minor manufacturing variance or incorrect alignment.	Gently adjust the canopy and frame for a proper fit. Ensure all connections are aligned correctly.
Hammock sags too low or feels unstable	Improper installation of safety ropes or worn hammock material.	Ensure all four safety ropes are securely attached and taut. If the hammock material is worn, consider replacement. Ensure the stand is on a level surface.
Wood shows signs of weathering (delamination, fading)	Exposure to elements without sufficient protection.	Apply a suitable outdoor wood sealant or varnish. Store indoors during harsh weather.

8. SPECIFICATIONS

Feature	Detail
Model Number	01-0858
Overall Dimensions	157.5" L x 47.2" W x 80.7" H (approx. 13.1 ft L x 3.9 ft W x 6.7 ft H)
Hammock Surface	82" L x 59" W
Weight Capacity	396 lbs (180 kg)
Materials	Larch Wood, Polyester (canopy), Natural Cotton (hammock), Metal
Item Weight	87 pounds
Color	White / Teak (With Canopy)
UPC	763250271681

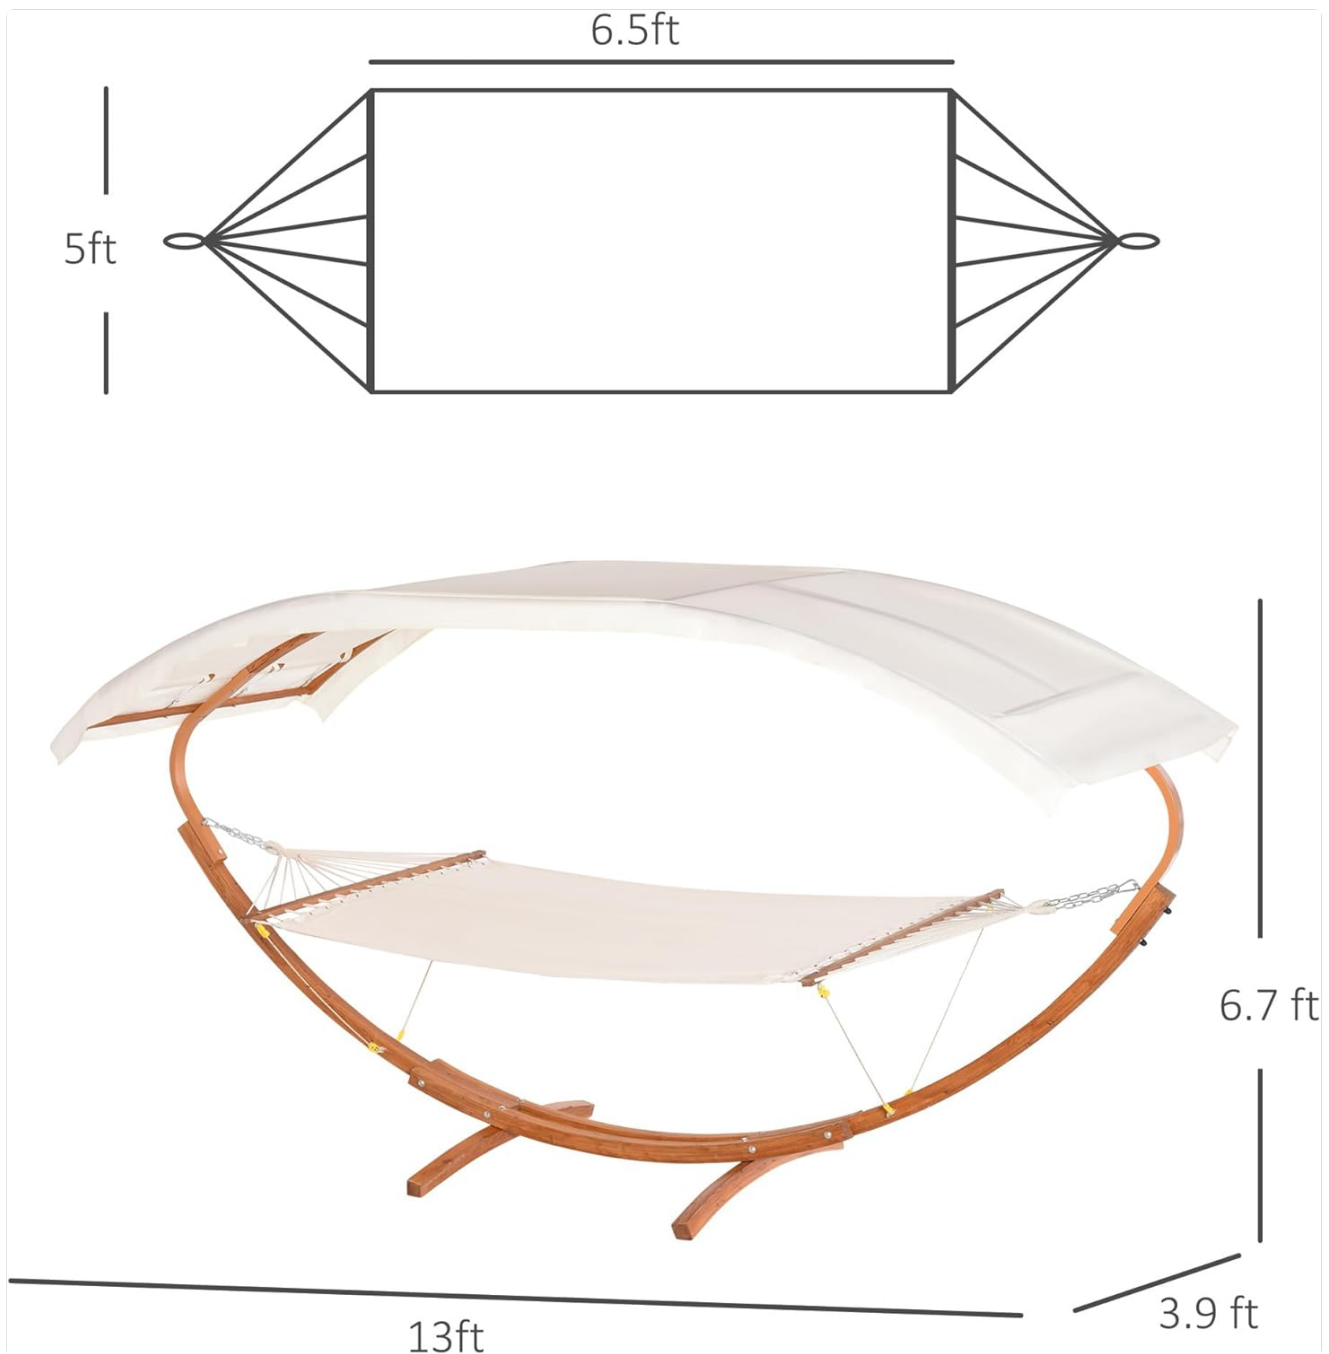


Figure 8.1: Product dimensions overview.

9. WARRANTY AND SUPPORT

This product is sold by Aosom Direct. For specific warranty information and to address any product issues, please contact Aosom Direct customer support. The product is eligible for 30-day easy returns.

For customer support, please refer to the contact information provided with your purchase or visit the Outsunny brand store online.

Online Resources:

- Outsunny Store: Visit the Outsunny Store on Amazon