

## Hape E0015

# Hape Roly Poly Ralph Toddler Balancing Toy

Model: E0015

## 1. INTRODUCTION

The Hape Roly Poly Ralph is an engaging balancing toy designed to stimulate early childhood development. This toy features a classic roly-poly design, allowing it to wobble and return to an upright position when nudged. It is constructed from durable wood and child-safe, BPA-free plastics, ensuring a safe play experience for infants and toddlers.

This instruction manual provides essential information regarding the toy's features, safe handling, care, and specifications to ensure optimal use and longevity.

## 2. WHAT'S IN THE BOX

- One (1) Hape Roly Poly Ralph Toy

## 3. SAFETY INFORMATION

- **Recommended Age:** Suitable for ages 0 months and up.
- **Materials:** Made from wood, ABS plastic, and water-based paint. All materials are non-toxic and BPA-free.
- **Supervision:** Always ensure adult supervision during play, especially with infants.
- **Inspection:** Before each use, inspect the toy for any signs of damage or loose parts. Discontinue use if any damage is observed.
- **Choking Hazard:** This toy contains small beads within a sealed compartment. Ensure the compartment remains intact.

## 4. SETUP

The Hape Roly Poly Ralph toy requires no assembly. Simply remove it from its packaging, and it is ready for play.

## 5. OPERATING INSTRUCTIONS

The Roly Poly Ralph is designed for interactive play, encouraging sensory development and motor skills.

### 5.1 How to Play

1. Place the Roly Poly Ralph on a flat, stable surface.
2. Gently push or nudge the toy. Observe as it wobbles and rights itself.
3. The clear base contains colorful beads that rattle as the toy moves, providing auditory stimulation.
4. Encourage children to interact with the toy by pushing, batting, or observing its movement.



Figure 1: Front view of the Hape Roly Poly Ralph, showing its clown-like face and colorful body.



Figure 2: A baby interacting with the Hape Roly Poly Ralph toy on a table, demonstrating typical play.



Figure 3: A hand gently pushing the Hape Roly Poly Ralph, illustrating its balancing action.

## 6. CARE AND MAINTENANCE

---

- **Cleaning:** Hand wash only. Use a damp cloth with mild soap and water to clean the surface of the toy. Do not immerse in water.
- **Drying:** Allow the toy to air dry completely before storage or next use.
- **Storage:** Store in a dry place away from direct sunlight and extreme temperatures to prevent material degradation.

## 7. TROUBLESHOOTING

---

- **Toy does not wobble correctly:** Ensure the toy is placed on a flat, even surface. Check for any obstructions beneath the base.
- **Beads do not rattle:** Verify that the toy is being moved sufficiently to activate the beads. If the toy is damaged and beads are exposed, discontinue use immediately.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	E0015
Dimensions (L x W x H)	3.15 x 3.15 x 3.78 inches (8 x 8 x 9.6 cm)
Item Weight	4.2 ounces (0.12 kg)
Recommended Age	0 - 15 years
Materials	Wood, ABS Plastic, Water-based paint
Material Type Free	Bisphenol-A (BPA) Free
Product Care	Hand Wash Only
UPC	734548118582

## 9. WARRANTY AND SUPPORT

---

Hape products are manufactured with a commitment to quality and safety. For information regarding warranty coverage or customer support, please refer to the official Hape website or contact their customer service department. Keep your purchase receipt for any warranty claims.

For further assistance, visit: [www.hape.com](http://www.hape.com)