

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fisher-Price](#) /

› [Fisher-Price Laugh & Learn Light Up Learning Speaker Instruction Manual](#)

Fisher-Price DHC47

Fisher-Price Laugh & Learn Light Up Learning Speaker Instruction Manual

INTRODUCTION

Welcome to the Fisher-Price Laugh & Learn Light Up Learning Speaker. This interactive toy is designed to engage babies and toddlers with lights, sounds, and music, while introducing them to fundamental concepts like ABCs, numbers, and shapes. Please read this manual carefully to ensure proper setup, operation, and maintenance of your product.

SETUP

Battery Installation

The Laugh & Learn Light Up Learning Speaker requires 3 AAA batteries (included). Follow these steps to install or replace batteries:

1. Locate the battery compartment on the side of the speaker.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover and remove the cover.
3. Insert 3 new AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and tighten the screw. Do not overtighten.



Figure 1: Location of the battery compartment on the speaker.

Initial Power On and Volume Adjustment

To turn on the speaker and adjust the volume:

1. Locate the power/volume switch on one end of the speaker.
2. Slide the switch to the first position for low volume, or to the second position for high volume.
3. To turn off the speaker, slide the switch to the 'Off' position.

OPERATING INSTRUCTIONS

Main Speaker Functions

The speaker features four interactive buttons that introduce different learning concepts:

- **Red ABC Button:** Press to hear the alphabet and learn about letters.
- **Green 123 Button:** Press to learn numbers and practice counting.
- **Blue Shapes Button:** Press to discover different shapes.
- **Purple Music Note Button:** Press to play various musical tunes and songs.

Each button press activates corresponding lights and sounds, providing sensory stimulation and reinforcing learning.



Figure 2: The interactive buttons on the speaker.

Rattle Phone Usage

The product includes a separate rattle phone accessory. This phone can be placed in the speaker's cradle or played with independently. It features internal beads that create a rattling sound when shaken, providing auditory stimulation.



Figure 3: Baby interacting with the speaker and rattle phone.

MAINTENANCE

Cleaning

To clean the Laugh & Learn Light Up Learning Speaker:

- Wipe the toy with a damp cloth using a mild soap solution.
- Do not immerse the toy in water.
- Rinse the cloth thoroughly and wipe the toy again to remove any soap residue.
- Allow the toy to air dry completely before next use.

Storage

When not in use, store the speaker and rattle phone in a cool, dry place away from direct sunlight. If storing for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

No Sound or Lights

- **Check Batteries:** Ensure batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary.
- **Power Switch:** Verify that the power/volume switch is in either the low or high volume position, not 'Off'.

Unexpected Behavior

- If the toy exhibits unusual behavior, try turning it off and then on again.
- If the issue persists, replace the batteries.

SPECIFICATIONS

Product Dimensions	8 x 3.5 x 9.5 inches
Item Weight	14.4 ounces
Model Number	DHC47
Recommended Age	6 months - 3 years
Batteries Required	3 AAA batteries (included)
Manufacturer	Fisher-Price

WARRANTY AND SUPPORT

This Fisher-Price product is covered by a limited warranty. For detailed warranty information, product support, or to inquire about replacement parts, please visit the official Fisher-Price website or contact their customer service department. Keep your purchase receipt as proof of purchase.

For further assistance, please refer to the contact information provided on the product packaging or the official Fisher-Price website: www.fisher-price.com