

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fisher-Price](#) /

› [Fisher-Price Laugh & Learn Around The Town Learning Activity Table Instruction Manual \(Model DHC45\)](#)

Fisher-Price DHC45

Fisher-Price Laugh & Learn Around The Town Learning Activity Table Instruction Manual

Model: DHC45

PRODUCT OVERVIEW

The Fisher-Price Laugh & Learn Around The Town Learning Activity Table is an interactive play table designed to engage infants and toddlers aged 6-36 months. It features four distinct play locations: a zoo, a farm, a market, and Puppy's house, each packed with activities, lights, songs, and learning content. The table incorporates Smart Stages technology with 3 levels of play to introduce the alphabet, numbers, shapes, colors, animals, greetings, and Spanish words. Its versatile design allows for play with or without legs, accommodating both sitting and standing babies.



Image: The Fisher-Price Laugh & Learn Around The Town Learning Activity Table, showcasing its colorful design and various interactive elements.

SETUP INSTRUCTIONS

Follow these steps to assemble your activity table:

1. **Remove from Packaging:** Carefully remove all components of the activity table from its packaging.
2. **Attach Legs:** Align the holes on the table legs with the corresponding slots on the underside of the table. Push each leg firmly into place until it clicks securely.
3. **Verify Security:** Ensure all four legs are securely attached before allowing a child to use the table.
4. **Battery Installation:** Locate the battery compartment (usually on the underside of the table). Use a screwdriver to open it. Insert 3 AAA batteries (included), ensuring correct polarity. Close the compartment securely.
5. **Placement:** Place the assembled table in a safe and comfortable location for your child to play. Ensure it is on a stable surface.



Image: Detailed view of the zoo section with a spinning roller and shape buttons.

- **Farm:** Discover farm animals and their sounds. Features a flip-up barn door.



Image: Close-up of the farm area, showing a cow and a flip-up door.

- **Market:** Learn about numbers, counting, and colors with the light-up piano keys.



Image: The market section of the table, featuring colorful piano keys with numbers.

- **Puppy's House:** Engage with the interactive pretend phone and light switch.



Image: Puppy's house area, showing a door that opens to reveal Puppy and a light switch.

- **Removable Legs:** For younger babies who are sitting, the legs can be easily removed to allow floor play. For standing and cruising babies, attach the legs for an elevated play experience.

MAINTENANCE

To ensure the longevity and hygiene of your activity table, follow these maintenance guidelines:

- **Cleaning:** Wipe the surface with a damp cloth and mild soap. Do not immerse in water. Avoid harsh cleaners or abrasives.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period. Replace all batteries with new ones of the same type simultaneously.
- **Storage:** Store the activity table in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

If you encounter any issues with your activity table, refer to the following common solutions:

- **No Sound/Lights:**
 - Ensure the power switch is in the "ON" position.

- Check the battery compartment for proper battery installation and ensure batteries are not depleted. Replace if necessary.
- **Intermittent Functionality:**
 - Weak batteries may cause intermittent sound or light. Replace batteries.
 - Ensure all connections (e.g., legs) are secure.
- **Legs Not Attaching Securely:**
 - Verify that the leg is aligned correctly with the slot.
 - Apply firm, even pressure until a click is heard, indicating it's locked in place.

SPECIFICATIONS

Feature	Detail
Product Dimensions	17.72 x 17.72 x 14.96 inches
Item Weight	5.23 pounds
Item Model Number	DHC45
Manufacturer Recommended Age	6 months - 3 years
Batteries	3 AAA batteries required (included)
Manufacturer	Fisher-Price
Release Date	March 20, 2019

WARRANTY & SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact Fisher-Price customer service. Details can typically be found on the product packaging or the official Fisher-Price website.

You can visit the official Fisher-Price store for more information:[Fisher-Price Store](#)

