

[Manuals.plus](#) /

> [Spin Master](#) /

> Spin Master Paw Patrol Zoomer Everest Interactive Pup Instruction Manual

## Spin Master 6032939.0

# Spin Master Paw Patrol Zoomer Everest Interactive Pup Instruction Manual

Model: 6032939.0

## INTRODUCTION

This manual provides essential information for the safe and proper operation, maintenance, and care of your Spin Master Paw Patrol Zoomer Everest Interactive Pup. Please read all instructions before use and retain this manual for future reference.

The Zoomer Everest Interactive Pup is designed to provide an engaging play experience, featuring interactive missions, sounds, and movements. It is suitable for children aged 36 months to 8 years.

## WHAT'S IN THE BOX

- 1 x Zoomer Everest Interactive Pup
- 1 x Instruction Manual



Image: The product box for Zoomer Everest, displaying key features and the toy itself.

## SETUP

1. **Unboxing:** Carefully remove the Zoomer Everest pup from its packaging. Ensure all components listed in the 'What's in the Box' section are present.
2. **Battery Installation:** The Zoomer Everest requires 2 AA batteries (not included) for its primary functions. Locate the battery compartment on the underside of the pup. Using a Phillips head screwdriver, open the compartment, insert the batteries according to the polarity indicators (+/-), and securely close the compartment.
3. **Power On:** Locate the power switch, typically on the pup's belly or side. Slide the switch to the 'ON' position. The pup will perform a brief startup sequence.



Image: Side view of the Zoomer Everest pup, showing its general appearance and closed pup pack.

## OPERATING INSTRUCTIONS

The Zoomer Everest Interactive Pup offers various modes of play and interaction:

- **Interactive Missions:** Everest can perform over 80 interactive missions and tricks. Follow the pup's cues and sounds to engage in rescue scenarios.
- **Sound and Phrases:** Everest knows over 150 real Paw Patrol sounds and phrases. Press her head or interact with her sensors to trigger different responses.
- **Movement:** Everest moves on her own. Place her on a flat, clear surface to observe her movements.
- **Pup Pack Activation:** Activate Everest's pup pack and grappling hook for rescue play. The pup pack opens to reveal the grappling hook mechanism.



Image: The Zoomer Everest pup with its pup pack open, demonstrating the grappling hook feature.

## MAINTENANCE

- **Cleaning:** Wipe the pup with a clean, damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Care:** When the pup is not in use for extended periods, remove the AA batteries to prevent leakage. Dispose of used batteries responsibly.
- **Storage:** Store the pup in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Pup does not turn on or respond.	Low or dead batteries. Incorrect battery installation.	Replace with fresh AA batteries. Ensure batteries are inserted with correct polarity.

Problem	Possible Cause	Solution
Pup's movements are erratic or slow.	Low battery power. Obstruction in movement mechanism.	Replace batteries. Check for any debris or hair obstructing the wheels or legs.
Sounds are distorted or absent.	Low battery power. Speaker obstruction.	Replace batteries. Ensure the speaker area is clear of debris.
Pup does not respond to touch/interaction.	Sensors are dirty or obstructed.	Gently clean the pup's sensors with a soft, dry cloth.

## SPECIFICATIONS

- **Model Number:** 6032939.0
- **Product Dimensions:** 8 x 12 x 9.5 inches
- **Item Weight:** 15.5 ounces
- **Recommended Age:** 36 months - 8 years
- **Batteries:** 2 x AA batteries (not included)
- **Manufacturer:** Spin Master

## WARRANTY INFORMATION

Spin Master products are manufactured to high-quality standards. For specific warranty details, please refer to the documentation included with your purchase or visit the official Spin Master website. Keep your proof of purchase for warranty claims.

## SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Spin Master customer service. Contact information can typically be found on the product packaging or their official website:

[www.spinmaster.com](http://www.spinmaster.com)

