

Dyson 206033-02

Dyson Cinetic Big Ball Animal Plus Allergy Vacuum

INSTRUCTION MANUAL

Model: 206033-02

1. IMPORTANT SAFETY INSTRUCTIONS

Before operating this appliance, read all instructions and cautionary markings in this manual and on the appliance. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- This appliance is intended for domestic use only. Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only Dyson recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without the clear bin and filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

2. PRODUCT OVERVIEW

The Dyson Cinetic Big Ball Animal Plus Allergy Vacuum is designed for effective cleaning across various floor types. It incorporates Cinetic science to capture microscopic dust without filter maintenance, and features whole-machine HEPA filtration for cleaner air expulsion. This model includes a tangle-free Turbine tool and additional accessories for comprehensive cleaning, particularly beneficial for homes with pets and allergy sufferers.

Key Features:

- **Dyson Cinetic Science:** Utilizes 35 high-frequency oscillating Cinetic tips to capture microscopic dust particles, preventing loss of suction.
- **No Filter Maintenance:** Designed without filters to wash or replace, ensuring consistent suction performance.
- **Whole-Machine HEPA Filtration:** Captures allergens and expels cleaner air, certified asthma & allergy friendly.
- **Tangle-free Turbine Tool:** Effectively removes hair from carpets and upholstery without tangling.
- **Specialized Tools:** Includes additional tools engineered for allergy sufferers to remove fine dust and allergens from hard-to-reach areas.





Figure 2.1: Front view of the Dyson Cinetic Big Ball Animal Plus Allergy Vacuum, showcasing its upright design and clear dust bin.





Figure 2.2: Side view of the vacuum, highlighting the Dyson Ball technology and hose attachment point.

3. SETUP AND ASSEMBLY

This section provides instructions for assembling your Dyson Cinetic Big Ball Animal Plus Allergy Vacuum before its first use.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all included components are present: main body, handle, wand, hose, and various tools.
2. **Attach Handle:** Slide the handle into the top of the main vacuum body until it clicks securely into place.

3. **Connect Hose:** Insert the end of the hose into the main body's hose inlet until it is firmly seated. Ensure the hose is properly routed and secured in any clips on the vacuum body.
4. **Attach Tools:** Store the included tools on the designated attachment points on the vacuum body or in the provided tool bag for easy access.
5. **Power Connection:** Unwind the power cord and plug it into a suitable electrical outlet.





Figure 3.1: The fully assembled Dyson Cinetic Big Ball Animal Plus Allergy Vacuum, ready for use.

4. OPERATING INSTRUCTIONS

Follow these steps for effective operation of your Dyson vacuum cleaner.

4.1 Powering On and Off

- **To Turn On:** Press the red power button located on the main body of the vacuum.
- **To Turn Off:** Press the red power button again.
- **Brush Bar Control:** A separate button controls the brush bar. Press it to activate for carpets and rugs, and press again to deactivate for hard floors or delicate surfaces.

4.2 Vacuuming Floors

The Dyson Cinetic Big Ball vacuum is designed for maneuverability and effective cleaning on various surfaces.

- **Carpet Cleaning:** For carpets and rugs, ensure the brush bar is activated. Push the vacuum forward and pull back in overlapping passes for thorough cleaning.
- **Hard Floor Cleaning:** For hard floors (wood, tile, laminate), deactivate the brush bar to prevent scratching and scattering debris.
- **Maneuvering:** The Dyson Ball technology allows for easy steering around furniture and obstacles with a simple twist of the wrist.



Figure 4.1: The vacuum head effectively cleaning a carpeted surface.



Figure 4.2: The vacuum head positioned to clean close to a wall or baseboard.

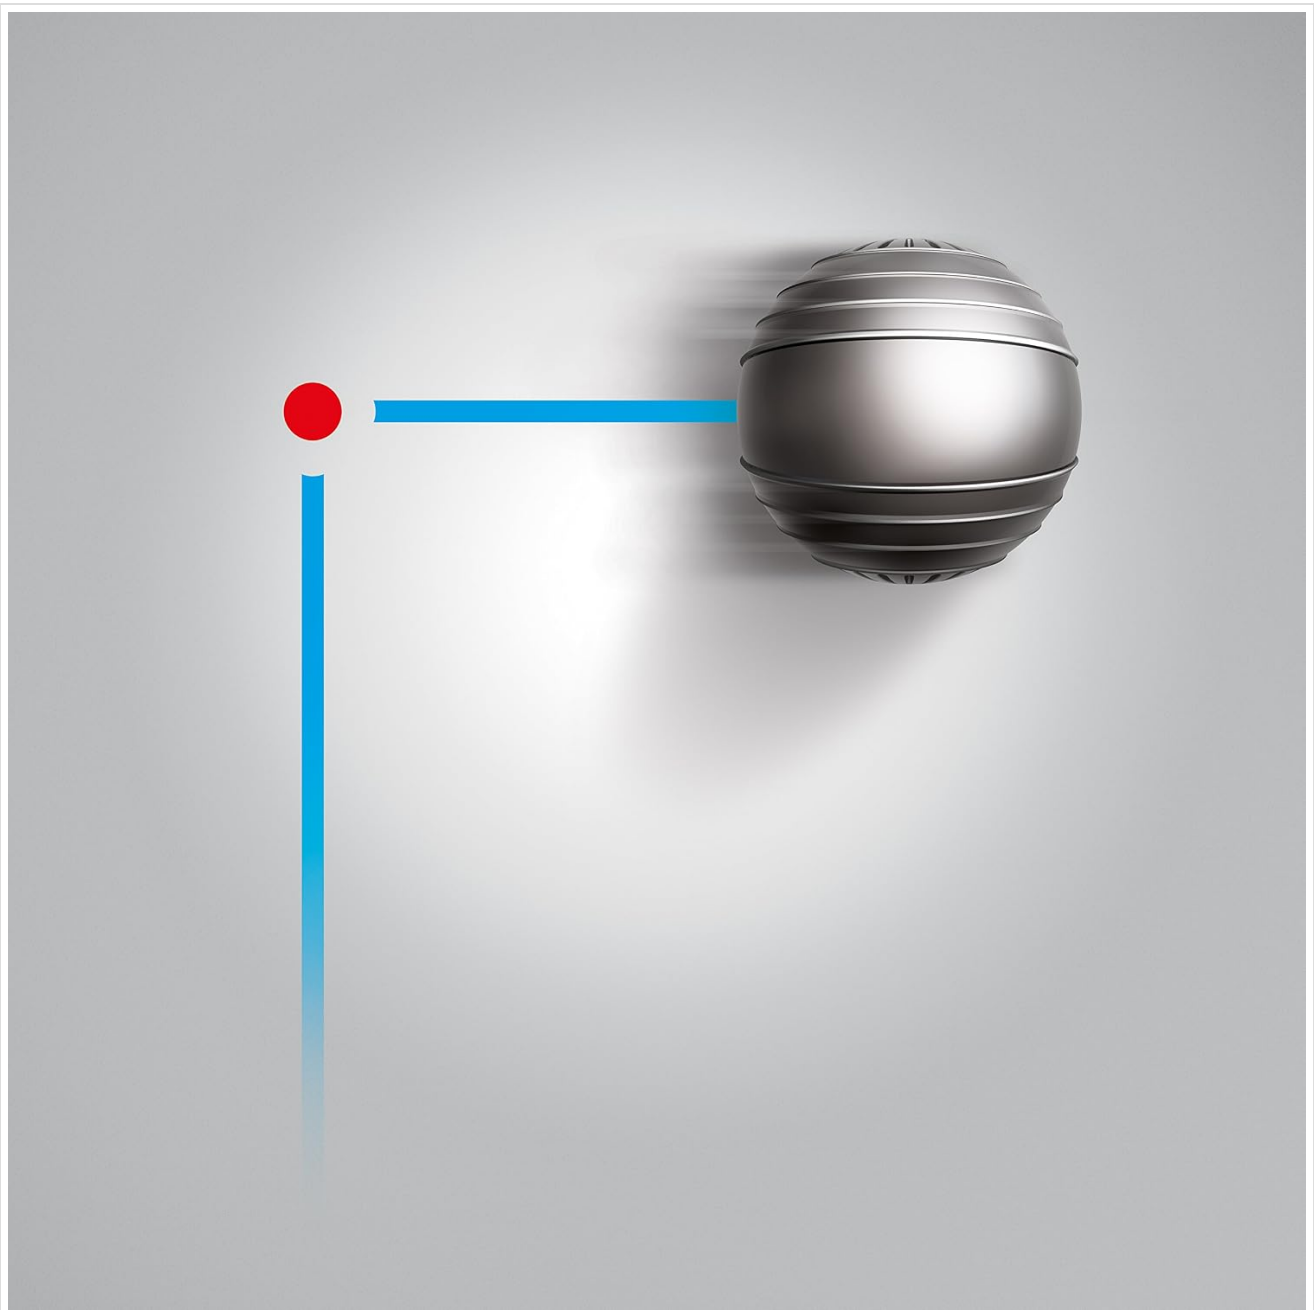


Figure 4.3: A diagram demonstrating the vacuum's ability to turn and maneuver around corners using its ball design.

4.3 Using Attachments

The vacuum comes with several tools for specialized cleaning tasks.

1. **Detach Wand:** To use attachments, pull the wand release catch and lift the wand from the main body.
2. **Attach Tool:** Securely attach the desired tool to the end of the wand or directly to the hose.
3. **Included Tools:**
 - Tangle-free Turbine tool: For pet hair on upholstery and carpets.
 - Carbon fiber soft dusting brush: For delicate surfaces.
 - Reach under tool: For cleaning under low furniture.
 - Mattress tool: For removing dust and allergens from mattresses.
 - Multi-angle brush: For cleaning at various angles.
 - Combination tool: A crevice tool and brush in one.
 - Stair tool: For cleaning stairs and carpet edges.
4. **Reattach Wand:** After use, remove the tool and reinsert the wand into the main body until it clicks into place.



Figure 4.4: A user extending the vacuum wand with an attachment to clean high surfaces, demonstrating the reach of the tools.

5. MAINTENANCE

Regular maintenance ensures optimal performance of your Dyson vacuum cleaner.

5.1 Emptying the Clear Bin

Empty the clear bin as soon as the dirt reaches the MAX level mark. Do not overfill.

1. Press the red bin release button located on the top of the cyclone assembly.
2. Carry the vacuum to a waste bin.
3. Hold the vacuum over the bin and press the red bin release button again to open the bin base. The dirt will fall out.
4. Close the bin base firmly until it clicks into place.
5. Reattach the clear bin to the main body, ensuring it clicks securely.

Note: This Dyson model does not have filters that require washing or replacement. The Cinetic science technology eliminates this maintenance step.

5.2 Clearing Blockages

If suction power decreases, check for blockages in the following areas:

- **Clear Bin Inlet:** Check where the clear bin connects to the main body.
- **Hose and Wand:** Detach the hose and wand and inspect for any obstructions.
- **Cleaner Head:** Turn off and unplug the vacuum. Inspect the cleaner head and brush bar for tangled hair or debris. You may need to use scissors to cut away tangled hair from the brush bar.

Always ensure the vacuum is unplugged before checking for blockages or performing any maintenance.

5.3 General Cleaning

- Wipe the exterior of the vacuum with a damp cloth. Do not use detergents or polishes.
- Ensure all parts are completely dry before reassembling and using the vacuum.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Dyson Cinetic Big Ball Animal Plus Allergy Vacuum.

Problem	Possible Cause	Solution
Vacuum has no power.	Not plugged in; power outlet not working; circuit breaker tripped.	Ensure the plug is fully inserted into a working outlet. Check your home's circuit breaker.
Loss of suction.	Clear bin is full; blockage in hose, wand, or cleaner head.	Empty the clear bin. Refer to Section 5.2 "Clearing Blockages" for inspection and removal.
Brush bar not rotating.	Brush bar control button off; blockage in cleaner head; thermal cut-out activated.	Ensure the brush bar button is pressed. Unplug and check the cleaner head for obstructions. If the motor is hot, unplug and allow it to cool for at least 30 minutes.
Unusual noise.	Blockage in airflow path; foreign object caught in brush bar.	Turn off and unplug the vacuum. Inspect the clear bin, hose, wand, and cleaner head for any foreign objects or blockages.

If the problem persists after attempting these solutions, please contact Dyson customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Dyson
Model Number	206033-02
Item Weight	19 Pounds
Filter Type	HEPA Filter (Whole-machine filtration, no maintenance required)
Included Components	Tangle-free Turbine tool, Carbon fiber soft dusting brush, Reach under tool, Mattress tool, Multi-angle brush, Tool bag, Combination tool, Stair tool
Indoor/Outdoor Usage	Indoor
Controller Type	Push Button
Control Method	Touch
Power Levels	1

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Dyson Cinetic Big Ball Animal Plus Allergy Vacuum (Renewed) comes with a **90 days limited warranty** from the manufacturer. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For specific terms and conditions of your warranty, please refer to the documentation provided at the time of purchase or contact Dyson customer support.

8.2 Customer Support

If you have any questions, require assistance with setup, operation, maintenance, or troubleshooting that is not covered in this manual, please contact Dyson customer support.

For the most up-to-date contact information, please visit the official Dyson website or refer to your product registration materials.