

[Manuals.plus](#) /

› [Lighting EVER](#) /

› LE LED Camping Lantern Instruction Manual

Lighting EVER 3300010-NW

LE LED Camping Lantern Instruction Manual

Model: 3300010-NW

Brand: Lighting EVER

INTRODUCTION

This manual provides detailed instructions for the LE LED Camping Lantern, a versatile and portable lighting solution. Designed for various uses including camping, emergencies, and outdoor activities, this lantern features multiple light modes, an integrated power bank, and convenient magnetic and hook attachments.



The LE LED Camping Lantern, showcasing its compact design and included charging cables.

PRODUCT FEATURES

- **Enhanced Version with 5 Adjustable Brightness Levels:** Experience the versatility of five different light settings. This lantern is perfect for illuminating your entire campsite, while its directional flashlight mode is superb for various nighttime activities. An additional strobe light mode is included for emergency situations.
- **Integrated Power Bank:** This lantern boasts a built-in rechargeable polymer battery (USB cable included), and a 5V 1A USB charging port integrated into its design. Note: a 5V DC charger adapter is not included.
- **Compact & Lightweight:** Although small in size, this lantern packs a punch when it comes to brightness. Weighing just 0.37lb and designed for easy portability, it can comfortably fit in your handbag or backpack, taking up minimal space.
- **Convenient Magnets & Hooks:** The base features two magnets allowing it to be attached to any metal surface,

such as a bicycle, car, or tent pole. It can also be hung using the two metal loops provided.

- **Diverse Applications:** With an IPX4 water resistance rating, this lantern is not only perfect for camping, working, fishing, dog walking, and other outdoor activities but also serves as reliable emergency lighting. Carry it wherever you require a portable and convenient light source.

5 Lighting Modes



High
310LM

Low
110LM

SOS
260LM

High
120LM

Low
50LM



Visual representation of the lantern's five lighting modes: High (310LM), Low (110LM), SOS (260LM), High Spotlight (120LM), and Low Spotlight (50LM).



The lantern's versatility is highlighted through a collage showing its use for car maintenance, reading, outdoor navigation, and tent illumination.

SETUP

Initial Charge

Before first use, fully charge the lantern. Locate the integrated USB charging cable on the base of the lantern. Plug the USB-A end into a compatible 5V 1A USB power source (e.g., wall adapter, computer USB port, power bank). The battery indicator lights will illuminate to show charging progress. Once all lights are solid blue, the lantern is fully charged.

Rechargeable

USB Cable Included

Charging Time 6H

3000 mAh
Power Bank

The lantern's integrated USB cable is shown plugged into a power source, indicating the charging process.

OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

Press the power button located on the base of the lantern to cycle through the different lighting modes.

1. First press: High Lantern Mode (310LM)
2. Second press: Low Lantern Mode (110LM)
3. Third press: SOS Strobe Mode (260LM)
4. Fourth press: High Spotlight Mode (120LM)
5. Fifth press: Low Spotlight Mode (50LM)
6. Sixth press: Turn Off

To turn off the lantern from any mode, press and hold the power button for 2 seconds.

Using as a Power Bank

The lantern can be used to charge other devices. Uncover the 5V 1A USB output port on the base. Connect your device's charging cable to this port. The lantern's internal battery will then provide power to your device.



The lantern's power bank function is demonstrated by charging a smartphone, highlighting its utility beyond just lighting.

Mounting Options

The lantern offers flexible mounting options:

- **Magnetic Base:** Two strong magnets on the base allow attachment to any ferrous metal surface, such as car hoods, tent poles, or refrigerators.
- **Foldable Hooks:** Two metal loops can be folded out from the base to hang the lantern from branches, tent ceilings, or other suitable fixtures.

IPX4 Water Resistance



The image illustrates the lantern's versatile "Hands Free Design," showing it both hanging from a hook and magnetically attached to a vertical metal surface.

MAINTENANCE AND CARE

Water Resistance

The lantern has an IPX4 water resistance rating, meaning it is protected against splashing water from any direction. It is suitable for use in light rain but should not be submerged in water. Ensure the USB port cover is securely closed when not in use to maintain water resistance.

Casts a Huge Spotlight

Lasts up to 24 hours on low



The lantern is shown in a natural outdoor setting, enduring light rain, to highlight its IPX4 water resistance.

Cleaning

Wipe the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Storage

Store the lantern in a cool, dry place when not in use. For long-term storage, charge the battery every 3-6 months to maintain its lifespan.

TROUBLESHOOTING

Lantern Not Turning On

- Check battery level: Press the power button briefly to see the battery indicator lights. If low, recharge the lantern.
- Ensure power button is pressed correctly: Press firmly and hold for 2 seconds to ensure it's not just cycling modes.

Device Not Charging from Power Bank

- Check lantern battery level: The lantern needs sufficient charge to act as a power bank.
- Verify cable connection: Ensure the charging cable is securely plugged into both the lantern's USB output port and your device.
- Check device compatibility: Ensure your device is compatible with 5V 1A USB charging.

Dim Light Output

- Recharge the lantern: Dim light often indicates a low battery.
- Cycle through modes: Ensure you are on the desired brightness mode (e.g., High Lantern Mode for maximum brightness).

An official product video showcasing the various functionalities and practical uses of the LE LED Camping Lantern.

SPECIFICATIONS

Feature	Detail
Finish Type	Powder Coated
Product Dimensions	2.76"L x 2.76"W x 2.48"H
Battery Description	Lithium-Ion
Brightness	280 Lumen
Item Weight	176 Grams
Mounting Type	Tabletop Mount
Water Resistance Level	IPX4 (Splash Resistant)
Bulb Shape Size	ED23
Light Source Wattage	3 Watts
Number of Batteries	2 Lithium Metal batteries required. (included)
Voltage	3.7 Volts
Wattage	4.5 watts
Manufacturer	Lighting EVER
Item Package Dimensions L x W x H	3.43 x 3.31 x 3.27 inches
Package Weight	0.24 Kilograms
Item Dimensions LxWxH	2.76 x 2.76 x 2.48 inches
Brand Name	Lighting EVER

Feature	Detail
Model Name	3300010-NW
Part Number	2
Included Components	Batteries included
Light Source Type	Light Emitting Diode (LED)
Color	Silver
Power Source	rechargeable-battery
Material	Aluminum, Plastic

WARRANTY AND SUPPORT

For detailed warranty information and further support, please refer to the official user manual provided with your product or visit the Lighting EVER website.

- Official User Manual (PDF): [Download PDF](#)
- Lighting EVER Store: [Visit Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

