

[Manuals.plus](#) /

› [Bose](#) /

› Bose Solo 5 TV Soundbar Sound System User Manual

Bose 732522-5110

Bose Solo 5 TV Soundbar Sound System User Manual

Model: 732522-5110

INTRODUCTION

The Bose Solo 5 TV sound system is a compact, one-piece soundbar designed to enhance the audio experience of your television. It delivers noticeably clearer sound for all your favorite TV programs, with a focus on reproducing dialogue and intricate details. Its versatile design allows for flexible placement, and integrated Bluetooth connectivity enables wireless music streaming from compatible devices.

WHAT'S IN THE BOX

- Bose Solo 5 TV sound system
- Universal remote control
- Power Cord
- Optical digital audio cable
- Coaxial digital audio cable

SETUP

Follow these steps to set up your Bose Solo 5 TV sound system:

1. **Placement:** Position the soundbar in front of your TV, ensuring it does not block the TV's remote sensor.



Front view of the Bose Solo 5 TV Soundbar, showcasing its sleek design.

2. **Connect to TV:** Connect the soundbar to your TV using either the optical digital audio cable or the coaxial digital audio cable. Ensure the cable clicks securely into place for a proper connection.



Rear view of the Bose Solo 5 soundbar, highlighting the various input ports for connectivity.

3. **Power Connection:** Connect the power cord to the soundbar and then to a power outlet.
4. **Universal Remote Setup:** The included universal remote control can be programmed to control your TV and other devices. Refer to the remote control section for detailed programming instructions.



The Bose Solo 5 soundbar positioned next to its universal remote control.

OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Use the power button on the universal remote to turn the soundbar on or off.
- **Volume Control:** Adjust the volume using the volume up (+) and volume down (-) buttons on the remote.
- **Mute:** Press the mute button to temporarily silence the sound.

Dialogue Mode

The Dialogue Mode feature enhances the clarity of speech, making conversations easier to hear, especially during quiet passages or complex sound mixes. To activate Dialogue Mode, press the dedicated "Dialogue" button on your universal remote. The status light on the soundbar will change to amber when Dialogue Mode is active. Press the button again to toggle back to standard audio settings.

Bluetooth Connectivity

The Bose Solo 5 allows you to stream audio wirelessly from Bluetooth-enabled devices such as smartphones, tablets, or computers.

1. **Pairing:** Press the Bluetooth button on the universal remote. The Bluetooth indicator on the soundbar will blink blue.
2. **Connect Device:** On your mobile device, enable Bluetooth and select "Bose Solo 5" from the list of available devices. Once connected, the indicator light will glow solid blue.
3. **Play Audio:** Begin playing audio on your connected device, and it will stream through the soundbar.

MAINTENANCE

To ensure the longevity and optimal performance of your Bose Solo 5 TV sound system, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior surfaces of the soundbar. Avoid using liquid cleaners or

solvents, as they may damage the finish.

- **Ventilation:** Ensure that the soundbar's ventilation openings are not blocked to prevent overheating.
- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Bose Solo 5 TV sound system, refer to the following common troubleshooting steps:

Problem	Solution
No sound or distorted sound	Ensure all cable connections (optical, coaxial) between the soundbar and TV or other sources are secure. Listen for a "click" when connecting optical cables. If the soundbar is connected to a TV output labeled "variable," reduce the TV volume to prevent distortion. Check the TV's audio output settings to ensure sound is being sent to the external speaker system.
Remote control not working	Ensure there are no obstructions between the remote and the soundbar. Replace the batteries in the universal remote control. Reprogram the universal remote if it has lost its settings for your TV or other devices.
Bluetooth pairing issues	Ensure the soundbar is in Bluetooth pairing mode (blinking blue light). Make sure your Bluetooth device is within range (up to 10 meters). Forget "Bose Solo 5" from your device's Bluetooth settings and try pairing again.
Soundbar unresponsive	Unplug the power cord from the soundbar for at least one minute, then reconnect it. This can resolve temporary issues.

SPECIFICATIONS

Feature	Detail
Model Name	Solo 5
Speaker Type	Soundbar
Color	Black
Product Dimensions	3.4"D x 21.5"W x 2.8"H
Item Weight	3.7 Pounds
Connectivity Technology	Bluetooth, Auxiliary, Optical, Coaxial
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Controller Type	Remote Control
Power Source	Corded Electric
Input Voltage	240 Volts

Feature	Detail
Speaker Maximum Output Power	36 Watts
Surround Sound Channel Configuration	1.0
Batteries Required for Remote	2 Lithium Metal batteries

WARRANTY INFORMATION

The Bose Solo 5 TV Soundbar Sound System comes with **a2-year warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Bose website.

SUPPORT

For further assistance, product registration, or to download the full user manual in PDF format, please visit the official Bose support website. You can also refer to the [User Manual \(PDF\)](#) for comprehensive details.

© 2025 Bose Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01AWLPUAG>

More documents and user manuals: <https://manuals.plus/>