

Convectair 7317-C07-FS

Convectair Allegro 26 II 750W Wall Heater Instruction Manual

Model: 7317-C07-FS

INTRODUCTION

This manual provides essential information for the safe installation, operation, and maintenance of your Convectair Allegro 26 II 750W Wall Heater. Please read all instructions carefully before using the appliance and retain this manual for future reference.

The Convectair Allegro 26 II is a natural convection electric heater designed for efficient and comfortable heating in various indoor spaces. It features a noiseless operation and a programmable thermostat for precise temperature control.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following:

- Read all instructions before installing or using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner. Discard heater or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an

electric shock or fire, or damage the heater.

- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

PRODUCT OVERVIEW

The Convectair Allegro 26 II is a sleek, wall-mounted electric heater designed for efficient natural convection heating. It integrates seamlessly into various room types, providing consistent warmth.



Front view of the Convectair Allegro 26 II 750W Wall Heater.



Angled view of the Convectair Allegro 26 II 750W Wall Heater.



Temperature Control

The integrated digital programmable thermostat allows for precise temperature control.




Convection Heating

This heater utilizes natural convection for even heat distribution, suitable for bedrooms.



Versatile

The Allegro II series offers versatile options to fit various space requirements.

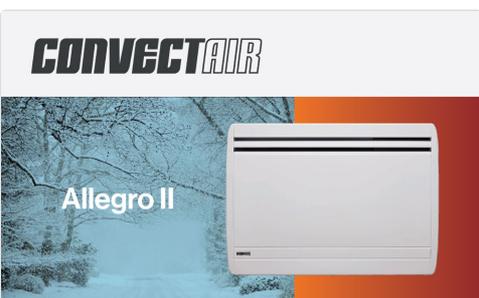

The wall-mounted design saves space and blends into your home decor.



Examples of Convectair Allegro II heaters in diverse home environments.

SETUP AND INSTALLATION

The Convectair Allegro 26 II is designed for wall-mount installation and is a hard-wired unit. Professional installation by a qualified electrician is recommended to ensure compliance with local electrical codes and safety standards.

Placement Considerations:

- **Room Type:** Suitable for bedrooms, home offices, and study rooms.
- **Clearance:** Maintain adequate clearance from walls, furniture, and other combustible materials as specified in the safety section.
- **Wall Mounting:** Ensure the mounting surface is structurally sound and capable of supporting the heater's weight (approximately 15.87 pounds).
- **Power Source:** This unit requires a corded electric connection. Ensure the electrical circuit can handle the 750 Watts heat output.

Installation Steps (Summary - Consult a professional):

1. Choose an appropriate wall location, considering clearances and room usage.
2. Secure the mounting bracket to the wall according to the provided template.
3. Connect the heater to the electrical supply. This is a hard-wired unit, requiring direct connection to your home's electrical system.
4. Mount the heater onto the secured bracket.
5. Verify all connections are secure and the heater is properly seated.

OPERATING INSTRUCTIONS

Your Convectair Allegro 26 II heater is equipped with a programmable thermostat for optimal comfort and energy management.

Initial Power-Up:

1. After installation, ensure the power supply to the heater is turned on at the circuit breaker.
2. The digital display on the thermostat will illuminate.

Setting the Temperature:

- Use the + and - buttons on the thermostat to adjust the desired room temperature.
- The heater will automatically maintain the set temperature using its natural convection heating method.

Programmable Features:

Refer to the detailed thermostat guide (if provided separately or on the unit) for instructions on setting schedules, modes (e.g., Comfort, Eco, Frost Protection), and other advanced programming options. These features allow you to optimize heating based on your daily routine.

Noiseless Operation:

The natural convection design ensures a virtually noiseless operation, making it ideal for quiet environments like bedrooms and offices.

MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your Convectair Allegro 26 II heater.

Cleaning:

- **Before Cleaning:** Always turn off the heater and disconnect power at the circuit breaker. Allow the unit to cool completely.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, solvents, or polishes, as these may damage the finish.
- **Air Vents:** Periodically use a soft brush or vacuum cleaner with a brush attachment to remove dust and debris from the air intake and exhaust vents. Ensure vents are never blocked.

General Checks:

- Inspect the power cord and connections for any signs of damage or wear. If damage is found, discontinue use and contact a qualified technician.
- Ensure the heater remains securely mounted to the wall.

TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply; circuit breaker tripped; thermostat set too low.	Check the circuit breaker. Ensure the heater is properly wired. Increase the thermostat setting.
Insufficient heating.	Thermostat set too low; room size exceeds heater capacity; air vents blocked.	Increase thermostat setting. Ensure the heater is appropriately sized for the room. Clear any obstructions from air vents.
Unusual noises.	Loose components; foreign object inside.	Turn off and unplug the heater. Inspect for loose parts or foreign objects. If noise persists, contact support.

Problem	Possible Cause	Solution
Heater cycles on/off too frequently.	Thermostat sensor obstructed or faulty; improper placement.	Ensure nothing is blocking the thermostat sensor. Verify proper heater placement away from drafts or direct sunlight.

If the problem persists after attempting these solutions, contact customer support or a qualified technician.

SPECIFICATIONS

Feature	Detail
Brand	Convectair
Model Number	7317-C07-FS
Heat Output	750 Watts
Heating Method	Natural Convection
Power Source	Corded Electric (Hard-wired)
Mounting Type	Wall Mount
Special Features	Noiseless, Programmable Thermostat
Room Type Recommendation	Bedroom, Home Office, Study Room
Product Dimensions	4.75 x 14.5 x 26.75 inches
Item Weight	15.87 pounds
ASIN	B01AWUM3H0
UPC	774725005892

WARRANTY INFORMATION

Convectair products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Convectair website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or any questions regarding your Convectair Allegro 26 II heater, please contact Convectair customer support. Contact details can typically be found on the manufacturer's website or on the product packaging.