

[Manuals.plus](#) /

> [Cuisinart](#) /

> Cuisinart 7-Cup Pro Classic Food Processor Instruction Manual

## Cuisinart DLC-10SYP1

# Cuisinart 7-Cup Pro Classic Food Processor Instruction Manual

Model: DLC-10SYP1

For Mincing, Dicing, Shredding, Puree & Kneading Dough

## PRODUCT OVERVIEW

The Cuisinart® 7-Cup Pro Classic Food Processor with a 600-watt motor is a versatile kitchen appliance designed for various food preparation tasks. It functions as a large-capacity food processor, blender, and vegetable chopper, capable of making dips, purees, soups, sauces, and more. Its robust motor and interchangeable blades make it an essential tool for efficient cooking.

Key features include:

- **Superior Function:** 600-watt motor for processing, blending, and chopping.
- **Easy to Use:** "On" and "Off/Pulse" buttons with an extra-large feed tube for whole fruits and vegetables.
- **Included Accessories:** Chopping/mixing/dough blade, stainless steel medium shredding disc, medium slicing disc (4mm), detachable disc stem, compact flat cover, spatula, and small/large pushers.
- **Quiet, Powerful Performance:** Heavy-duty motor operates quietly.
- **Warranty:** Full 5-year warranty on motor, limited 3-year warranty on the unit.





Figure 1: Cuisinart 7-Cup Pro Classic Food Processor.

## SETUP

Before first use, wash all removable parts (work bowl, lid, blades, discs, pushers) in warm, soapy water or on the top rack of a dishwasher. Ensure all parts are completely dry before assembly.

1. **Place the Motor Base:** Position the motor base on a clean, dry, and stable countertop surface.



Figure 2: Food processor placed on a kitchen countertop.

2. **Attach the Work Bowl:** Place the 7-cup work bowl onto the motor base. Align the handle with the front of the base and twist clockwise until it locks securely into place. You will hear a click when it is properly seated.
3. **Insert the Blade/Disc:** Select the appropriate blade (chopping/mixing/dough blade) or disc (slicing/shredding) for your task. Carefully place it onto the center stem inside the work bowl. Ensure it sits firmly on the drive shaft.

## Do-it-all discs and blade

Switch seamlessly from slicing to shredding to chopping.



Figure 3: Various blades and discs for different food preparation tasks.

4. **Secure the Cover:** Place the work bowl cover onto the work bowl. Align the feed tube with the handle and

twist clockwise until it locks. The food processor will not operate unless the cover is correctly locked.

5. **Insert the Pusher:** Insert the large food pusher into the feed tube. The small food pusher fits inside the large one for processing smaller items.



## Extra-large feed tube

Fits whole fruits and vegetables.

Figure 4: The extra-large feed tube accommodates whole fruits and vegetables.

## OPERATING INSTRUCTIONS

The Cuisinart 7-Cup Pro Classic Food Processor offers simple controls for efficient operation.

1. **Power On/Off/Pulse:** The control paddle on the front of the base has three positions: "OFF" (center), "ON" (up), and "PULSE" (down). The unit defaults to "OFF".



## Simple operation

Press the paddle for On, Off, and Pulse.

Figure 5: The control paddle for On, Off, and Pulse functions.

2. **Continuous Operation:** To run the food processor continuously, push the control paddle up to the "ON" position. The motor will run until the paddle is returned to "OFF" or the lid is opened.
3. **Pulse Function:** For short bursts of power or to achieve precise chopping/mixing, push the control paddle down to the "PULSE" position and release. The motor will run only while the paddle is held down.
4. **Adding Ingredients:** Ingredients can be added through the feed tube while the processor is running. For larger items, use the extra-large feed tube. For smaller items or liquids, use the small feed tube or drizzle through the small opening in the pusher.
5. **Processing Tasks:**
  - **Chop:** Use the chopping/mixing blade for mincing, chopping, and pureeing.
  - **Shred:** Use the medium shredding disc for cheese, vegetables, etc.
  - **Slice:** Use the medium slicing disc (4mm) for uniform slices of fruits and vegetables.
  - **Puree:** Use the chopping/mixing blade for smooth purees and sauces.
  - **Knead:** The dough blade is designed for kneading various types of dough.



Figure 6: Examples of various food preparation tasks achievable with the food processor.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Cuisinart Food Processor.

1. **Unplug Before Cleaning:** Always unplug the unit from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the food pusher, cover, blade/disc, and work bowl from the motor base.
3. **Washing Parts:** All removable parts are dishwasher safe (top rack recommended). For hand washing, use warm, soapy water and a non-abrasive sponge. Be extremely careful when handling sharp blades and discs.
4. **Cleaning the Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing. Store the unit and accessories in a safe place.

## TROUBLESHOOTING

If you encounter issues with your food processor, consider the following common solutions:

- **Unit Not Turning On:**

- Ensure the work bowl and cover are correctly assembled and locked into place. The safety interlock system prevents operation if not properly secured.
- Check that the unit is securely plugged into a working electrical outlet.

- **Motor Stalls or Overheats:**

- Do not overload the work bowl. Process ingredients in smaller batches if necessary.
- Allow the motor to cool down if it feels hot or stops unexpectedly. Unplug the unit and wait for at least 10-15 minutes before attempting to use it again.

- **Ingredients Not Processing Evenly:**

- Ensure ingredients are cut into appropriate sizes for the feed tube.
- Use the pulse function for better control over consistency.
- Scrape down the sides of the bowl with a spatula if ingredients are sticking.

## SPECIFICATIONS

Feature	Detail
Brand	Cuisinart
Model Name	DLC-10SYP1 Pro Classic 7-Cup Food Processor
Product Dimensions	7"D x 11.25"W x 14.5"H
Color	White
Bowl Capacity	7 Cups
Power Source	AC adapter
Blade Material	Stainless Steel
Number of Speeds	1
Item Weight	10.34 pounds
Is Dishwasher Safe	Yes (removable parts)

# Pro Classic™ 7-Cup Food Processor

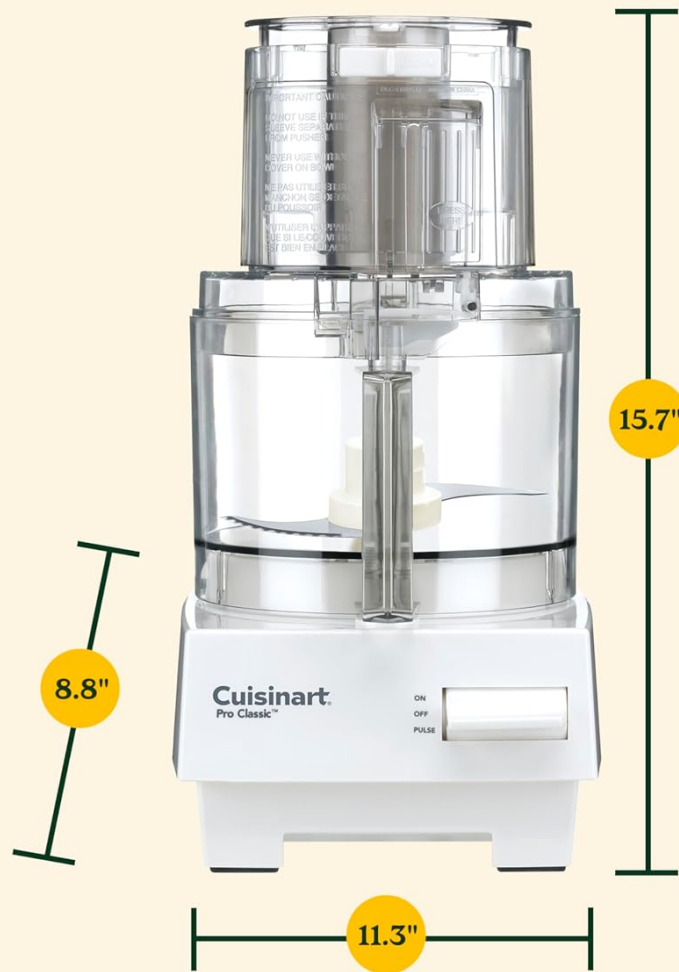


Figure 7: Product dimensions for the Cuisinart 7-Cup Pro Classic Food Processor.

## WARRANTY AND SUPPORT

Your Cuisinart 7-Cup Pro Classic Food Processor comes with comprehensive warranty coverage:

- **Limited 3-Year Warranty:** Covers the entire unit against defects in material or workmanship under normal home use.
- **Full 5-Year Warranty on Motor:** Specifically covers the motor for a period of five years from the date of original purchase.

For detailed warranty information, troubleshooting, or to contact customer support, please refer to the official user manual:

[Download User Manual \(PDF\)](#)

