

Indesit C00115404

Indesit Refrigerator/Freezer Left Side Door Hinge Pin (C00115404) Instruction Manual

Genuine Indesit Spare Part

1. PRODUCT OVERVIEW

This document provides essential information for the installation and maintenance of the Indesit Genuine Left Side Door Hinge Pin, model C00115404. This component is designed to ensure proper door function and closure on compatible Indesit refrigerators and freezers.

The hinge pin acts as a pivot point for the appliance door and includes a "close aid" mechanism to assist in the door's final closing action, preventing it from remaining ajar.

2. SAFETY INFORMATION

- Always disconnect the appliance from the main power supply before attempting any installation or repair.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- Handle small parts carefully to avoid loss or damage.
- If you are unsure about any step, consult a qualified technician.

3. PACKAGE CONTENTS

- 1 x Indesit Genuine Left Side Door Hinge Pin (C00115404)

4. INSTALLATION INSTRUCTIONS

This hinge pin is a replacement part for the left side door of compatible Indesit refrigerators and freezers. The installation process typically involves removing the old, damaged hinge pin and inserting the new one. Ensure you have the correct tools, such as screwdrivers or wrenches, as required by your specific appliance model.

- Preparation:** Disconnect the appliance from the power supply. Open the refrigerator or freezer door to access the hinge mechanism.
- Door Support:** If necessary, support the door to prevent it from falling when the hinge pin is removed. This may require a second person or temporary bracing.
- Remove Old Hinge Pin:** Carefully remove any retaining screws or clips securing the existing hinge pin. Extract the old hinge pin from its position. Note its orientation for correct installation of the new part.
- Insert New Hinge Pin:** Position the new Indesit Left Side Door Hinge Pin (C00115404) into the designated slot on

the left side of the appliance door frame. Ensure it is correctly aligned with the hinge mechanism on the door itself.

5. **Secure Hinge Pin:** Re-attach any retaining screws or clips that were removed earlier to secure the new hinge pin firmly in place.
6. **Test Door Function:** Gently open and close the door several times to ensure it swings freely and closes properly. The "close aid" feature should assist in the final closing action.
7. **Reconnect Power:** Once satisfied with the installation, reconnect the appliance to the main power supply.



Image 1: Top view of the Indesit Left Side Door Hinge Pin (C00115404). This image shows the overall shape and the main pivot point of the hinge pin, which is crucial for proper door alignment.



Image 2: Side view of the Indesit Left Side Door Hinge Pin (C00115404). This perspective highlights the "close aid" mechanism and the various grooves and protrusions that ensure a secure fit and proper door closing assistance.

5. OPERATION

Once installed, the hinge pin facilitates the smooth opening and closing of your appliance door. The integrated "close aid" feature is designed to gently pull the door shut in its final few degrees of movement, ensuring a complete seal and preventing energy loss.

6. MAINTENANCE

- **Cleaning:** Periodically inspect the hinge pin area for any dirt or debris. Clean with a soft, damp cloth if necessary. Avoid abrasive cleaners.
- **Inspection:** Check the hinge pin for any signs of wear or damage. If the door starts to sag or does not close properly, inspect the hinge pin for potential issues.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Door does not close completely or sags.	Hinge pin not installed correctly or damaged.	Re-check installation steps. Ensure the hinge pin is fully seated and secured. Inspect for any damage to the pin or surrounding hinge components.
Door is stiff or difficult to open/close.	Debris in hinge mechanism or hinge pin misalignment.	Clean the hinge area. Verify the hinge pin is correctly aligned and not binding.

8. SPECIFICATIONS

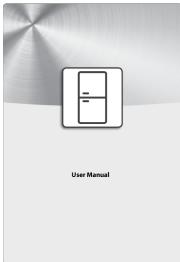
- Part Type:** Left Side Door Hinge Pin / Close Aid
- Brand:** Indesit
- Model Number:** C00115404
- Material:** Plastic
- Compatibility:** Genuine spare part for various Indesit refrigerator and freezer models. Refer to your appliance's specific model number for exact compatibility.

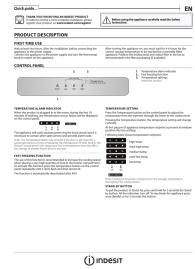
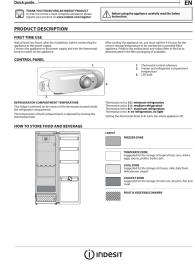
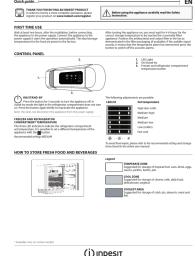
9. WARRANTY AND SUPPORT

As a genuine Indesit spare part, this product is typically covered by the manufacturer's standard warranty for spare parts. Please retain your proof of purchase. For specific warranty details or technical support, please contact Indesit customer service or the retailer from whom the part was purchased.

For further assistance, you may visit the official [Indesit website](#).

Related Documents - C00115404

  <small>CE INDESIT PLR011REF1SLHRSR</small>	<p>User Manual for Refrigerators - Comprehensive Guide</p> <p>This user manual provides detailed instructions for the use, care, cleaning, and maintenance of refrigerators. It covers general information, how to use the appliance, food storage tips for both refrigerator and freezer compartments, troubleshooting common sounds, and after-sales service information.</p> <p>Indesit Refrigerator User Manual</p> <p>This user manual provides comprehensive instructions for the Indesit refrigerator, covering safety, installation, daily use, and troubleshooting to ensure efficient and safe operation.</p>
--	---

 	<p>Indesit Quick Guide: Product Description, Setup, and Troubleshooting</p> <p>Concise guide for your Indesit appliance, covering initial setup, control panel functions, temperature settings, food storage, and troubleshooting common issues. Register your product for complete assistance.</p>
 	<p>Indesit Refrigerator Quick Guide and User Manual</p> <p>Get started with your Indesit refrigerator. This quick guide covers first-time use, product description, food storage, and troubleshooting. Find comprehensive support and register your appliance at www.indesit.com/register.</p>
	<p>Indesit UI6 F2T W Upright Freezer: Quick Start Guide</p> <p>Quick start guide for the Indesit UI6 F2T W upright freezer. Learn about its controls, functions like Party Mode and Eco Night, and how to handle alarms. Features a detailed component list and operational tips.</p>
 	<p>Indesit Refrigerator Quick Guide: First Use, Controls, and Food Storage</p> <p>A quick guide for Indesit refrigerators, covering first-time use, control panel operation, and optimal food storage in different temperature zones. Includes troubleshooting tips.</p>