

[Manuals.plus](#) /

› [Cutex](#) /

› Cutex 20 Large Bobbins #150971-0-01 Instruction Manual

Cutex 150971-0-01

Cutex 20 Large Bobbins #150971-0-01 Instruction Manual

INTRODUCTION

This manual provides instructions for the proper use and maintenance of Cutex Large Bobbins, model #150971-0-01. These bobbins are designed for specific industrial sewing machines to ensure optimal performance and thread management.



Image: A pack of 20 Cutex large metal bobbins, model #150971-0-01, suitable for various industrial sewing machines.

PRODUCT COMPATIBILITY

Cutex Large Bobbins #150971-0-01 are compatible with a range of industrial sewing machines. Verify your machine model against the list below:

- **Brother:** B837, B837-5, B838
- **Consew:** 244 Class, 254 Class, 255 Class, 282RB, 289RB, 327RB-1, 328RB-1, 333 Class, 339 Class, 388 Class, 389RB
- **Eagle:** EA-256RB, 2156RB
- **Juki:** LH-1172
- **Prince:** PLM-100
- **Seiko:** LLW All Class, LPW-6BL, LPW-6L, LPW-7BL, LPW-7L, LPW-8BL, LPW-8, LPW-26BL, LPW-26L, LPW-27BL, LPW-27L, LPW-28BL, LPW-28L, LSW-6L, LSW-7BL, LSW-7L, LSW-8BLC, LSW-8BLM, LSW-8L, LSW-8LC, LSW-8LM, LSW-26BL, LSW-26L, LSW-26LH, LSW-27BL, LSW-27L, LSW-28BL, LSW-28L, LSW-27BLM
- And many other compatible models.

These bobbins are also known by part numbers: BO-1215L-N, 15041, 150971-001, 103-54009, 2121404-321.

SETUP: WINDING THE BOBBIN

1. **Prepare Thread:** Select the appropriate thread for your sewing project.
2. **Place Bobbin:** Position an empty Cutex bobbin onto the bobbin winder spindle of your sewing machine.
3. **Thread Path:** Follow your sewing machine's specific instructions for guiding the thread through the tension discs and to the bobbin winder.
4. **Start Winding:** Engage the bobbin winder and begin winding the thread. Ensure the thread winds evenly and smoothly onto the bobbin.
5. **Fill Bobbin:** Continue winding until the bobbin is adequately filled, leaving a small margin to prevent overfilling.
6. **Cut Thread:** Once winding is complete, cut the thread and remove the filled bobbin from the spindle.

Refer to your sewing machine's user manual for detailed bobbin winding procedures specific to your model.

OPERATING: INSERTING AND USING THE BOBBIN

1. **Open Bobbin Case/Area:** Depending on your sewing machine model, open the bobbin case or access the bobbin compartment.
2. **Insert Bobbin:** Place the wound Cutex bobbin into the bobbin case or compartment. Ensure the thread unwinds in the correct direction as specified by your machine's manual (usually clockwise or counter-clockwise).
3. **Thread Bobbin Case:** Guide the bobbin thread through the tension spring or slot in the bobbin case. This step is crucial for proper stitch formation.
4. **Close Bobbin Case/Area:** Securely close the bobbin case or compartment.
5. **Bring Up Bobbin Thread:** Lower the needle into the needle plate, turn the handwheel to pick up the bobbin thread, and pull both the bobbin and needle threads to the back of the machine.
6. **Begin Sewing:** Your machine is now ready for operation with the Cutex bobbin.

Incorrect bobbin insertion or tension can lead to stitching problems. Always consult your sewing machine's manual for precise instructions.

MAINTENANCE

- **Cleaning:** Periodically inspect bobbins for lint or thread residue. Clean with a soft brush or compressed air if necessary.

- **Storage:** Store bobbins in a clean, dry container to prevent dust accumulation and tangling.
- **Inspection:** Before each use, check bobbins for any deformities or damage that could affect thread winding or machine operation. Discard damaged bobbins.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Uneven Bobbin Winding	Incorrect thread path during winding, bobbin winder malfunction.	Ensure thread is correctly routed through tension discs. Check bobbin winder mechanism.
Thread Breakage (Bobbin Thread)	Bobbin overfilled, incorrect bobbin tension, damaged bobbin, burrs in bobbin case.	Do not overfill bobbins. Adjust bobbin tension. Inspect bobbin for damage. Clean bobbin case.
Skipped Stitches	Incorrect bobbin insertion, improper bobbin tension.	Re-insert bobbin correctly. Adjust bobbin tension according to machine manual.
Loopy Stitches on Fabric Underside	Upper thread tension too tight, or bobbin thread tension too loose.	Adjust upper thread tension. Check bobbin tension.

For persistent issues, consult your sewing machine's specific troubleshooting guide or a qualified technician.

SPECIFICATIONS

Model Number: #150971-0-01 (also 15097-01)

Quantity: 20 bobbins per pack

Material: Metal

Diameter: 1-1/8" (29mm)

Thickness: 7/16" (12mm)

Approximate Item Weight: 15.2 ounces (for the pack)

GTIN (UPC): 747465101520

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01B0I4B1Y>

More documents and user manuals: <https://manuals.plus/>