

[Manuals.plus](#) /

› [Pentel](#) /

› Pentel P207 Sharp Mechanical Pencil User Manual

Pentel Pentel P207 Sharp Mech Pencil 0.7mm Met.

Pentel P207 Sharp Mechanical Pencil User Manual

Brand: Pentel

INTRODUCTION

This manual provides comprehensive instructions for the use, maintenance, and troubleshooting of your Pentel P207 Sharp Mechanical Pencil. Designed for precision and durability, the P207 is a reliable tool for drafting, writing, and general use. Please read this manual carefully to ensure optimal performance and longevity of your pencil.

PRODUCT OVERVIEW



Figure 1: The Pentel P207 Sharp Mechanical Pencil, featuring a metallic copper barrel, a silver pocket clip, and a 0.7mm lead tip. The pencil is shown diagonally against a white background, highlighting its sleek design and functional components.

The Pentel P207 is renowned for its superior construction and precision. Key features include:

- **Durable Construction:** Built to last, ideal for daily use.
- **4mm Tip Design:** Excellent for use with rulers and templates, providing clear visibility of the drawing surface.
- **0.7mm Lead Size:** Compatible with Pentel Super Hi-Polymer HB lead, equivalent to a #2 pencil, offering smooth and consistent lines.
- **Metallic Copper Barrel:** A stylish and comfortable grip.
- **Integrated Eraser:** A small, refillable eraser located under the cap for precise corrections.

SETUP

Loading Lead

1. **Remove the Push Button:** Gently pull the push button (top cap) off the end of the pencil. This will expose the lead

reservoir.

- 2. **Insert Lead:** Insert 2-3 pieces of 0.7mm Pentel Super Hi-Polymer HB lead into the open tube. Do not overfill, as this can cause jamming.
- 3. **Replace Push Button:** Firmly push the push button back onto the pencil until it clicks into place.
- 4. **Advance Lead:** Press the push button repeatedly until the lead extends from the tip to your desired length.

Replacing the Eraser

- 1. **Remove the Push Button:** As with loading lead, pull off the push button.
- 2. **Remove Old Eraser:** Carefully pull out the used eraser from its holder.
- 3. **Insert New Eraser:** Insert a new Pentel Z2-1N refill eraser into the holder. Ensure it is seated firmly.
- 4. **Replace Push Button:** Push the push button back onto the pencil.

OPERATING INSTRUCTIONS

- **Advancing Lead:** To advance the lead, simply press the push button at the top of the pencil. Each press will extend the lead by a small increment.
- **Retracting Lead:** To retract the lead, press and hold the push button, then gently push the lead back into the tip with your finger or against a surface. Release the button once the lead is retracted.
- **Erasing:** Remove the push button to access the eraser. Use the eraser for precise corrections. Replace the push button after use.
- **Drafting and Drawing:** The 4mm fixed sleeve tip is ideal for technical drawing and use with straightedges, templates, and stencils, providing stability and clear line visibility.

MAINTENANCE

- **Lead Replacement:** Always use high-quality 0.7mm lead, such as Pentel Super Hi-Polymer HB lead, to prevent breakage and ensure smooth operation.
- **Eraser Replacement:** Replace the eraser when it becomes worn down to maintain effective erasing. Use only genuine Pentel Z2-1N refill erasers.
- **Cleaning the Tip:** If lead dust accumulates in the tip, gently tap the pencil on a hard surface with the tip facing down to dislodge debris. Avoid using sharp objects to clean the tip, as this may damage the mechanism.
- **Storage:** Store your mechanical pencil in a clean, dry place away from extreme temperatures to prevent damage to the lead and internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lead does not advance.	Lead reservoir is empty, lead is jammed, or incorrect lead size.	Check lead supply and refill if necessary. Gently tap the pencil tip down to dislodge any jammed lead. Ensure you are using 0.7mm lead.

Problem	Possible Cause	Solution
Lead breaks frequently.	Too much lead extended, excessive writing pressure, or low-quality lead.	Extend less lead. Reduce writing pressure. Use high-quality Pentel Super Hi-Polymer HB lead.
Eraser is ineffective.	Eraser is worn out or dirty.	Replace the eraser with a new Pentel Z2-1N refill eraser. Clean the eraser surface if it's just dirty.

SPECIFICATIONS

Feature	Detail
Brand	Pentel
Model Number	Pentel P207 Sharp Mech Pencil 0.7mm Met.
Lead Size	0.7 Millimeters
Lead Hardness	HB (equivalent to #2 pencil)
Tip Type	4mm Fixed Sleeve (Metal)
Color	Metallic Copper
Material	Copper (Barrel)
Item Weight	0.48 ounces
Product Dimensions	5 x 1 x 1 inches
Closure Type	Retractable

WARRANTY INFORMATION

Pentel products are manufactured to the highest quality standards. For specific warranty details regarding your Pentel P207 Sharp Mechanical Pencil, please refer to the official Pentel website or contact Pentel customer support. Generally, Pentel offers a limited warranty against defects in materials and workmanship.

CUSTOMER SUPPORT

Should you require further assistance or have questions not covered in this manual, please contact Pentel customer support through their official channels:

- **Website:** Visit the official Pentel website for FAQs, product information, and contact forms.
- **Contact Information:** Refer to the packaging or Pentel's website for phone numbers or email addresses for direct support.

When contacting support, please have your product model number (P207) and a description of your issue ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question