

[manuals.plus](#) /› [Logitech](#) /› [Logitech M545 Wireless Mouse Instruction Manual](#)

Logitech M545

Logitech M545 Wireless Mouse Instruction Manual

Model: M545 | Brand: Logitech

PRODUCT OVERVIEW

The Logitech M545 Wireless Mouse is engineered for efficient and comfortable navigation. Featuring a Dual-Axis scroll wheel and two easy-to-reach thumb buttons, it simplifies browsing documents and web pages. Its ergonomic design supports both right and left-hand use, ensuring comfort during extended periods. The mouse operates wirelessly via a nano-sized Logitech Unifying Receiver, offering a reliable plug-and-play connection and an impressive 18-month battery life.



Image: Top view of the Logitech M545 Wireless Mouse, showcasing its ergonomic shape and button layout.

Key Features:

- **Dual-Axis Scroll Wheel:** Enables both vertical and side-to-side scrolling for enhanced navigation.
- **Programmable Thumb Buttons:** Customize functions like back/forward, application switching, or opening browser windows.
- **18-Month Battery Life:** Extended usage with smart sleep mode, reducing the need for frequent battery changes.
- **Logitech Unifying Receiver:** A compact USB receiver that allows connection of up to six compatible wireless devices.
- **Ergonomic Design:** Comfortable shape for prolonged use, suitable for both right and left-handed users.
- **Broad Compatibility:** Works seamlessly with Mac and Windows computers and laptops.

SETUP INSTRUCTIONS

1. Install Batteries:

- Locate the battery compartment on the underside of the mouse.
- Open the compartment cover.
- Insert two AA batteries, ensuring correct polarity (+/-).

- Close the battery compartment cover securely.

2. Connect the Unifying Receiver:

- Remove the nano-sized Logitech Unifying Receiver from its storage slot within the battery compartment (if stored there).
- Plug the Unifying Receiver into an available USB port on your computer.

3. Power On the Mouse:

- Slide the On/Off switch on the bottom of the mouse to the "On" position.
- The mouse should automatically connect to the receiver.

4. Install Logitech Options Software (Optional but Recommended):

- For advanced customization of buttons and scroll wheel, download and install the Logitech Options software from the official Logitech website (logitech.com/software/options.html).

OPERATING THE MOUSE

The Logitech M545 is designed for intuitive use. Here's how to utilize its main functions:

- **Left and Right Click:** Standard mouse buttons for selecting items and opening context menus.
- **Dual-Axis Scroll Wheel:**
 - Roll the wheel up or down to scroll vertically through documents and web pages.
 - Tilt the scroll wheel left or right for horizontal scrolling, useful in wide spreadsheets or image galleries.
- **Thumb Buttons:** Located on the side of the mouse, these buttons are pre-programmed for common actions like "Back" and "Forward" in web browsers. You can customize their functions using the Logitech Options software.
- **Smart Sleep Mode:** The mouse automatically enters a power-saving sleep mode when not in use, extending battery life. Move or click the mouse to wake it up.

MAINTENANCE

• Battery Replacement:

- When the battery indicator light (if present) flashes, or performance degrades, it's time to replace the batteries.
- Open the battery compartment on the underside of the mouse.
- Remove the old AA batteries and insert new ones, observing correct polarity.
- Close the compartment.
- The mouse is designed for an 18-month battery life under typical usage.

• Cleaning:

- To clean the mouse, use a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- Ensure no moisture enters the internal components.

TROUBLESHOOTING

• Mouse Not Responding:

- Ensure the mouse is powered on.

- Check battery levels and replace if necessary.
- Verify the Unifying Receiver is securely plugged into a working USB port. Try a different USB port.
- Restart your computer.

- **Lagging or Intermittent Connection:**

- Move the mouse closer to the Unifying Receiver.
- Avoid placing the receiver near other electrical devices that might cause interference (e.g., speakers, monitors).
- Ensure there are no large metal objects between the mouse and the receiver.

- **Buttons or Scroll Wheel Not Working as Expected:**

- If you have installed Logitech Options software, check your custom settings.
- Reinstall the Logitech Options software if issues persist.
- Ensure your operating system drivers are up to date.

SPECIFICATIONS

Brand	Logitech
Model Number	910-004054
Connectivity Technology	USB, Wireless (2.4 GHz Radio Frequency)
Movement Detection Technology	Optical
Color	Black
Item Weight	3.37 ounces
Product Dimensions	5.67 x 3.5 x 8.3 inches
Power Source	Battery Powered (2x AA batteries, not 1 Lithium Polymer as per general product type and common usage)
Average Battery Life	18 months
Hardware Platform	PC
Operating System Compatibility	Windows 8 (and later versions, Mac compatible)

WARRANTY INFORMATION

Logitech products typically come with a limited hardware warranty. For specific warranty details, including duration and terms, please refer to the warranty information included with your product packaging or visit the official Logitech support website.

CUSTOMER SUPPORT

For further assistance, technical support, or to download the latest drivers and software, please visit the official Logitech support website:

Logitech Support

You can also find additional resources and community forums on the Logitech website.