



[Manuals.plus](#) /

› [JACQUES LEMANS](#) /

› Jacques Lemans Liverpool Moonphase 1-1901 Watch User Manual

## JACQUES LEMANS Liverpool Moonphase 1-1901

# Jacques Lemans Liverpool Moonphase 1-1901 Watch User Manual

Model: 1-1901

## INTRODUCTION

---

This manual provides instructions for the proper use and care of your Jacques Lemans Liverpool Moonphase 1-1901 Analog Blue Dial Men's Watch. Please read this manual carefully to ensure optimal performance and longevity of your timepiece.

## UNBOXING AND PACKAGING

---

Your Jacques Lemans watch comes securely packaged in a branded box. Upon opening, you will find the watch nestled on a cushion.



Image: Jacques Lemans watch packaging box. Note: Actual packaging may vary slightly from the image shown.

## PRODUCT OVERVIEW

The Jacques Lemans Liverpool Moonphase 1-1901 is an analog quartz watch featuring a blue dial, moon-phase indicator, and luminous hands/markers. It is designed for men and includes a leather band.



Box supplied may be different from picture

Image: Jacques Lemans Liverpool Moonphase 1-1901 watch. This image displays the watch's blue dial, gold-tone bezel, and multi-color leather strap.

### Key Features:

- **Dial Color:** Blue
- **Case Shape:** Round
- **Dial Glass Material:** Glass
- **Band Material:** Leather, Multi-Colour
- **Movement Type:** Quartz
- **Display Type:** Analog
- **Case Material:** Stainless Steel (Silver tone) with Gold Bezel
- **Case Diameter:** 44 millimeters
- **Water Resistance Depth:** 10 meters
- **Clasp Type:** Buckle
- **Special Features:** Moon-phase indicator, Neo-display (luminous coating on hands and markers for illumination in the dark).

### SETUP

## 1. Setting the Time

1. Pull the crown out to the second click position.
2. Turn the crown to set the hour and minute hands to the desired time. Ensure AM/PM is correctly set if the watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back into the normal position.

## 2. Setting the Date

1. Pull the crown out to the first click position.
2. Turn the crown clockwise or counter-clockwise (depending on the movement) to set the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
3. Push the crown back into the normal position.

## 3. Setting the Moonphase

The moon-phase indicator is typically set using a small recessed pusher on the side of the watch case, or by rotating the crown in the first click position. Consult a local watchmaker if you are unsure, as incorrect adjustment can damage the mechanism.

- Locate the moon-phase corrector button (often a small indentation on the case side).
- Use a non-metallic pointed tool (e.g., a toothpick) to gently press the corrector button until the moon-phase display advances to the desired phase.
- Refer to a current moon calendar to set the correct moon phase.

## OPERATING YOUR WATCH

---

### Timekeeping

Once set, your quartz watch will keep accurate time. The luminous hands and markers provide visibility in low-light conditions.

### Water Resistance

This watch has a water resistance depth of 10 meters (1 ATM). This rating means the watch is suitable for splashes or brief immersion in water, but it is **not** suitable for swimming, showering, or diving. Ensure the crown is fully pushed in to maintain water resistance.

## MAINTENANCE

---

### Cleaning

- Wipe the watch case and crystal with a soft, dry cloth.
- For the leather strap, avoid prolonged exposure to water and direct sunlight. Clean with a specialized leather cleaner if necessary, or simply wipe with a damp cloth and dry immediately.
- Do not use chemical cleaners or abrasive materials.

### Battery Replacement

The watch is powered by a quartz movement, requiring a battery. When the battery runs low, the watch may stop or the second hand may skip. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

## Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight and strong magnetic fields. The original watch box is ideal for storage.

## TROUBLESHOOTING

- **Watch not running:** Check if the crown is pushed in completely. If it is, the battery may need replacement.
- **Date/Moonphase not changing:** Ensure the time is set correctly, passing midnight. Avoid setting the date/moonphase during the forbidden hours (9 PM - 3 AM).
- **Condensation under crystal:** This indicates a loss of water resistance. Seek professional service immediately to prevent damage to the movement.

## SPECIFICATIONS

Feature	Detail
Brand	JACQUES LEMANS
Model Number	Liverpool Moonphase 1-1901
Movement Type	Quartz
Display Type	Analog
Dial Color	Blue
Case Material	Stainless Steel
Case Diameter	44 Millimetres
Case Thickness	11 Millimetres
Band Material	Leather
Band Width	20 Millimetres
Water Resistance Depth	10 Metres (1 ATM)
Item Weight	66 g (0.07 Kilograms)
Special Features	Moon-phase indicator, Luminous hands and markers

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact Jacques Lemans customer service directly. Keep your proof of purchase for any warranty claims.

**Note:** Unauthorized repairs or modifications may void your warranty.

