

[Manuals.plus](#) /

› [JACQUES LEMANS](#) /

› Jacques Lemans Liverpool Moonphase 1-1901 Watch Instruction Manual

## JACQUES LEMANS Liverpool Moonphase 1-1901

# Jacques Lemans Liverpool Moonphase 1-1901 Watch Instruction Manual

Model: Liverpool Moonphase 1-1901

## 1. PRODUCT OVERVIEW

---

Thank you for choosing the Jacques Lemans Liverpool Moonphase 1-1901 watch. This timepiece features a robust stainless steel case with a rose gold ion-plated bezel, a white structured dial with luminescent hands and markers, and a stainless steel bracelet. It is equipped with a precise quartz movement offering multifunctionality including date, day of the week, and moon phase displays. The watch is protected by a Crystex mineral crystal and is water-resistant to 10 bar.



Image 1.1: Front view of the Jacques Lemans Liverpool Moonphase 1-1901 watch, showcasing its white dial, rose gold-coloured indexes, and stainless steel bracelet.

## 2. SETUP INSTRUCTIONS

---

Before wearing your watch, it is essential to set the correct time, date, day of the week, and moon phase. The watch features a crown on the side for adjustments.



Image 2.1: Side view of the watch, highlighting the crown used for setting functions.

### 2.1 Setting the Time

1. Pull the crown out to its outermost position (Position 3). The second hand will stop.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time. Ensure you distinguish between AM and PM for correct date change.
3. Push the crown back into Position 1 (normal operating position) to start the watch.

### 2.2 Setting the Date and Day of the Week

1. Pull the crown out to the middle position (Position 2).
2. Turn the crown in one direction (e.g., clockwise) to adjust the date.
3. Turn the crown in the other direction (e.g., counter-clockwise) to adjust the day of the week.
4. Avoid setting the date or day between 9 PM and 3 AM, as this is when the automatic date change mechanism is engaged and could be damaged. If you need to set the date during this period, first set the time outside this window, adjust the date/day, then reset the time.
5. Once set, push the crown back into Position 1.

### 2.3 Setting the Moon Phase

The moon phase display is typically adjusted using a small recessed pusher on the side of the watch case, or by rotating the crown in Position 2. Consult the specific markings on your watch or refer to a detailed diagram if available. Generally, you will press the pusher repeatedly or turn the crown until the moon phase display shows the current phase of the moon.

## 3. OPERATION

---

### 3.1 Wearing the Watch

Ensure the stainless steel bracelet is adjusted to fit comfortably on your wrist. The folding clasp provides a secure closure. The watch should be worn snugly enough not to slide freely, but not so tight as to restrict circulation.

### 3.2 Water Resistance

Your Jacques Lemans Liverpool Moonphase 1-1901 watch is water-resistant to 10 bar (100 meters / 330 feet). This rating makes it suitable for swimming, snorkeling, and showering. However, it is **not** suitable for high-impact water sports, diving, or prolonged submersion at significant depths. Always ensure the crown is fully pushed in before any contact with water. Do not operate the crown or pushers while the watch is wet or submerged.

 


Image 3.1: Back view of the watch, displaying the 'WATER RESISTANT 10 BAR' engraving.

## 4. CARE AND MAINTENANCE

---

### 4.1 Cleaning Your Watch

To maintain the appearance of your watch, regularly wipe the case and bracelet with a soft, dry cloth. For stainless steel parts, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

### 4.2 Battery Replacement

Your watch is powered by a product-specific battery (included). When the battery power is low, the second hand may start to jump in two-second intervals (End-of-Life indicator). It is recommended to have the battery replaced by a qualified watchmaker or an authorized service center to ensure the water resistance and proper functioning of the watch are maintained. Do not attempt to replace the battery yourself.

### 4.3 General Care

- Avoid exposing your watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F) or sudden temperature changes.
- Keep the watch away from strong magnetic fields, as these can affect the accuracy of the quartz movement.
- Protect your watch from impacts and shocks.

## 5. TROUBLESHOOTING

---

### 5.1 Watch Not Running / Incorrect Time

- **Check the crown:** Ensure the crown is fully pushed in to Position 1. If it is pulled out, the watch will not run.
- **Battery:** If the watch has stopped completely, the battery may need replacement. Look for the End-of-Life indicator (second hand jumping every two seconds).
- **Impact:** If the watch has suffered a severe impact, internal components may be damaged. Seek professional service.

### 5.2 Condensation Inside the Crystal

If you notice condensation under the crystal, it indicates a breach in the watch's water resistance. This requires immediate attention from a professional watchmaker to prevent further damage to the movement.

## 6. PRODUCT SPECIFICATIONS

---

Feature	Specification
Brand	JACQUES LEMANS
Model Number	Liverpool Moonphase 1-1901
Display Type	Analog
Movement	Quartz with multifunction (Date, Day, Moon Phase)
Case Material	Stainless Steel, Rose Gold Ion-Plated Bezel

Feature	Specification
Case Diameter	44 Millimetres
Case Thickness	11 Millimetres
Crystal	Crystex Mineral Crystal
Dial Colour	White structured
Band Material	Stainless Steel Bracelet
Band Width	22 Millimetres
Clasp Type	Folding Clasp
Water Resistance Depth	10 Bar (100 Metres / 330 Feet)
Item Weight	155 g (0.16 Kilograms)
Batteries	1 Product Specific battery (included)

## 7. WARRANTY AND SUPPORT

---

### 7.1 Warranty Information

Your Jacques Lemans Liverpool Moonphase 1-1901 watch comes with a **two-year warranty**. This warranty covers manufacturing defects on the watch itself, specifically the movement, case, and crystal. Other parts, such as the bracelet, battery, or damage due to misuse, are not covered under this warranty.

To claim warranty service, please retain your proof of purchase and contact the authorized Jacques Lemans service center or the retailer from whom you purchased the watch. Any unauthorized repair or alteration will void the warranty.

### 7.2 Customer Support

For any questions, technical assistance, or service inquiries not covered by this manual, please contact Jacques Lemans customer support or visit their official website for a list of authorized service partners.



Image 7.1: The watch is presented in a Jacques Lemans branded packaging box.