

[Manuals.plus](#) /

› [BRAUN](#) /

› Braun HC5090 Hair Clipper and Trimmer User Manual

BRAUN HC5090

Braun HC5090 Hair Clipper and Trimmer User Manual

Model: HC5090

INTRODUCTION

This manual provides essential instructions for the safe and effective operation, maintenance, and care of your Braun HC5090 Hair Clipper and Trimmer. Please read all instructions carefully before using the appliance for the first time and retain this manual for future reference.





Image: The Braun HC5090 Hair Clipper, a cordless and rechargeable electric cutting machine.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or fire, always observe the following safety precautions:

- This appliance is suitable for use by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the appliance in water.
- Always unplug the appliance from the power outlet immediately after use, before cleaning, and if it is left unattended.

- Do not use the appliance with a damaged cord or plug.
- Keep the appliance dry.
- Use with caution to avoid injury. Follow recommended cleaning and maintenance procedures.

PRODUCT COMPONENTS

The Braun HC5090 Hair Clipper comes with several components designed for versatile hair trimming.



Image: The Braun HC5090 Hair Clipper shown with its charging stand, two comb attachments, cleaning brush, oil bottle, and storage bag.

- Hair Clipper Unit
- Two Smart Trimming Attachments (Combs)
- Charging Stand
- Power Cord
- Cleaning Brush
- Lubricating Oil
- Storage Bag

SETUP AND CHARGING

1. **Initial Charge:** Before first use, fully charge the hair clipper for approximately 8 hours. This ensures optimal battery performance.
2. **Connecting to Power:** Connect the power cord to the charging stand, then plug the adapter into an electrical outlet.
3. **Placing the Clipper:** Place the hair clipper into the charging stand. The charging indicator light will illuminate, indicating that the unit is charging.
4. **Cordless Operation:** The powerful dual battery provides constant power for perfectly even hair clipping. A full charge provides approximately 50 minutes of cordless operation.
5. **Quick Charge:** A 5-minute quick charge provides enough power for one trim.

OPERATING INSTRUCTIONS

Attaching and Adjusting Comb Attachments

The HC5090 features two smart trimming attachments, allowing for 17 length settings.



Image: The Braun HC5090 Hair Clipper with a comb attachment securely fitted, ready for use.

1. **Select Comb:** Choose the appropriate comb attachment for your desired hair length.
2. **Attach Comb:** Slide the comb attachment onto the clipper head until it clicks into place.
3. **Adjust Length:** Use the length setting dial on the clipper to select one of the 16 available lengths. The memory safety lock system conveniently locks and memorizes the last used setting.
4. **Short Length:** For an extra short length setting, the clipper can be used without any comb attachment.

Trimming Hair



Image: A man using the Braun HC5090 Hair Clipper to trim his hair, demonstrating typical usage.

1. **Preparation:** Ensure hair is clean and dry.
2. **Power On:** Press the power button to turn on the clipper.
3. **Trimming Technique:** Move the clipper against the direction of hair growth, ensuring the flat part of the comb attachment rests evenly against the scalp. Use smooth, even strokes.
4. **Lifetime Sharp Blades:** The clipper is equipped with lifetime lasting sharp blades for precise and efficient cutting.
5. **Power Off:** After use, press the power button to turn off the clipper.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Braun HC5090 Hair Clipper.

- **Cleaning Blades:** The clipper is fully washable. After each use, remove the comb attachment and rinse the clipper head and blades under running water.

- **Drying:** Shake off excess water and allow the clipper to air dry completely before storing or recharging.
- **Lubrication:** Periodically apply a small drop of the provided lubricating oil to the blades to maintain their sharpness and smooth operation. Do this after cleaning and drying.
- **Storage:** Store the clipper and its accessories in the provided storage bag in a dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is discharged.	Charge the clipper for at least 8 hours for a full charge, or 5 minutes for a quick trim.
Clipper pulls hair or cuts poorly.	Blades are dirty or not lubricated. Hair is wet.	Clean the blades thoroughly and apply lubricating oil. Ensure hair is dry before trimming.
Charging indicator light does not illuminate.	Clipper not properly seated in charging stand, or power cord/adaptor issue.	Ensure the clipper is correctly placed in the stand. Check power cord and adapter connections. Try a different outlet.

SPECIFICATIONS

- **Model:** HC5090
- **Brand:** BRAUN
- **Power Source:** Rechargeable dual battery system (Cordless)
- **Battery Runtime:** Approximately 50 minutes on a full charge
- **Blade Material:** Stainless Steel
- **Length Settings:** 17 (with 2 comb attachments)
- **Special Features:** Fully washable blades, Memory Safety Lock System
- **Product Dimensions:** 15.4 x 5.6 x 22 cm
- **Item Weight:** 0.43 Kilograms
- **Color:** Silver

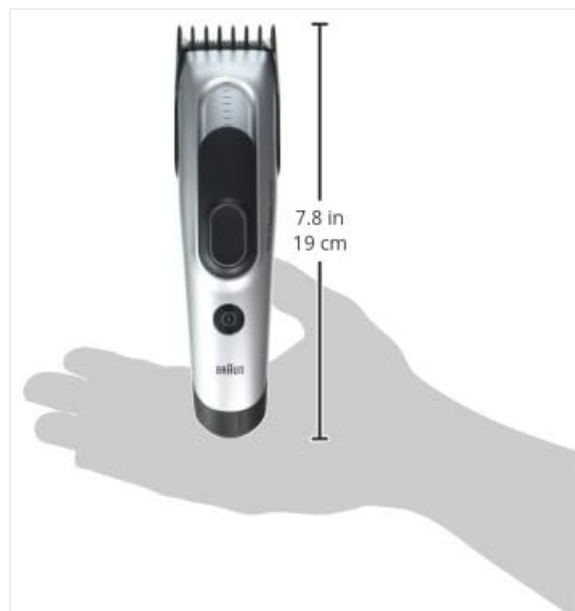


Image: Diagram illustrating the dimensions of the Braun HC5090 Hair Clipper, showing a length of 7.8 inches (19 cm).

WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the warranty card included with your product or visit the official Braun website. Keep your purchase receipt as proof of purchase.

Manufacturer: BRAUN

Place of Business: North York, ON M2N 6K8, CA

Date First Available: February 9, 2016



© BRAUN. All rights reserved.