

[Manuals.plus](#) /

› [Displays2go](#) /

› Displays2go SHFMT3255B VESA TV Mount with Glass Shelf Instruction Manual

Displays2go SHFMT3255B

Displays2go SHFMT3255B VESA TV Mount with Glass Shelf

INSTRUCTION MANUAL

Introduction

This manual provides comprehensive instructions for the safe and proper installation, operation, and maintenance of your Displays2go SHFMT3255B VESA TV Mount with Glass Shelf. Please read this manual thoroughly before beginning installation and retain it for future reference. This TV mount is designed to securely hold 32-55 inch HDTV monitors and includes a tempered glass shelf for media devices.

Safety Information

WARNING: Failure to read and follow these instructions can result in serious personal injury, property damage, or voiding of your warranty.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 99 lbs (45 kg) for the TV mount and 29 lbs (13 kg) for the glass shelf. Overloading can cause instability and potential injury.
- **Wall Type:** This mount is intended for installation on solid concrete walls, brick walls, or wood stud walls. Do not install on drywall alone. Ensure the mounting surface can safely support the combined weight of the mount and the display.
- **Tools:** Use appropriate tools for installation. If you are unsure about the installation process, consult a qualified professional.
- **Children:** Keep children away during installation. Small parts may be a choking hazard.
- **Ventilation:** Ensure adequate ventilation around the mounted TV to prevent overheating.
- **Cable Management:** Route all cables safely to prevent tripping hazards and damage to equipment.

Package Contents

Please verify that all components are present and undamaged before beginning installation. If any parts are missing or defective, contact Displays2go customer support.

- TV Wall Mount Bracket Assembly
- Tempered Glass Shelf
- Mounting Hardware Kit (screws, anchors, washers, spacers for various TV models and wall types)
- Instruction Manual



Image: Displays2go SHFMT3255B VESA TV Mount with Glass Shelf, fully assembled, displaying the main bracket, TV mounting arms, and the glass shelf.

Setup and Installation

Follow these steps carefully to ensure a secure and stable installation of your TV mount.

Step 1: Prepare the Wall and Locate Studs

Identify the desired mounting location on your wall. Use a stud finder to locate the center of two adjacent wood studs. Mark these locations. For concrete or brick walls, ensure you have appropriate anchors (not always included, may need to be purchased separately).

Step 2: Attach Wall Plate to Wall

1. Position the wall plate at the desired height, ensuring it is level. The integrated bubble level on the mount can assist with this.
2. Mark the drilling points through the holes on the wall plate.
3. Drill pilot holes at the marked locations. The size of the drill bit will depend on your wall type and the mounting hardware used.
4. Secure the wall plate to the wall using the provided lag bolts and washers. Tighten firmly, but do not overtighten.



Image: A close-up view of the integrated bubble level on the main wall plate, indicating its use for ensuring a level installation.

Step 3: Attach TV Brackets to TV

1. Carefully place your TV face down on a soft, clean surface to prevent screen damage.
2. Identify the VESA mounting holes on the back of your TV.
3. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's VESA pattern (100x100 to 600x400).
4. Attach the two vertical TV brackets to the back of your TV. Ensure they are oriented correctly and securely fastened.



Image: A side view of the TV mount, highlighting the adjustable tilt mechanism on the TV brackets, which allows for angle adjustments after mounting.

Step 4: Hang TV on Wall Plate

With assistance, carefully lift the TV and hook the TV brackets onto the wall plate. Ensure the brackets are properly seated and engaged with the wall plate's hooks. Secure the TV to the wall plate using the safety screws or locking mechanisms provided.



Image: The Displays2go SHFMT3255B TV mount with a television securely installed, demonstrating how media devices like DVD players and books can be placed on the integrated glass shelf.

Step 5: Install Glass Shelf

1. Attach the shelf support arms to the main vertical post of the mount.
2. Place the tempered glass shelf onto the support arms.
3. Secure the glass shelf using the provided screws or fasteners. Ensure it is stable and level.



Image: A detailed view of the tempered glass shelf, highlighting its smooth surface and rounded edges, ready for installation.



Image: An underside perspective showing how the glass shelf attaches to the main vertical support of the TV mount, illustrating the mounting mechanism.

Operating Instructions

This is a fixed TV mount with a tilt feature. Once installed, the primary operation involves adjusting the screen angle.

- **Tilt Adjustment:** The TV brackets allow for a slight tilt adjustment. Loosen the tilt adjustment knobs on the side of the TV brackets, adjust the screen to your desired viewing angle, and then securely tighten the knobs to lock the position.
- **Shelf Use:** The tempered glass shelf is designed to hold media components such as cable boxes, DVD players, or gaming consoles, up to 29 lbs. Ensure items are placed centrally and do not exceed the weight limit.

Maintenance

- **Cleaning:** Clean the metal parts of the mount with a soft, dry cloth. For the glass shelf, use a glass cleaner and a soft cloth. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Periodically check all screws and bolts to ensure they remain tight and secure. Over time, vibrations or movement can cause fasteners to loosen.
- **Damage:** If any part of the mount becomes damaged, discontinue use immediately and contact Displays2go customer support for replacement parts or advice.

Troubleshooting

- **TV is not level:** Ensure the wall plate was installed level. If the wall plate is level, check if the TV brackets are evenly attached to the TV. Some mounts allow for minor post-installation leveling adjustments; refer to the specific bracket design.
- **TV feels unstable:** Recheck all mounting hardware. Ensure lag bolts are securely fastened into wall studs or appropriate anchors. Verify that the TV brackets are fully engaged with the wall plate and secured with safety screws. Do not exceed weight limits.
- **Glass shelf is wobbly:** Ensure all screws securing the shelf to its support arms and the support arms to the main post are tightened.
- **Difficulty tilting TV:** Loosen the tilt adjustment knobs sufficiently before attempting to adjust the angle. If still stiff, check for any obstructions.

Specifications

Model Number	SHFMT3255B
Brand	Displays2go
Compatible TV Sizes	32 - 55 inches
TV Weight Capacity	99 lbs (45 kg)
Shelf Weight Capacity	29 lbs (13 kg)
VESA Compatibility	100x100 to 600x400 mm
Movement Type	Fixed with Tilt
Material	Alloy Steel, Tempered Glass
Color	Black

Product Dimensions	12.63 x 25 x 29.1 inches
Item Weight	10.5 pounds
UPC	840844125299

Warranty Information

This product is covered by a manufacturer's limited warranty. Please refer to the warranty card included with your purchase or visit the official Displays2go website for detailed terms and conditions. The warranty typically covers defects in materials and workmanship under normal use.

Customer Support

For technical assistance, missing parts, or warranty claims, please contact Displays2go customer support. Contact information can typically be found on the product packaging or the official Displays2go website. Please have your model number (SHFMT3255B) and purchase date available when contacting support.

You can visit the Displays2go store online for more information:[Displays2go Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question