

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT Universal 4-in-1 Remote Control (Model TOB907) Instruction Manual

USARMT TOB907

USARMT Universal 4-in-1 Remote Control (Model TOB907) Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the USARMT Universal 4-in-1 Remote Control, Model TOB907. This remote is designed to operate various Toshiba infrared-controlled equipment, including TVs, Satellite/Cable boxes, DVD players, and other auxiliary devices. It aims to replace multiple remotes with a single, convenient unit.

2. PRODUCT OVERVIEW

The USARMT TOB907 is a versatile remote control capable of managing up to four different devices. Its design focuses on ease of use, requiring no complex programming for initial setup. The remote features dedicated sections for number input, channel and volume control, playback functions, and device mode selection.



Figure 1: USARMT Universal 4-in-1 Remote Control, Model TOB907. This image displays the full layout of the remote control, showing all buttons and their labels, including the number pad, navigation controls, playback buttons, and the mode select slider at the bottom.

3. SETUP

3.1. Battery Installation

To begin using your remote control, install two AAA batteries (not included) into the battery compartment located on the back of the remote. Ensure the batteries are inserted with the correct polarity (+ and -) as indicated inside the compartment.

3.2. Initial Use

The USARMT TOB907 remote control is designed for immediate use with most compatible Toshiba equipment without requiring any programming. Simply install the batteries, and the remote should be ready to operate your devices.

4. OPERATING INSTRUCTIONS

4.1. Device Mode Selection

The remote control features a slide switch at the bottom to select the device you wish to control. Move the switch to one of the following positions:

- **TV:** For controlling your television.
- **CABLE/SAT:** For controlling cable boxes or satellite receivers.
- **AUX1:** For controlling a first auxiliary device (e.g., DVD player).
- **AUX2:** For controlling a second auxiliary device.

Always ensure the slide switch is set to the correct mode for the device you intend to operate.

4.2. Button Functions

The remote control includes standard buttons for various functions:

- **POWER:** Turns the selected device on or off.
- **Number Pad (0-9, 100, +10):** For direct channel input or menu navigation.
- **INPUT:** Cycles through input sources on your TV.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes channels.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Accesses the main menu of the selected device.
- **ENTER (Navigation Pad):** Confirms selections within menus.
- **Directional Arrows (Up/Down/Left/Right):** Navigates through menus and options.
- **BACK/EXIT:** Returns to the previous screen or exits a menu.
- **INFO:** Displays information about the current program or input.
- **PLAY, PAUSE/STEP, STOP, REW, FF, SKIP:** Controls for media playback (primarily for DVD/AUX modes).
- **REC:** Initiates recording (if supported by the device and mode).
- **SLEEP:** Activates the sleep timer function.
- **PIC SIZE:** Adjusts picture size/aspect ratio.
- **FREEZE:** Freezes the current image on screen.
- **RECALL:** Recalls the previous channel.
- **SETUP/GUIDE:** Accesses setup menus or program guides.
- **TOP MENU/FAV BROWSER:** Accesses the top menu or favorite channel browser.
- **DVD RTN/CH RTN:** Returns to DVD menu or channel.
- **DVD CLEAR/EXIT:** Clears DVD input or exits DVD functions.
- **ANGLE, SUB TITLE, AUDIO:** Functions related to DVD playback options.
- **EJECT:** Ejects media from a compatible device.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.

- Verify the device mode slide switch is set to the correct position (TV, CABLE/SAT, AUX1, AUX2) for the equipment you are trying to control.
 - Ensure there are no obstructions between the remote control and the device's infrared sensor.
 - Point the remote directly at the device.
- **Some functions do not work:**
 - This universal remote operates the common features of most, but not all, models and brands of infrared-controlled equipment. Some specific functions of particular equipment may not be controllable by this remote. This is normal for universal remotes.

6. SPECIFICATIONS

Feature	Detail
Model Number	TOB907 (Internal Model: 4330254991)
Brand	USARMT
Compatibility	Universal 4-in-1 (TV, SAT, AUX1, AUX2) for Toshiba and other infrared-controlled equipment. Replaces CT-8037, CT-90275, CT-90302, CT-90325.
Power Source	2 x AAA Batteries (not included)
Color	Black
Item Weight	Approximately 1 pound (0.45 kg)

7. WARRANTY AND SUPPORT

This product is designed for ease of use and broad compatibility. If you encounter issues where specific functions of your equipment cannot be controlled by this remote, or for any other support inquiries, please contact the seller or manufacturer for assistance. Specific warranty details are not provided in this manual; please refer to your purchase documentation or contact the seller for warranty information.