

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT VZ908 Universal Remote Control Instruction Manual for Vizio TVs and Blu-ray Players

USARMT VZ908

USARMT VZ908 Universal Remote Control Instruction Manual

Model: VZ908

1. INTRODUCTION

This manual provides comprehensive instructions for the USARMT VZ908 Universal Remote Control. This remote is designed to operate a wide range of Vizio televisions, including Plasma, LCD, LED, and 3D models, as well as Vizio DVD and Blu-ray players. It serves as a replacement for lost or broken remotes and can consolidate control of multiple devices into a single unit.

The VZ908 remote operates common features of most infrared-controlled TV and DVD equipment. Please note that some advanced or specific functions of certain equipment may not be fully supported by this universal remote.

2. PRODUCT OVERVIEW



The image displays the USARMT VZ908 Universal Remote Control. It features a silver-grey body with various black and colored buttons. Key functional areas include a numeric keypad, power button, channel and volume controls, menu and navigation buttons, and dedicated media playback controls. The brand "USARMT" and model "VZ908" are visible at the bottom of the remote.

The USARMT VZ908 remote features distinct modes for TV and DVD/Blu-ray player operation, allowing seamless switching between device controls.

3. SETUP INSTRUCTIONS

3.1. Battery Installation

Before using the remote control, install two AAA batteries (not included) into the battery compartment located on the back of the remote. Ensure correct polarity (+/-) as indicated inside the compartment.

3.2. TV Mode Setup

1. For most Vizio TV models, the remote is pre-programmed and requires no additional setup. Test the remote directly with your TV.
2. If the remote does not operate your TV directly, perform the following steps:
 - Press and hold both the **"Power"** button and the **"4"** button simultaneously for 2 seconds.
 - Release both buttons.
 - Test the remote's functionality with your TV.
3. To revert the TV mode to its default status, perform the following steps:
 - Press and hold both the **"Power"** button and the **"1"** button simultaneously for 2 seconds.
 - Release both buttons.

3.3. DVD/Blu-ray Player Mode Setup

For DVD and Blu-ray players, no setup is required. After installing batteries, simply press the **"DVD"** button once to switch the remote to DVD mode and begin operation.

4. OPERATING INSTRUCTIONS

The USARMT VZ908 remote control features dedicated buttons for various functions. Familiarize yourself with the button layout for optimal use.

4.1. Switching Between TV and DVD Modes

- To control your television, press the **"TV"** button.
- To control your DVD or Blu-ray player, press the **"DVD"** button.

4.2. Common Button Functions

- **Power ()**: Turns the device on or off.
- **Number Pad (0-9)**: Direct channel selection or inputting numbers.
- **CH (+/-)**: Changes channels up or down.
- **VOL (+/-)**: Adjusts volume up or down.
- **MUTE**: Mutes or unmutes audio.
- **INPUT**: Selects video input sources.
- **MENU / DISC MENU / TITLE MENU**: Accesses device menus.
- **GUIDE**: Displays program guide.
- **OK / Navigation Arrows (▲ ▼ ◀ ▶)**: Navigates menus and confirms selections.
- **RETURN / BACK**: Returns to the previous screen or menu.
- **EXIT**: Exits current menu or function.
- **SETUP**: Accesses device setup options.
- **AMAZON / NETFLIX**: Direct access buttons for streaming services (functionality depends on device support).
- **Playback Controls ()**: Rewind, Play/Pause, Stop, Fast Forward, Previous Track, Next Track, Record.
- **INFO**: Displays information about current program or media.

- **3D:** Activates/deactivates 3D mode (if supported by TV).
- **REPEAT:** Repeats playback (DVD/Blu-ray).
- **CANCEL:** Cancels current action.
- **A-B / CC (Closed Caption):** Specific functions, A-B for repeating a section, CC for closed captions.
- **Colored Buttons (Red, Green, Yellow, Blue):** Often used for specific functions within menus or interactive content.

5. TROUBLESHOOTING

- **Remote not responding to TV:**
 - Ensure the remote is in **TV** mode by pressing the "TV" button.
 - Verify that the batteries are correctly installed and have sufficient power. Replace if necessary.
 - Re-attempt the TV setup procedure (press and hold "Power" + "4" for 2 seconds).
 - Ensure there are no obstructions between the remote and the TV's infrared sensor.
- **Remote not responding to DVD/Blu-ray Player:**
 - Ensure the remote is in **DVD** mode by pressing the "DVD" button.
 - Verify battery installation and power.
 - Ensure clear line of sight to the player's infrared sensor.
- **Certain functions or buttons do not work:**
 - The USARMT VZ908 is a universal remote designed to operate common features. It may not support all specific or advanced functions available on your original equipment remote.
 - Refer to your device's original manual to confirm if the function is standard or proprietary.

6. SPECIFICATIONS

Brand	USARMT
Model Number	VZ908 (Item Model Number: 4330255026)
Compatible Devices	Vizio Televisions (Plasma, LCD, LED, 3D), DVD/Blu-ray Players
Connectivity Technology	Infrared (IR)
Special Features	Pre-Programmed, Universal
Batteries Required	Yes (2x AAA, not included)
Item Weight	453.59 g

7. MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

8. SUPPORT

For further assistance, troubleshooting beyond this manual, or inquiries regarding specific functions, please contact USARMT customer support. Refer to the product packaging or retailer's website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01B9UN358>

More documents and user manuals: <https://manuals.plus/>