

Manuals.plus /
› USARMT /
› Universal Remote Control for TV and DVD from Philips, Compatible with 99% Plasma LCD LED TV and Blu-ray DVD Player, No Setup Required, Easy to Use!, Black

USARMT PH903

Universal Remote Control User Manual

Model: PH903

1. INTRODUCTION

Thank you for purchasing the USARMT Universal Remote Control, Model PH903. This remote is designed to simplify your home entertainment experience by consolidating control of your TV and DVD player into a single device. It is compatible with a wide range of infrared-controlled TVs and DVD players, including Philips models, and is designed for ease of use with minimal setup required for most devices.

2. PRODUCT OVERVIEW



This image displays the black universal remote control, model PH903. It features a standard layout with a power button at the top right, navigation buttons around an 'OK' button, channel and volume controls, number pad, and dedicated buttons for functions like 'SMART MENU', 'DISC/POP-UP', 'OPTIONS', and 'NETFLIX'.

The PH903 remote control is a versatile device capable of replacing your original TV and DVD remote controls. Its ergonomic design and intuitive button layout ensure comfortable and efficient operation.

Key Features:

- Universal compatibility with most infrared-controlled TVs and DVD players.
- Dedicated TV and DVD modes.
- No setup required for most TV models.

- Easy programming for non-compatible devices.

3. SETUP

3.1. Battery Installation

The remote control requires AAA batteries. To install:

1. Open the battery compartment cover on the back of the remote.
2. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

3.2. Initial Setup for TV

For most TV models, the remote control should work directly after battery installation without any additional setup. If it does not work immediately with your TV, please follow these steps:

1. Point the remote control towards your TV.
2. Press and hold both the **Power** button and the **1** button simultaneously for two (2) seconds.
3. Release the buttons.
4. Test the remote control with your TV to confirm functionality.

3.3. Resetting TV Pairing

If you wish to revert the TV pairing to its default state, follow these steps:

1. Point the remote control towards your TV.
2. Press and hold both the **Power** button and the **0** button simultaneously for two (2) seconds.
3. Release the buttons.
4. The TV pairing should now be reset.

3.4. Initial Setup for DVD Player

For DVD models, the remote control needs to be set to DVD mode. Follow these steps:

1. Point the remote control towards your DVD player.
2. Press and hold both the **Power** button and the **3** button simultaneously for two (2) seconds.
3. Release the buttons.
4. Test the remote control with your DVD player to confirm functionality.

If the above steps do not work directly with your DVD player, try the following alternative setup:

1. Point the remote control towards your DVD player.
2. Press and hold both the **Power** button and the **4** button simultaneously for two (2) seconds.
3. Release the buttons.
4. Test the remote control with your DVD player.

4. OPERATING INSTRUCTIONS

Once set up, operate the remote control by pointing it directly at the infrared sensor of your TV or DVD player.

Ensure there are no obstructions between the remote and the device.

Common Button Functions:

- **Power ()**: Turns the device on or off.
- **OK**: Confirms selections in menus.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigate through menus and options.
- **Volume (+/-)**: Adjusts the volume level.
- **Channel (CH +/-)**: Changes TV channels.
- **Number Pad (0-9)**: Direct channel input or numerical selections.
- **Back (↶)**: Returns to the previous screen or menu.
- **Info (i)**: Displays information about the current program or media.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip)**: Control media playback on DVD players.
- **Source**: Changes input source on TV.
- **Top Menu / Bonus / View / Repeat / Smart Menu / Disc/Pop-up / Options / Netflix / Subtitle / Audio**
Specific functions as labeled, depending on device compatibility.

Note that some functions available on this universal remote may not be supported by your specific equipment, and conversely, some functions of your equipment may not be controllable by this remote. This is normal for universal remote controls.

5. MAINTENANCE

5.1. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.2. Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface or internal components.

5.3. Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

6. TROUBLESHOOTING

Remote not responding:

- Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
- Ensure there is a clear line of sight between the remote control and the device's infrared sensor.
- Make sure you are within the effective operating range (up to 10 meters).
- Re-attempt the setup procedure for your TV or DVD player as described in Section 3.

Some functions are not working:

- As a universal remote, not all functions may be compatible with every device. Refer to your device's original manual for specific functions.
- Ensure the remote is in the correct mode (TV or DVD) for the device you are trying to control.

If you continue to experience issues, please refer to the support section.

7. SPECIFICATIONS

Feature	Detail
Model Number	PH903 (Item Model Number: 4330255030)
Brand	USARMT
Compatible Devices	TV, DVD Players (Universal for most IR-controlled models)
Connectivity Technology	Infrared (IR)
Maximum Range	10 meters
Battery Type	AAA
Color	Black
Product Dimensions	18.49 x 5.11 x 2.59 cm
Item Weight	68 grams
UPC	708131959104

8. WARRANTY AND SUPPORT

For any issues or questions not covered in this manual, please contact the seller or manufacturer for assistance. While specific warranty details are not provided here, standard consumer rights apply. Keep your purchase receipt as proof of purchase.

If you encounter situations where the remote control offers functions not available on your equipment, or if certain equipment functions cannot be controlled by this remote, please reach out to customer support for further guidance.

© 2024 USARMT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01BCEU552>

More documents and user manuals: <https://manuals.plus/>