

USARMT 4330255078

USARMT Replacement Remote Control for Hisense TVs

MODEL: 4330255078

Introduction

This manual provides instructions for the USARMT Replacement Remote Control, Model 4330255078. This remote is designed to be compatible with approximately 99% of Hisense Smart HDTV LCD LED televisions, offering a straightforward replacement solution without the need for complex programming.

Setup

- Battery Installation:** This remote control requires batteries, which are not included. Open the battery compartment on the back of the remote and insert two new AAA batteries, ensuring correct polarity (+/-). Close the compartment securely.
- No Programming Required:** This remote control is pre-programmed for Hisense TVs and typically requires no additional setup. Simply insert batteries and begin use.
- Clearing TV Memory (If Remote Does Not Respond):** If the remote does not function immediately, you may need to clear your TV's memory. Follow these steps:
 - Turn off your Hisense TV.
 - Unplug the TV's power cord from the electrical outlet.
 - Wait for at least 30 seconds.
 - Plug the power cord back into the electrical outlet.
 - Turn on the TV and test the remote control.

Operating Instructions

This remote control features standard functions for operating your Hisense TV, including power, volume, channel selection, and menu navigation.

Mode Switching

The remote control supports 4 different operating modes to ensure broad compatibility. If the remote does not fully control your TV, try switching modes:

- To switch to **Mode 1**: Press and hold the 'Power' button and the '1' button simultaneously.
- To switch to **Mode 2**: Press and hold the 'Power' button and the '2' button simultaneously.
- To switch to **Mode 3**: Press and hold the 'Power' button and the '3' button simultaneously.
- To restore **Default Settings**: Press and hold the 'Power' button and the '0' button simultaneously.

After switching modes, test the remote's functionality with your TV.

Maintenance

- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new ones of the same type.
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

- **Remote Not Working:**
 - Check if the batteries are inserted correctly and are not depleted. Replace them if necessary.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the maximum operating range (approximately 10 meters).
- **Remote Not Controlling TV Functions:**
 - Try clearing the TV's memory as described in the 'Setup' section.
 - Attempt to switch between the different operating modes (Mode 1, 2, 3) as described in the 'Operating Instructions' section.

Specifications

Brand	USARMT
Model	4330255078
Compatible Devices	Television (Hisense Smart HDTV LCD LED)
Connectivity Technology	Infrared
Maximum Range	10 Meters (approximately 33 feet)
Special Feature	No programming required
Item Weight	1 Pound (approximate)

Warranty

This product comes with a 1-year quality guarantee. Additionally, a 30-day hassle-free return policy is offered. Please refer to your purchase documentation for specific terms and conditions.

Support

For further assistance or if you encounter issues not covered in this manual, please contact the seller or manufacturer directly through your purchase platform. Provide your product model number (4330255078) and a detailed description of the issue for efficient support.