

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT TLC-925 TV Remote Control Instruction Manual

## USARMT TLC-925

# USARMT TLC-925 TV Remote Control Instruction Manual

## INTRODUCTION

Welcome to the instruction manual for your USARMT TLC-925 TV Remote Control. This guide provides detailed information on how to set up, operate, and maintain your remote control for optimal performance with compatible TCL LCD LED Smart TVs.

## PRODUCT OVERVIEW

The USARMT TLC-925 is a replacement remote control designed for various TCL LCD LED Smart TV models. It features a comprehensive set of buttons for controlling TV functions.





Image of the USARMT TLC-925 TV Remote Control, showing all buttons and their labels.

## Button Functions

Below is a description of the primary functions of the buttons on your remote control:

- **Mute Button:** Mutes or unmutes the TV audio.
- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels or input numerical data.
- **Display Button:** Shows on-screen information about the current program or input.
- **Return Button:** Returns to the previous menu or screen.
- **Source Button:** Selects the input source (e.g., HDMI 1, AV, TV).

- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **OK Button:** Confirms selections in menus.
- **Menu Button:** Accesses the TV's main menu.
- **Option Button:** Displays additional options or settings.
- **Exit Button:** Exits the current menu or function.
- **Volume Up/Down (+VOL/-VOL):** Adjusts the TV volume.
- **TV Button:** Switches to TV mode.
- **Channel Up/Down (+CH/-CH):** Changes the TV channel.
- **3D Button:** Activates or deactivates 3D mode (if supported by TV).
- **ZOOM Button:** Adjusts the screen zoom level.
- **P.EFFECT Button:** Picture effect settings.
- **S.EFFECT Button:** Sound effect settings.
- **SLEEP Button:** Sets the sleep timer.
- **F1, F2, F3, F4 Buttons:** Function buttons, often programmable or for specific smart TV features.

## SETUP

---

### Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.

### Initial Use

The USARMT TLC-925 remote control is designed to work with most TCL LCD LED Smart TVs without requiring complex programming. Simply insert the batteries and point the remote towards your TV.

If the remote does not respond immediately, ensure there are no obstructions between the remote and the TV's infrared sensor.

## OPERATING INSTRUCTIONS

---

### Basic TV Control

To control your TV, point the remote control directly at the TV's infrared sensor.

- **Power On/Off:** Press the **Power** button.
- **Channel Selection:** Use the **+CH/-CH** buttons to cycle through channels or the **Number Buttons (0-9)** for direct channel input.
- **Volume Adjustment:** Use the **+VOL/-VOL** buttons to increase or decrease the volume.
- **Mute Audio:** Press the **Mute** button to silence the TV. Press again to restore audio.
- **Input Source:** Press the **SOURCE** button to cycle through available input sources (e.g., HDMI, AV).

### Menu Navigation

To access and navigate your TV's menus:

- Press the **MENU** button to open the main menu.
- Use the **Navigation Buttons (Up, Down, Left, Right)** to move between menu options.
- Press the **OK** button to select a highlighted option.
- Press the **EXIT** button to close the menu.
- The **RETURN** button can be used to go back to the previous menu level.

## MAINTENANCE

### Battery Replacement

Replace batteries when the remote's performance degrades or if the TV does not respond consistently. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries or different types of batteries.

### Cleaning

Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

### Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

| Issue                                    | Possible Cause                            | Solution                                                                                                                                                                                     |
|------------------------------------------|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote not responding                    | Dead or incorrectly inserted batteries    | Check battery polarity. Replace batteries with new ones.                                                                                                                                     |
| Remote not responding                    | Obstruction between remote and TV         | Ensure a clear line of sight between the remote and the TV's infrared sensor.                                                                                                                |
| Specific buttons not working             | Remote requires reset                     | Try resetting the remote: Press and hold the <b>'0' (Zero)</b> button and the <b>Power</b> button simultaneously for approximately two seconds. Release both buttons. Test the remote again. |
| TV not responding to any remote commands | TV's infrared sensor is blocked or faulty | Check the TV's user manual for troubleshooting its infrared sensor. Ensure no objects are blocking the sensor on the TV.                                                                     |

## SPECIFICATIONS

- **Brand:** USARMT
- **Model:** TLC-925
- **Compatible Devices:** Television (specifically TCL LCD LED Smart TVs)
- **Connectivity Technology:** Infrared
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1

## WARRANTY AND SUPPORT

This product is typically covered by a limited manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer.

For technical support or further assistance, please contact the seller or manufacturer directly. Contact information can usually be found on the product packaging or the seller's website.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B01BCLOGPU>

More documents and user manuals: <https://manuals.plus/>