

WALI WL-1330LM

WALI Articulating TV Wall Mount

MODEL: WL-1330LM

Instruction Manual

Introduction

Safety

Contents

Specifications

Setup

Operating

Maintenance

Troubleshooting

Support

1. Introduction

This manual provides comprehensive instructions for the safe and proper installation, operation, and maintenance of your WALI WL-1330LM Articulating TV Wall Mount. Please read this manual thoroughly before installation and retain it for future reference.

The WALI WL-1330LM is designed to securely mount most 13 to 32-inch flat panel screens weighing up to 33 lbs (15 kg). It supports VESA mounting patterns from 75x75mm to 100x100mm, offering flexible positioning with tilt, swivel, and extension capabilities for optimal viewing comfort.



Image 1: WALI WL-1330LM Articulating TV Wall Mount. This image shows the full motion wall mount in its compact form, ready for installation.

## 2. Important Safety Instructions

**WARNING:** Failure to read and follow all instructions, warnings, and cautions in this manual may result in serious personal injury, property damage, or voiding of your warranty.

- Do not exceed the maximum weight capacity of **33 lbs (15 kg)**.
- Ensure the wall structure can safely support the combined weight of the mount and the display.
- This mount is designed for installation on **wood studs, solid concrete, or brick walls DO NOT install on drywall alone.**
- Always use a stud finder to accurately locate wood studs.
- Verify VESA pattern compatibility (75x75mm or 100x100mm) before installation.
- Keep children and pets away during installation.
- Use appropriate personal protective equipment (PPE) during installation, such as safety glasses.
- If you have any doubts about the installation process, consult a qualified professional.

# Compatible VESA Patterns

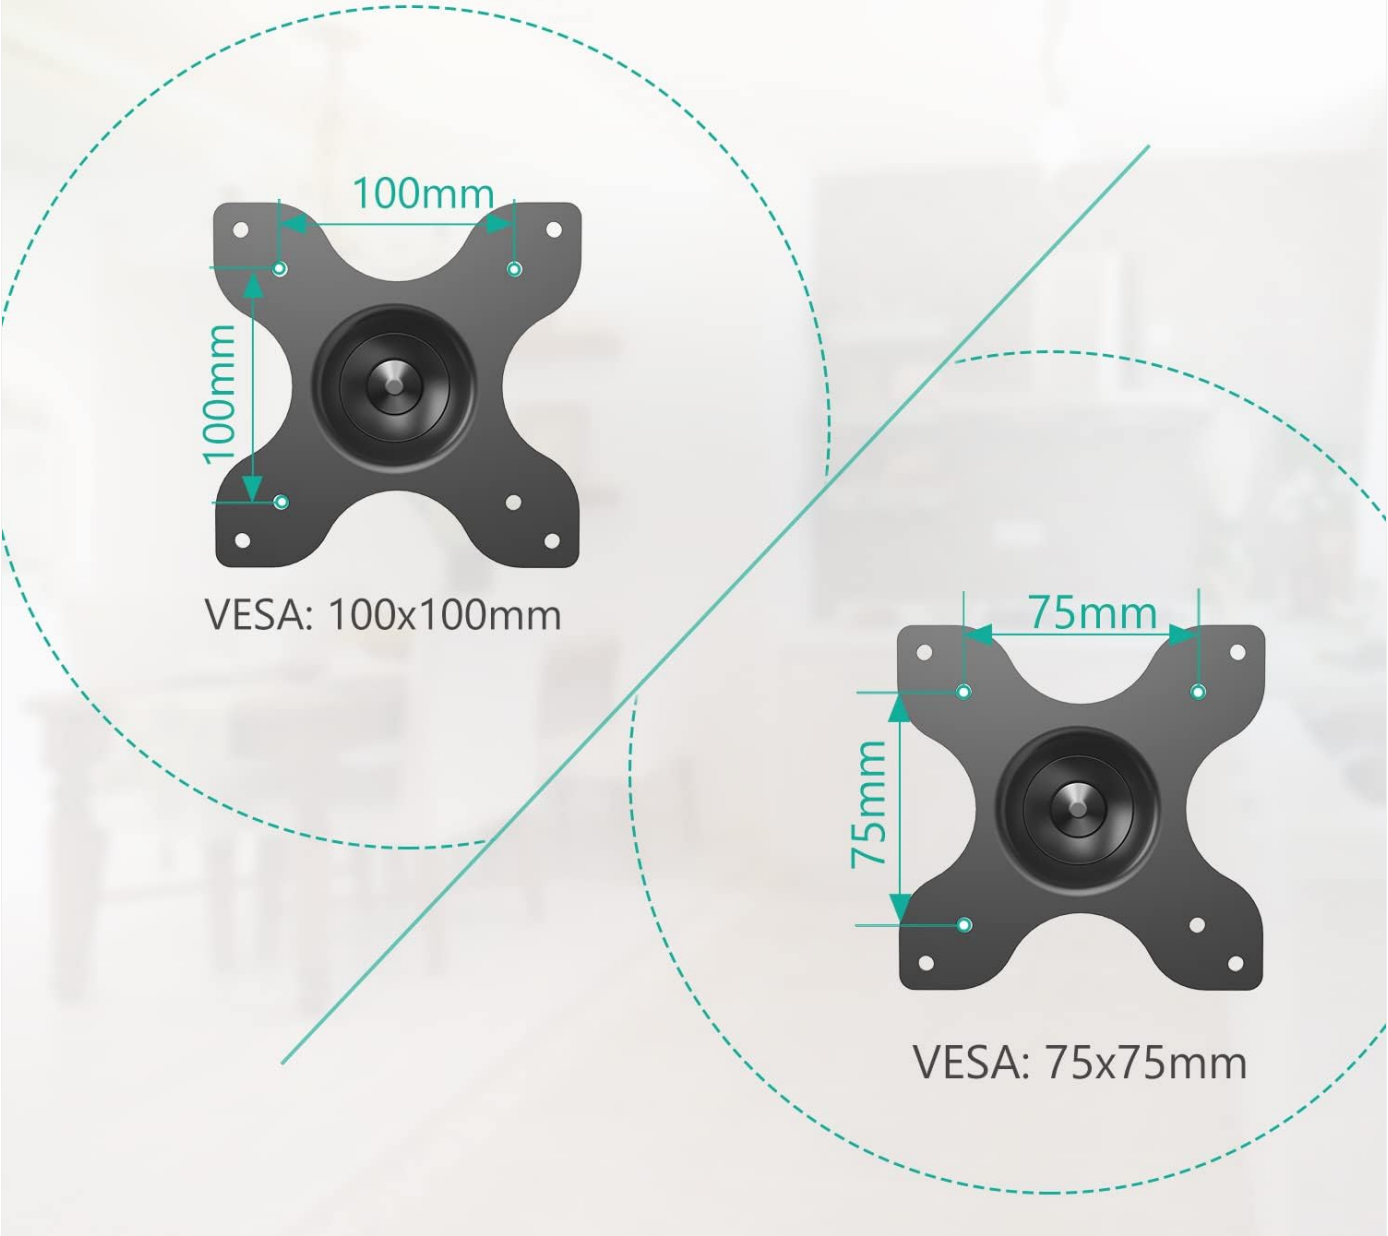


Image 2: Wall Type Compatibility. This image illustrates that the mount is suitable for wood stud, concrete, and brick walls, with a clear warning against mounting on drywall alone.

### 3. Package Contents

Please verify that all components are present and undamaged before beginning installation. If any parts are missing or defective, contact WALI customer support.

- 1 x WALI Articulating Wall Mount (Main Unit)
- 1 x Mounting Hardware Kit (Assorted Screws, Washers, Spacers, Anchors)
- 1 x User Manual (This Document)

### 4. Product Specifications

| Feature                 | Specification   |
|-------------------------|-----------------|
| Compatible Display Size | 13 to 32 inches |

| Feature               | Specification                              |
|-----------------------|--------------------------------------------|
| Weight Capacity       | 33 lbs (15 kg)                             |
| VESA Compatibility    | 75x75mm, 100x100mm                         |
| Tilt Angle            | ±15°                                       |
| Swivel Angle          | 180° (at wall plate), 360° (at VESA plate) |
| Rotation              | 360°                                       |
| Extension from Wall   | 2 inches (min) to 15 inches (max)          |
| Wall Plate Dimensions | 5.9" × 1.6"                                |
| Material              | Metal                                      |
| Color                 | Black                                      |

# Display Compatibility



Weight Capacity  
**33lbs**



Mounting Holes  
**75x75/100x100mm**



Screen Size  
**Max 32"**

The mounting holes on the TV back panel are only compatible with **75x75mm** or **100x100mm** patterns.

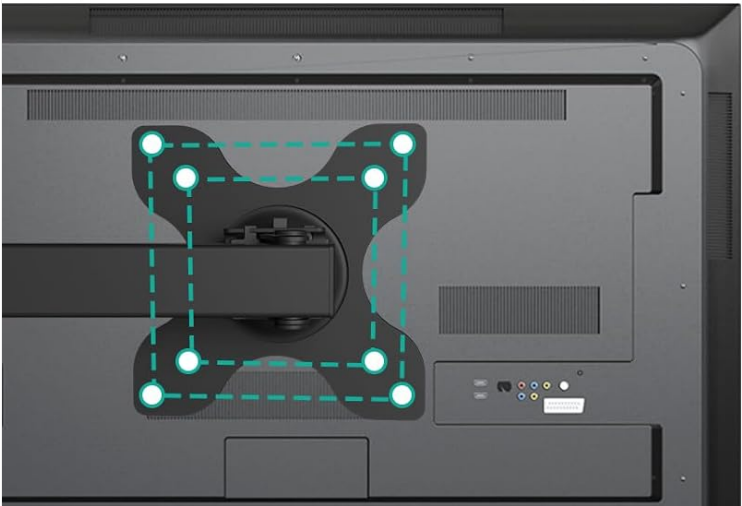


Image 3: Display Compatibility. This image details the maximum weight capacity (33 lbs), VESA mounting holes (75x75mm, 100x100mm), and maximum screen size (32 inches).

# Clean Cable Management

Efficient cable management to save space



Image 4: Compatible VESA Patterns. This image visually explains the 75x75mm and 100x100mm VESA standards supported by the mount.

## 5. Setup and Installation

### 5.1 Before You Begin

- Ensure you have all package contents as listed in Section 3.
- Verify your TV's size, weight, and VESA pattern are compatible with the mount (refer to Section 4).
- Identify your wall type (wood stud, solid concrete, or brick).
- Gather necessary tools: Drill, Stud Finder (for wood studs), Level, Phillips Head Screwdriver, Pencil.

### 5.2 Step-by-Step Installation

1. **Attach Mounting Plate to TV:** Carefully place your TV face down on a soft, clean surface. Align the VESA plate of the mount with the mounting holes on the back of your TV. Use the appropriate screws and spacers from the hardware kit to secure the plate. Ensure the screws are tightened firmly but do not overtighten.
2. **Mark and Drill Pilot Holes:** Determine the desired height and position for your TV on the wall. For wood studs, use a stud finder to locate the center of the stud. Mark the pilot hole locations through the wall plate. For concrete or brick walls, mark the locations

directly. Drill pilot holes to the recommended depth and diameter for your wall type and chosen anchors/screws.

3. **Attach Wall Plate to Wall:** Secure the wall plate of the mount to the wall using the appropriate lag bolts and washers (for wood studs) or concrete anchors and screws (for concrete/brick). Use a level to ensure the mount is perfectly horizontal before fully tightening all fasteners.
4. **Hang TV onto Mount:** With assistance, carefully lift the TV (with the VESA plate attached) and hook it onto the articulating arm of the wall mount. Ensure the TV is securely seated on the mount. Tighten any safety screws or locking mechanisms to prevent accidental dislodgement.



Image 5: Effortless Installation. This image visually guides through the three main installation steps: attaching the mounting plate to the TV, securing the bracket to the wall, and hanging the TV onto the bracket.

## 6. Operating Instructions

The WALI WL-1330LM mount offers various adjustments to achieve your optimal viewing angle.

### 6.1 Adjusting Tilt

To adjust the vertical tilt angle of your TV (up to  $\pm 15^\circ$ ), locate the tilt adjustment screws on the VESA plate. Loosen them slightly, adjust the screen to your desired angle, then re-tighten the screws firmly to secure the position.

# Angle Adjustment

Allows smooth adjustment for a better viewing angle



Image 6: Angle Adjustment. This image demonstrates the tilt ( $\pm 15^\circ$ ), swivel ( $\pm 180^\circ$ ), and rotation ( $360^\circ$ ) capabilities of the mount.

## 6.2 Adjusting Swivel

To swivel your TV horizontally, gently push or pull the screen to the left or right. The mount allows for up to  $180^\circ$  swivel at the wall connection point and  $360^\circ$  at the VESA plate, providing wide viewing angles.

## 6.3 Adjusting Extension

Extend or retract the articulating arm to move your TV closer to or further from the wall. The mount allows for an extension range from a minimum of 2 inches to a maximum of 15 inches from the wall.

**Rotate 360°**



*Image 7: Extension Adjustment. This image illustrates the minimum (2 inches) and maximum (15 inches) extension distance from the wall.*


#### **6.4 Rotating Screen**

The VESA plate allows for a full 360° rotation of the screen, enabling you to easily switch between landscape and portrait viewing orientations.


#### **6.5 Cable Management**

Utilize the integrated cable clips or ties along the articulating arm to route and organize your cables. This helps maintain a clean and clutter-free appearance.

## Wood Stud

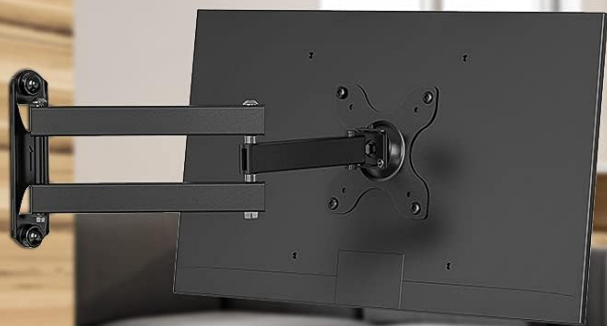

## Concrete / Brick Wall

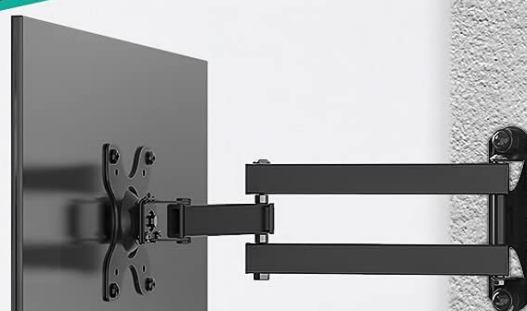

**\*Do NOT mount on drywall alone**

Image 8: Clean Cable Management. This image shows how cables can be efficiently routed along the mount arm for a tidy setup.

## 7. Maintenance

- **Periodic Checks:** Periodically (e.g., every 3-6 months) check all screws, bolts, and connections on the mount and between the mount and the TV to ensure they remain secure. Tighten any loose fasteners.
- **Cleaning:** Clean the mount with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or chemical-based sprays, as these may damage the finish or components.
- **Lubrication:** The articulating joints are designed for smooth operation and typically do not require lubrication. If movement becomes stiff, contact customer support for advice.

## 8. Troubleshooting

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                                          | Possible Cause                                                | Solution                                                                                                                                                                                                                                       |
|--------------------------------------------------|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mount is not level after installation.           | Wall plate not installed level; TV not seated correctly.      | Remove TV, re-check wall plate with a level, adjust and re-tighten. Ensure TV is properly hooked onto the mount.                                                                                                                               |
| Difficulty adjusting tilt, swivel, or extension. | Adjustment screws are too tight; mount is overloaded.         | Slightly loosen the relevant adjustment screws, make the adjustment, then re-tighten. Verify TV weight does not exceed 33 lbs.                                                                                                                 |
| TV seems unstable or wobbly on the mount.        | Improper installation; loose fasteners; unsuitable wall type. | Immediately remove TV. Re-check all wall anchors and mount connections. Ensure wall type is suitable (not drywall alone) and pilot holes were drilled correctly. Do not re-mount until stability is confirmed. Contact professional if unsure. |

## 9. Warranty and Customer Support

WALI is committed to providing high-quality products and excellent customer service. Your WALI WL-1330LM Articulating TV Wall Mount comes with a standard warranty. Please refer to your product packaging or the official WALI website for specific warranty terms and conditions.

For any questions, technical assistance, or warranty inquiries, WALI provides experienced and friendly US-based customer support available to assist 7 days a week.

**Contact Information:** Please refer to the contact details provided in your original product packaging or visit the official WALI website for the most up-to-date support information.

You can also access the official User Manual PDF[here](#).

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question