

[manuals.plus](#) /› [Transcend](#) /› [Transcend 64GB microSDHC Memory Card with SD Adapter User Manual \(Model M10-SDC4/64GB\)](#)

Transcend M10-SDC4/64GB

Transcend 64GB microSDHC Memory Card with SD Adapter User Manual

Model: M10-SDC4/64GB

INTRODUCTION

This manual provides essential instructions for the proper use, setup, and maintenance of your Transcend 64GB microSDHC Memory Card with SD Adapter. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The Transcend 64GB microSDHC card is designed for high-capacity data storage in compatible devices such as camcorders and cameras. The included SD adapter allows for broader compatibility with devices that accept standard SD cards.

PACKAGE CONTENTS

- Transcend 64GB microSDHC Memory Card
- Transcend SD Adapter

SETUP

Follow these steps to prepare your memory card for use:

1. Inserting the microSDHC Card into the SD Adapter:

Locate the small slot on the side of the SD adapter. Gently slide the Transcend microSDHC card into this slot until it clicks into place. Ensure the gold contacts on the microSDHC card face the same direction as the contacts inside the adapter slot.



Image: Transcend 64GB microSDHC card and SD adapter. The microSD card is shown detached from the adapter, illustrating its smaller size and how it can be inserted into the adapter for use in standard SD card slots.

2. Inserting the Card (or Adapter with Card) into a Device:

Identify the memory card slot on your compatible device (e.g., camcorder, camera, computer card reader). Insert the microSDHC card directly (if your device has a microSD slot) or the SD adapter with the microSDHC card inserted (if your device has a standard SD slot) into the designated slot. Push gently until it is fully seated. Refer to your device's manual for specific instructions on memory card insertion.

3. Initial Formatting (if required):

For optimal performance and compatibility, it is recommended to format the memory card using your device's internal formatting function before first use. This process erases all data on the card and prepares it for your specific device. Consult your device's user manual for instructions on how to format a memory card. **Warning: Formatting will erase all data on the card. Ensure no important data is present before formatting.**

OPERATING INSTRUCTIONS

Once the memory card is properly installed and formatted, it is ready for use:

- **Data Storage:** The card will automatically be recognized by your device as storage. You can now save photos, videos, and other data directly to the card.
- **Recording:** When used in a camcorder or camera, the card will store recorded footage or captured images. Ensure your device is set to save to the memory card.
- **Data Transfer:** To transfer data to a computer, you can either connect your device directly to the computer or remove the memory card (or adapter with card) and insert it into a compatible card reader connected to your computer.
- **Capacity:** The 64GB capacity provides ample space for a large number of files. Actual usable capacity may be slightly less due to system files and formatting.

MAINTENANCE AND CARE

Proper care ensures the longevity and reliability of your memory card:

- **Handling:** Avoid touching the gold contacts on the memory card or adapter. Static electricity or dirt can damage the card.
- **Insertion/Removal:** Always ensure your device is powered off or safely eject the card through the device's operating system before removing it. Improper removal can lead to data corruption or card damage.

- **Storage:** Store the memory card and adapter in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. Use the provided protective casing (if any) when not in use.
- **Waterproof Feature:** This Transcend memory card features a waterproof design. While it offers protection against accidental water exposure, it is not recommended to intentionally submerge the card. Ensure the card is completely dry before inserting it into any electronic device.
- **Cleaning:** If necessary, gently wipe the gold contacts with a clean, dry, lint-free cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

If you encounter issues with your memory card, try the following solutions:

- **Card Not Recognized:**
 - Ensure the card is fully and correctly inserted into the device or adapter.
 - Try inserting the card into a different compatible device or card reader to rule out a device issue.
 - Check if the SD adapter's "Lock" switch is in the unlocked position (if using the adapter).
 - Reformat the card (**Warning: This will erase all data**).
- **Data Transfer Issues / Slow Performance:**
 - Ensure your device or card reader supports the card's speed class.
 - Try transferring smaller batches of files.
 - Ensure your computer's USB ports are functioning correctly.
 - Avoid running multiple demanding applications during data transfer.
- **Error Messages:**

Refer to your device's user manual for specific error code explanations. Common errors often relate to formatting, card recognition, or insufficient space.

SPECIFICATIONS

Brand	Transcend
Model Number	M10-SDC4/64GB
Memory Storage Capacity	64 GB
Flash Memory Type	Micro SDHC, SD
Hardware Interface	microSDHC
Compatible Devices	Camera (and other devices supporting microSDHC/SD)
Special Feature	Water Proof
Item Weight	0.8 ounces
UPC	744596914722

WARRANTY INFORMATION

Transcend products are typically covered by a limited warranty. Specific warranty terms and conditions, including duration and coverage, may vary by region and product type. For detailed warranty information, please visit the official Transcend website or contact their customer support directly. Keep your proof of purchase for warranty claims.

Please note that separate data recovery plans may be available for purchase, which are distinct from the product's standard warranty.

SUPPORT

For further assistance, technical support, or to access additional resources, please visit the official Transcend support website:

www.transcend-info.com/support/

You may also find FAQs and driver downloads on their support portal.

© 2023 Transcend. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - M10-SDC4/64GB

 Software User Guide 	<p><u>Transcend Micro Software User Guide</u> User guide for the Transcend Micro CPAP device software, detailing configuration, compliance management, data reporting, and contact information for Transcend Inc.</p>
 Quick Guide 	<p><u>Transcend Micro CPAP Machine Quick Guide</u> A quick guide to setting up and using the Transcend Micro Continuous Positive Airway Pressure (CPAP) device, including information on its features, operation, and maintenance.</p>

 <p>CPAPMAN transcend Micro User Manual</p>	<p>Transcend Micro CPAP User Manual</p> <p>User manual for the Transcend Micro CPAP device, covering setup, operation, maintenance, troubleshooting, and technical specifications.</p>
 <p>CPAPX transcend Transcend 40W Sun-Watt™ Solar Charger User Manual Read user manual before use</p>	<p>Transcend 40W Sun-Watt Solar Charger User Manual - Portable Power Solution</p> <p>Comprehensive user manual for the Transcend 40W Sun-Watt™ Solar Charger. Learn about its features, intended use with the PowerAway™ Battery for CPAP devices, charging procedures, maintenance, technical specifications, and warranty information.</p>
 <p>CPAPMAN transcend Micro Quick Guide</p>	<p>Transcend Micro CPAP Quick Guide: Setup, Operation, and Troubleshooting</p> <p>This quick guide provides essential information for the Transcend Micro CPAP device, including setup instructions, operating procedures, comfort features, app connectivity, troubleshooting tips, safety warnings, and maintenance guidelines.</p>
 <p>CPAPMAN transcend Micro™ User Manual RespShop</p>	<p>Transcend Micro User Manual</p> <p>Comprehensive user manual for the Transcend Micro CPAP device, detailing setup, operation, comfort features, maintenance, troubleshooting, and technical specifications.</p>