

SOUNDLOGIC AWS-12/2970L

SoundLogic AWS-12/2970L Bluetooth Shower Speaker User Manual

INTRODUCTION

Thank you for purchasing the SoundLogic AWS-12/2970L Bluetooth Shower Speaker. This device is designed to provide high-quality audio entertainment in wet environments, featuring Bluetooth connectivity, FM radio, and hands-free calling. Please read this manual carefully before use to ensure proper operation and maintenance.

PACKAGE CONTENTS

- SoundLogic AWS-12/2970L Bluetooth Shower Speaker
- USB Charging Cable
- Carabiner Clip
- User Manual (this document)

PRODUCT OVERVIEW



Image: The SoundLogic AWS-12/2970L Bluetooth Shower Speaker in blue, featuring a central control panel with power, play/pause, track skip, and call answer buttons. A USB port is visible on the side, and a silver carabiner clip is attached for portability. The speaker has a suction cup base.

Key Features:

- Waterproof Design for shower and outdoor use
- Bluetooth Connectivity for wireless music streaming
- Built-in FM Radio for local broadcasts
- Integrated Microphone for hands-free calls
- Convenient Carabiner Clip for easy attachment

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the speaker's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will illuminate during charging and turn off when fully charged.

2. Power On/Off

Press and hold the **Power button** (usually marked with a power symbol) for approximately 3 seconds to turn the speaker ON or OFF. A tone will indicate the power status.

3. Bluetooth Pairing

1. Ensure the speaker is ON and in Bluetooth pairing mode (LED indicator will flash rapidly).
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "AWS-12/2970L" or similar from the list of devices.
4. Once paired, the speaker will emit a confirmation tone, and the LED indicator will stop flashing and remain solid.

4. FM Radio Tuning

To switch to FM radio mode, press the **Mode button** (if available, or the Play/Pause button might cycle modes). In FM mode, press and hold the **Play/Pause button** to automatically scan and save available FM stations. Use the **Previous/Next track buttons** to navigate between saved stations.

OPERATING INSTRUCTIONS

Bluetooth Music Playback

- **Play/Pause:** Press the **Play/Pause button** once.
- **Next Track:** Press the **Next Track button** (usually marked with > or >>).
- **Previous Track:** Press the **Previous Track button** (usually marked with < or <<).

FM Radio Operation

- **Switch Mode:** Press the **Mode button** to enter FM radio mode.
- **Auto Scan:** In FM mode, press and hold the **Play/Pause button** to automatically scan and save stations.
- **Change Station:** Use the **Previous/Next Track buttons** to cycle through saved stations.

Call Handling

- **Answer/End Call:** Press the **Call button** (usually marked with a phone icon) once.
- **Reject Call:** Press and hold the **Call button** for 2 seconds.
- **Redial Last Number:** Double-press the **Call button**.

Volume Control

Press and hold the **Next Track button** to increase volume. Press and hold the **Previous Track button** to decrease volume.

MAINTENANCE

Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the USB port cover is securely closed before cleaning or exposing to water.

Water Resistance

This speaker is designed to be waterproof for shower use. However, it is not intended for submersion in water. Ensure the USB port cover is tightly sealed to maintain water resistance.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far apart.	Ensure speaker is in pairing mode. Turn Bluetooth on your device. Move devices closer.
Poor FM radio reception.	Weak signal; interference.	Relocate the speaker. Perform an auto-scan again.
No sound.	Volume too low; device not connected.	Increase speaker and device volume. Re-establish Bluetooth connection.

SPECIFICATIONS

Model Number: AWS-12/2970L
Brand: SOUNDLOGIC
Connectivity Technology: Bluetooth
Special Features: Built-in microphone, FM Radio, Waterproof
Tuner Type: FM
Radio Bands Supported: FM
Frequency: 108 MHz (FM)
Power Source: Battery Powered
Hardware Interface: USB
Color: Blue
UPC: 044902029721

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact SoundLogic customer service directly. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question