

[Manuals.plus](#) /

› [BM Premium](#) /

› BM Premium DMW-BLG10 Battery and Charger Instruction Manual for Panasonic Lumix Cameras

BM Premium DMWBLG10

BM Premium DMW-BLG10 Battery and Charger Instruction Manual

MODEL: DMW-BLG10

1. Introduction

This manual provides essential instructions for the safe and effective use of your BM Premium DMW-BLG10 Li-ion batteries and charger. This product is designed to power various Panasonic Lumix digital cameras, offering a reliable alternative or supplement to your original equipment.

2. Package Contents

Please verify that all items are present in your package:

- 2 x BM Premium DMW-BLG10 Li-ion Batteries
- 1 x BM Premium Battery Charger
- 1 x AC Power Adapter
- 1 x Car Charging Adapter
- 1 x European Travel Adapter
- 1 x Cleaning Cloth

NEVER MISS A PHOTO OPPORTUNITY



Perfect to keep your batteries charged anywhere.



AC100V~240V INPUT

AC ADAPTER



CAR ADAPTER



EUROPE ADAPTER

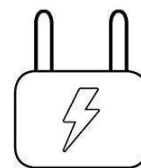


Image: The BM Premium DMW-BLG10 battery and charger kit, showcasing the charger with a battery inserted, along with AC, car, and European adapters.

3. Safety Information

WARNING: To prevent fire or shock hazard, do not expose this unit to rain or moisture.

- Do not short circuit the battery terminals.
- Do not dispose of batteries into fire.
- Charge batteries only with the specified BM Premium charger provided.
- The charger is built with multiple circuit protections including over-charging, short-circuit, high-temperature, and surge protection.
- Do not disassemble the charger unit.
- Use the charger in dry locations only.
- Keep batteries and charger away from children.

DMW-BLG10 1200MAH BATTERY

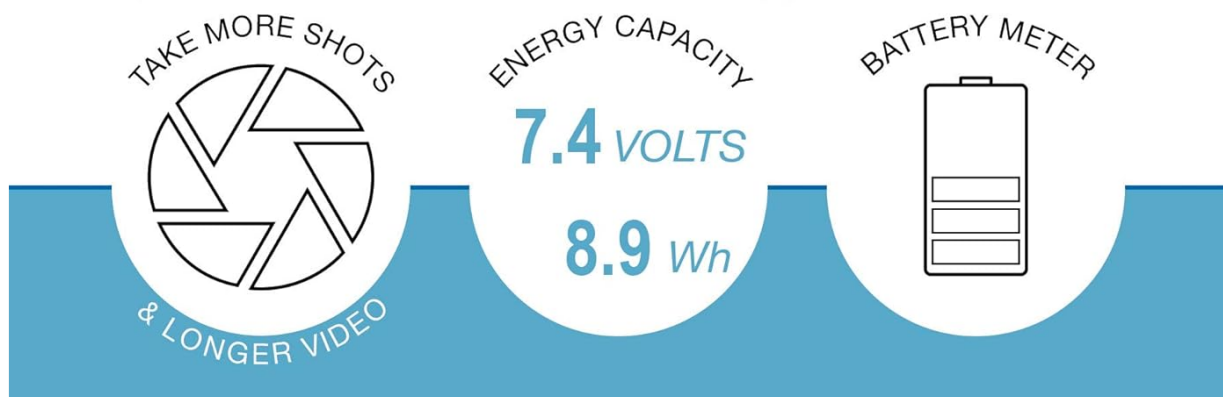


Image: Close-up of the BM Premium DMW-BLG10 battery, displaying safety warnings such as 'Do not short circuit' and 'Charge only with specified charger'.

4. Setup

Follow these steps to prepare your battery and charger for use:

- 1. Insert Battery:** Slide the DMW-BLG10 battery into the charger, ensuring the positive (+) and negative (-) contacts are properly aligned with the charger's terminals. The battery should fit securely.
- 2. Connect to Power:**
 - **AC Outlet:** Flip out the prongs on the charger and plug it directly into any standard household AC outlet (100V-240V).
 - **Car Charger:** For in-car charging, connect the car charging adapter to the charger and then plug it into your vehicle's 12V accessory socket.
 - **European Outlet:** Use the provided European travel adapter if charging in compatible regions.



STAY READY.

Make sure you never miss another once-in-a-lifetime moment by always having a battery ready with BM Premium's Wall Charger



Image: The BM Premium battery charger with a battery inserted, plugged into a standard wall outlet, ready for charging.



Image: A detailed view of the BM Premium battery charger, showing the input specifications and instructions for use, including how to insert the battery and plug into an AC outlet.

5. Operating Instructions

The charger features an LED indicator to show the charging status:

- A **RED** light indicates that the battery is currently charging.
- A **GREEN** light indicates that the battery is fully charged and ready for use.

The DMW-BLG10 batteries are equipped with a fully decoded chip, allowing them to function like original batteries, including displaying remaining power on compatible cameras. They are also designed with no memory effect, allowing you to charge them at any time without reducing their overall capacity or lifespan.



HOW TO CHARGE



Image: A visual guide demonstrating the charger's LED indicator lights: red for charging and green for a fully charged battery.

6. Maintenance

To ensure the longevity and optimal performance of your batteries and charger:

- Store batteries in a cool, dry place when not in use.
- Avoid exposing batteries or the charger to extreme temperatures, direct sunlight, or high humidity.
- Clean the battery and charger contacts periodically with a dry, soft cloth to ensure good connection.
- Do not drop or subject the batteries or charger to strong impacts.

7. Troubleshooting

- **Charger light not changing:** Ensure the battery is correctly inserted and making firm contact with the charger terminals. Verify the charger is securely plugged into a working power outlet.
- **Battery not fitting snugly in charger:** While designed for a secure fit, minor variations can occur. Ensure proper alignment of contacts. If the connection is loose, gently adjust the battery position.
- **Camera displays warning about non-original battery:** BM Premium DMW-BLG10 batteries are

designed with a fully decoded chip to ensure compatibility and proper function with your Panasonic Lumix camera, including displaying battery life. If a warning appears, ensure the battery is correctly inserted and restart the camera.

8. Specifications

Feature	Detail
Battery Model	DMW-BLG10
Battery Type	Li-ion
Energy Storage Capacity	1200mAh
Voltage	7.4 volts
Watt-hours (Wh)	8.6 Wh
Charger Input	AC 100V-240V ~ 50/60Hz, Max 150mA
Product Dimensions	6 x 5 x 5 inches
Item Weight	1.5 ounces

9. Warranty and Support

BM Premium Batteries and Chargers include a full one-year warranty from the date of purchase. For warranty claims or technical support, please contact BM Premium customer service through your retailer or the official BM Premium website.