

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [parts-quick](#) /
- › 32GB Memory Card for Vivitar ViviCam X025 User Manual

### parts-quick 8541639559

# Instruction Manual

## 32GB SDHC MEMORY CARD

Brand: parts-quick | Model: 8541639559

## Introduction

---

This manual provides essential information for the proper use and maintenance of your parts-quick 32GB SDHC Memory Card, specifically designed for compatibility with the Vivitar ViviCam X025. Please read this manual thoroughly before using the product.

## Product Overview

---



**Image:** A parts-quick 32GB SDHC Memory Card. The card is black with a silver label on the front, displaying the "parts-quick" logo and text. The gold-colored electrical contacts are visible on one end. This image illustrates the physical appearance of the memory card.

The parts-quick 32GB SDHC Memory Card is a high-capacity storage solution designed for digital devices requiring Secure Digital High Capacity (SDHC) cards. It provides ample space for storing photos, videos, and other digital data, ensuring reliable performance with compatible devices like the Vivitar ViviCam X025.

## Setup and Installation

---

Follow these steps to properly install your memory card into a compatible device:

1. **Power Off Device:** Ensure your Vivitar ViviCam X025 (or other compatible device) is powered off before inserting the memory card.
2. **Locate Card Slot:** Identify the memory card slot on your device. Refer to your device's manual if you are unsure of its location.
3. **Insert Card:** Gently slide the 32GB SDHC Memory Card into the slot with the gold contacts facing the correct direction, usually downwards or towards the back of the device. Apply light pressure until the card clicks into place. Do not force the card.
4. **Power On Device:** Once the card is securely inserted, power on your device. The device should recognize the new memory card.
5. **Format (Optional/Recommended):** For optimal performance and to ensure compatibility, it is often recommended to format the new memory card using your device's internal formatting function. **Warning:** Formatting will erase all data on the card. Back up any important data before formatting.

## Operating Instructions

---

Once installed, your 32GB SDHC Memory Card will function as the primary storage for your device.

- **Saving Data:** When taking photos or recording videos with your Vivitar ViviCam X025, the data will automatically be saved to the memory card.
- **Accessing Data:** To access stored data, you can either connect your device to a computer using a USB cable or remove the memory card and insert it into a compatible card reader connected to a computer.
- **Transferring Data:** Copy files from the memory card to your computer for backup or editing. Delete files from the card to free up space, ensuring you have backed up important data first.
- **Ejecting Card:** Always safely eject the memory card from your computer or power off your device before physically removing the card to prevent data corruption.

## Maintenance and Care

---

Proper care extends the life of your memory card and protects your data:

- **Physical Protection:** Keep the memory card in a protective case when not in use to prevent physical damage, dust, and static electricity.
- **Avoid Extremes:** Do not expose the card to extreme temperatures, direct sunlight, moisture, or strong magnetic fields.
- **Clean Contacts:** If necessary, gently clean the gold contacts with a soft, dry, lint-free cloth. Avoid touching the contacts with your fingers.
- **Data Backup:** Regularly back up important data from your memory card to another storage device (e.g., computer hard drive, cloud storage) to prevent data loss.
- **Avoid Frequent Formatting:** While formatting can resolve some issues, excessive formatting can reduce the lifespan of the card.

## Troubleshooting

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Card not recognized by device.	Incorrect insertion, dirty contacts, incompatible format, faulty card/slot.	<ul style="list-style-type: none"> <li>• Re-insert the card correctly.</li> <li>• Clean card contacts.</li> <li>• Try the card in another compatible device/card reader.</li> <li>• Ensure the device supports SDHC cards.</li> </ul>
Cannot save or delete files.	Card is write-protected, card is full, file system error.	<ul style="list-style-type: none"> <li>• Check the write-protect switch on the side of the card (if present).</li> <li>• Delete unnecessary files or transfer them to another storage.</li> <li>• Format the card (after backing up data).</li> </ul>
Data corruption or errors.	Improper removal, power loss during write, faulty card.	<ul style="list-style-type: none"> <li>• Always safely eject the card.</li> <li>• Try using data recovery software (for corrupted files).</li> <li>• If persistent, the card may be faulty and require replacement.</li> </ul>

## Specifications

---

**Capacity:** 32GB

**Type:** SDHC (Secure Digital High Capacity)

**Brand:** parts-quick

**Model Number:** 8541639559

**Hardware Interface:** SDHC

**Compatibility:** Vivitar ViviCam X025 and other compatible SDHC devices.

**Item Weight:** 8 ounces (approximate, for shipping)

**Date First Available:** February 3, 2016

## Warranty Information

---

Specific warranty details for this parts-quick 32GB SDHC Memory Card are not provided in this document. Please refer to the product packaging or contact parts-quick customer support for detailed warranty information.

Protection plans for data recovery may be available separately. For example, 2-year and 3-year Photo and Data Recovery Plans are sometimes offered for purchase with memory cards.

## Customer Support

---

For technical assistance or support regarding your parts-quick 32GB SDHC Memory Card, please contact parts-quick Toll Free Technical Support.

Contact information can typically be found on the product packaging or the official parts-quick website.

