

iTouchless IT18RC-1

iTouchless 18 Gallon Touchless Sensor Trash Can User Manual

Model: IT18RC-1

1. PRODUCT OVERVIEW

The iTouchless 18 Gallon Touchless Sensor Trash Can (Model IT18RC-1) is an automatic, hands-free waste receptacle designed for convenience and hygiene. Featuring a motion-sensor lid, an AbsorbX odor filter system, and mobile caster wheels, this stainless steel trash can is suitable for various environments.



Figure 1: iTouchless 18 Gallon Touchless Sensor Trash Can (Model IT18RC-1)

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Stainless Steel Trash Can Body
- Sensor Lid Assembly
- AbsorbX Odor Filter (1 installed, 1 spare)
- Odor Filter Compartment Frame
- 4 Caster Wheels
- Retainer Ring for Trash Bag
- User Manual

Note: 4 D-size batteries and an AC power adapter are not included and must be purchased separately.

3. SETUP INSTRUCTIONS

3.1 Installing Caster Wheels

1. Carefully turn the trash can body upside down on a soft, clean surface to prevent scratches.
2. Insert each of the 4 caster wheels into the designated slots on the bottom of the trash can. Push firmly until they click into place.
3. Ensure all wheels are securely attached and can rotate freely.
4. Return the trash can to an upright position.



Figure 2: Caster wheel installation detail.

3.2 Powering the Unit (Batteries or AC Adapter)

The trash can can be powered by 4 D-size batteries or an optional AC power adapter.

Battery Installation:

1. Locate the battery compartment on the underside of the sensor lid.
2. Open the battery compartment cover.
3. Insert 4 new D-size batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

AC Adapter Connection (Optional):

1. Locate the power input jack on the back of the sensor lid.
2. Plug the AC adapter into the power input jack.
3. Plug the other end of the AC adapter into a standard wall outlet.



Figure 3: Power options: 4 D-size batteries or optional AC adapter.

3.3 Installing the AbsorbX Odor Filter

1. Locate the odor filter compartment on the underside of the sensor lid.
2. Open the filter compartment cover.
3. Insert one AbsorbX odor filter into the compartment.
4. Close the filter compartment cover securely.



Figure 4: AbsorbX odor filter installation.

3.4 Installing a Trash Bag

1. Remove the sensor lid from the trash can body.
2. Place a standard 18-gallon trash bag into the can.
3. Secure the top edge of the trash bag under the retainer ring to prevent it from slipping.
4. Replace the sensor lid onto the trash can body, ensuring it is properly aligned.

4. OPERATING INSTRUCTIONS

4.1 Automatic Sensor Operation

The iTouchless trash can features a motion sensor for hands-free operation.

- To open the lid, simply approach the sensor area (located on the front of the lid) with your hand or an object. The lid will open automatically.
- The lid will remain open as long as the sensor detects motion. Once motion is no longer detected, the lid will close automatically after approximately 5 seconds.
- The VisioSense technology ensures the lid stays open for longer clean-ups, while Refix Technology prevents the lid from closing on your hand.



Figure 5: Automatic sensor operation.

4.2 Manual Open/Close and Stay-Open Mode

For extended use or specific situations, the lid can be operated manually.

- **Manual Open:** Press the 'OPEN' button on the sensor panel to open the lid.
- **Manual Close:** Press the 'CLOSE' button on the sensor panel to close the lid.
- **Stay-Open Mode:** If the lid is opened manually using the 'OPEN' button, it will remain open until the 'CLOSE' button is pressed, or after approximately 5 minutes of inactivity. This is useful for tasks requiring continuous access to the trash can.

5. MAINTENANCE

5.1 Cleaning the Trash Can

- The stainless steel body is fingerprint-proof and smudge-resistant. Clean with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads, which can damage the finish.
- Wipe the sensor area on the lid with a dry, soft cloth to ensure optimal performance. Do not immerse the lid in water.

5.2 Replacing the AbsorbX Odor Filter

For optimal odor control, replace the AbsorbX odor filter every 3 months or as needed.

1. Open the odor filter compartment on the underside of the sensor lid.
2. Remove the old filter and dispose of it.
3. Insert a new AbsorbX odor filter into the compartment.
4. Close the filter compartment cover securely.

Tip: You can sign up for free text message reminders to replace your AbsorbX Odor Filter. Refer to the iTouchless website for details.

5.3 Replacing Batteries

If the lid's sensor operation becomes sluggish or stops working, it may be time to replace the batteries.

1. Locate and open the battery compartment on the underside of the sensor lid.
2. Remove the old D-size batteries.
3. Insert 4 new D-size batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

6. TROUBLESHOOTING

If you encounter issues with your iTouchless trash can, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lid does not open automatically.	Low batteries; sensor obstructed or dirty; power adapter disconnected.	Replace batteries or ensure AC adapter is securely plugged in. Clean the sensor window with a soft, dry cloth. Ensure no objects are blocking the sensor.
Lid opens or closes unexpectedly.	Sensor interference; unit placed in high-traffic area.	Relocate the trash can away from direct sunlight, strong light sources, or areas with frequent movement. Ensure no objects are hanging over the sensor.

Problem	Possible Cause	Solution
Lid closes too quickly or slowly.	Low batteries.	Replace batteries.
Unpleasant odors persist.	Odor filter needs replacement; trash bag not properly sealed.	Replace the AbsorbX odor filter. Ensure the trash bag is securely held by the retainer ring and is not overfilled.
Wheels do not roll smoothly.	Debris in wheels; wheels not properly installed.	Check wheels for any trapped debris and clean if necessary. Re-install wheels, ensuring they are fully clicked into place.

7. SPECIFICATIONS

Feature	Detail
Model Number	IT18RC-1
Capacity	18 Gallons (68 Liters)
Dimensions (H x W x D)	29.5 x 19.5 x 18.8 inches (74.9 x 49.5 x 47.8 cm)
Weight	12 Pounds (5.44 kg)
Material	Fingerprint-Proof Stainless Steel
Opening Mechanism	Motion-Sensor, Manual Open/Close
Power Source	4 D-size Batteries (not included) or Optional AC Adapter (sold separately)
Special Features	AbsorbX Odor Filter System, Caster Wheels, VisioSense, Refix Technology



Figure 6: Product dimensions.

8. WARRANTY AND CUSTOMER SUPPORT



iTouchless products are designed for quality and reliability. Your 100% satisfaction is assured and backed by a Full-Service Manufacturer's Warranty and Dedicated Customer Support.

For warranty details, product registration, or technical assistance, please visit the official iTouchless website or contact customer support directly.

Contact Information:

- **Website:** www.itouchless.com
- Refer to product packaging or the iTouchless website for the most current customer support contact details.

Related Documents - IT18RC-1

 <p>iTouchless Star Manual 18 and 23 Gallon Round Stainless Steel Sensor Trash Can Model: IT18RC-1 (18 Gallon) IT23RC-1 (23 Gallon)</p> <p>Register your Product To receive important product information, please go to www.philips.com and register your product.</p> <p>Make sure to help! To ensure the safe use of your product, please read the instructions carefully before using it. The instructions are included in the product packaging. Please also read the instructions for the optional accessories.</p>	<p>iTouchless 18 & 23 Gallon Stainless Steel Sensor Trash Can User Manual</p> <p>User manual for the iTouchless 18 and 23 Gallon Round Stainless Steel Sensor Trash Can with Dual Deodorizers. Provides information on features, contents, operation, filter replacement, troubleshooting, and warranty.</p>
 <p>iTouchless "Touchless, but smart!" Star Manual 13 Gallon AutoStep Stainless Steel Trash Can Model: ITA13SB, ITA13SR, ITA13SW</p> <p>Make sure to help! To ensure the safe use of your product, please read the instructions carefully before using it. The instructions are included in the product packaging. Please also read the instructions for the optional accessories.</p>	<p>iTouchless 13 Gallon AutoStep Stainless Steel Trash Can User Manual</p> <p>Comprehensive user manual for the iTouchless 13 Gallon AutoStep Stainless Steel Trash Can (models ITA13SB, ITA13SR, ITA13SW). Learn about its features including the automatic sensor lid, odor control system, battery and AC power options, proper operation, care and maintenance, troubleshooting, and warranty information.</p>
 <p>iTouchless "Touchless, but smart!" Star Manual WS13RSL (13 Gallon) WS18RSL (18 Gallon) Stainless Steel Sensor Trash Can Model: WS13RSL, WS18RSL</p> <p>Make sure to help! To ensure the safe use of your product, please read the instructions carefully before using it. The instructions are included in the product packaging. Please also read the instructions for the optional accessories.</p>	<p>iTouchless WS13RSL/WS18RSL Sensor Trash Can User Manual</p> <p>Comprehensive user manual for the iTouchless WS13RSL and WS18RSL sensor trash cans, detailing features, setup, operation, maintenance, troubleshooting, and warranty information.</p>
 <p>iTouchless "Touchless, but smart!" Star Manual MT02SS (2 Gallon) MT02SW (2 Gallon) MT04SS (4 Gallon) MT04SW (4 Gallon) Stainless Steel Sensor Trash Can Model: MT02SS, MT02SW, MT04SS, MT04SW</p> <p>Make sure to help! To ensure the safe use of your product, please read the instructions carefully before using it. The instructions are included in the product packaging. Please also read the instructions for the optional accessories.</p>	<p>iTouchless Sensor Trash Can User Manual MT02SS MT02SW MT04SS MT04SW</p> <p>User manual for iTouchless MT02SS, MT02SW, MT04SS, MT04SW sensor trash cans. Covers features, setup, operation, maintenance, troubleshooting, and warranty information.</p>
 <p>iTouchless Star Manual 13 Gallon Stainless Steel Sensor Trash Can Model: DZT13P</p> <p>Make sure to help! To ensure the safe use of your product, please read the instructions carefully before using it. The instructions are included in the product packaging. Please also read the instructions for the optional accessories.</p>	<p>iTouchless 13 Gallon Stainless Steel Sensor Trash Can User Manual</p> <p>User manual for the iTouchless 13 Gallon Stainless Steel Sensor Trash Can (Model DZT13P). Learn about its features, operation, troubleshooting, and warranty.</p>
 <p>iTouchless "Touchless, but smart!" Star Manual 4 Gallon Slim Sensor Trash Can (Left or Right Opening) Model: SG04SSL, SG04SSR</p> <p>Make sure to help! To ensure the safe use of your product, please read the instructions carefully before using it. The instructions are included in the product packaging. Please also read the instructions for the optional accessories.</p>	<p>iTouchless 4 Gallon Slim Sensor Trash Can User Manual (SG04SSL/SG04SSR)</p> <p>User manual for the iTouchless 4 Gallon Slim Sensor Trash Can (models SG04SSL and SG04SSR). Learn about its features, operation, maintenance, troubleshooting, and warranty.</p>