

Manuals.plus /

› Olive /

› Betrayed Blu-ray Disc User Manual

Olive B01BGDI06U

Betrayed Blu-ray Disc User Manual

Model: B01BGDI06U

1. PRODUCT OVERVIEW

This manual provides essential information for the **Betrayed Blu-ray Disc**. This Blu-ray edition features the critically acclaimed film "Betrayed," starring Debra Winger and Tom Berenger. The film explores themes of loyalty and deception within a suspenseful drama.

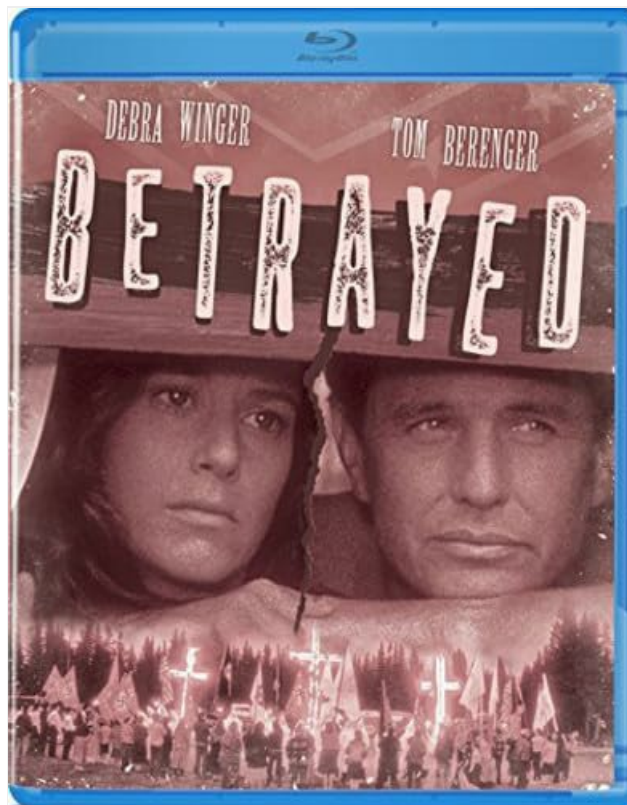


Image 1.1: Front cover of the Betrayed Blu-ray disc. The artwork depicts the two main actors, Debra Winger and Tom Berenger, with a symbolic representation of a crowd and crosses below them, hinting at the film's themes.

Key Features:

- **Format:** Blu-ray Disc
- **Runtime:** Approximately 2 hours and 7 minutes
- **MPAA Rating:** R (Restricted)
- **Main Actors:** Debra Winger, Tom Berenger, John Heard, John Mahoney
- **Language:** English
- **Subtitles:** English
- **Studio:** Olive
- **Release Date:** April 19, 2016

2. SETUP AND INSTALLATION

To enjoy the Betrayed Blu-ray Disc, ensure you have a compatible Blu-ray player and a display device (TV, monitor, projector).

2.1 Connecting Your Blu-ray Player

1. Connect your Blu-ray player to your display device using an HDMI cable for optimal video and audio quality.
2. Connect your Blu-ray player to your audio receiver or sound system, if applicable, using HDMI, optical, or coaxial cables.
3. Plug the Blu-ray player's power cord into an electrical outlet.

2.2 Inserting the Disc

- Gently remove the Blu-ray disc from its case, holding it by the edges to avoid touching the playback surface.
- Open the disc tray or slot on your Blu-ray player.
- Place the disc into the tray with the label side facing up. If using a slot-loading player, gently push the disc into the slot until the player pulls it in.
- Close the disc tray, if applicable.

3. OPERATING INSTRUCTIONS

Once the disc is inserted, your Blu-ray player should automatically begin reading the disc and display the main menu or start playback.

3.1 Playing the Movie

- From the main menu, select "Play Movie" or a similar option.
- Use your Blu-ray player's remote control to navigate menus (directional arrows, Enter/OK button).
- Standard playback controls (Play, Pause, Stop, Fast Forward, Rewind, Skip Chapter) are available via your remote.

3.2 Selecting Audio and Subtitles

- During playback, press the "Audio" or "Subtitle" button on your remote control to access language options.
- Select "English" for the audio track.
- Select "English" for subtitles, or "Off" if not desired.

4. MAINTENANCE AND CARE

Proper care of your Blu-ray disc will ensure its longevity and optimal playback performance.

4.1 Cleaning the Disc

- If the disc has fingerprints or smudges, gently wipe the playback surface with a soft, lint-free cloth.
- Wipe from the center of the disc outwards in a straight line, rather than in a circular motion.
- Do not use abrasive cleaners, solvents, or rough materials, as these can scratch the disc.

4.2 Storage

- Always store the Blu-ray disc in its original case when not in use to protect it from dust, scratches, and direct sunlight.
- Store cases upright in a cool, dry place.

5. TROUBLESHOOTING

If you encounter issues during playback, refer to the following common troubleshooting steps.

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty or scratched; Player is not compatible; Player firmware is outdated.	Clean the disc (see Section 4.1). Ensure your player supports Blu-ray discs. Check your player's manufacturer website for firmware updates.
No audio or video during playback.	Cables are loose; Incorrect input selected on TV/receiver; Player settings.	Check all cable connections. Ensure your TV/receiver is on the correct HDMI input. Verify audio/video settings on your Blu-ray player.
Picture freezes or skips.	Disc is dirty or damaged; Player lens is dirty.	Clean the disc. Try playing another Blu-ray disc to determine if the issue is with the disc or the player. Consider a lens cleaning disc for your player.

6. SPECIFICATIONS

Detailed technical specifications for the Betrayed Blu-ray Disc.

- **ASIN:** B01BGDI06U
- **Product Dimensions:** 0.7 x 7.5 x 5.4 inches
- **Item Weight:** 3.2 ounces
- **Number of Discs:** 1
- **Media Format:** Subtitled, Widescreen
- **MPAA Rating:** R (Restricted)
- **Run Time:** 2 hours and 7 minutes
- **Release Date:** April 19, 2016
- **Actors:** Debra Winger, John Heard, John Mahoney, Tom Berenger
- **Subtitles:** English
- **Studio:** Olive
- **Genre:** Mystery & Suspense
- **Language:** English

7. WARRANTY AND SUPPORT

For issues related to the physical Blu-ray disc (e.g., manufacturing defects), please contact the retailer from whom the disc was purchased. For technical support regarding your Blu-ray player or display device, refer to the respective manufacturer's user manual or support channels.

As a media product, specific warranties beyond initial functionality are typically not provided by the content studio.

8. OFFICIAL PRODUCT VIDEOS

No official product videos (e.g., trailers, behind-the-scenes footage) are provided as part of this instruction manual. Any additional content may be available on the Blu-ray disc itself or through official distributor channels.

