



Manuals.plus /

- › **Bosch** /
- › Bosch PKN675DP1D Series 8 Electric Ceramic Hob User Manual

## Bosch PKN675DP1D

# Bosch PKN675DP1D Series 8 Electric Ceramic Hob User Manual

Model: PKN675DP1D

## INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your Bosch PKN675DP1D Series 8 Electric Ceramic Hob. Please read these instructions carefully before installation and operation, and keep them for future reference.

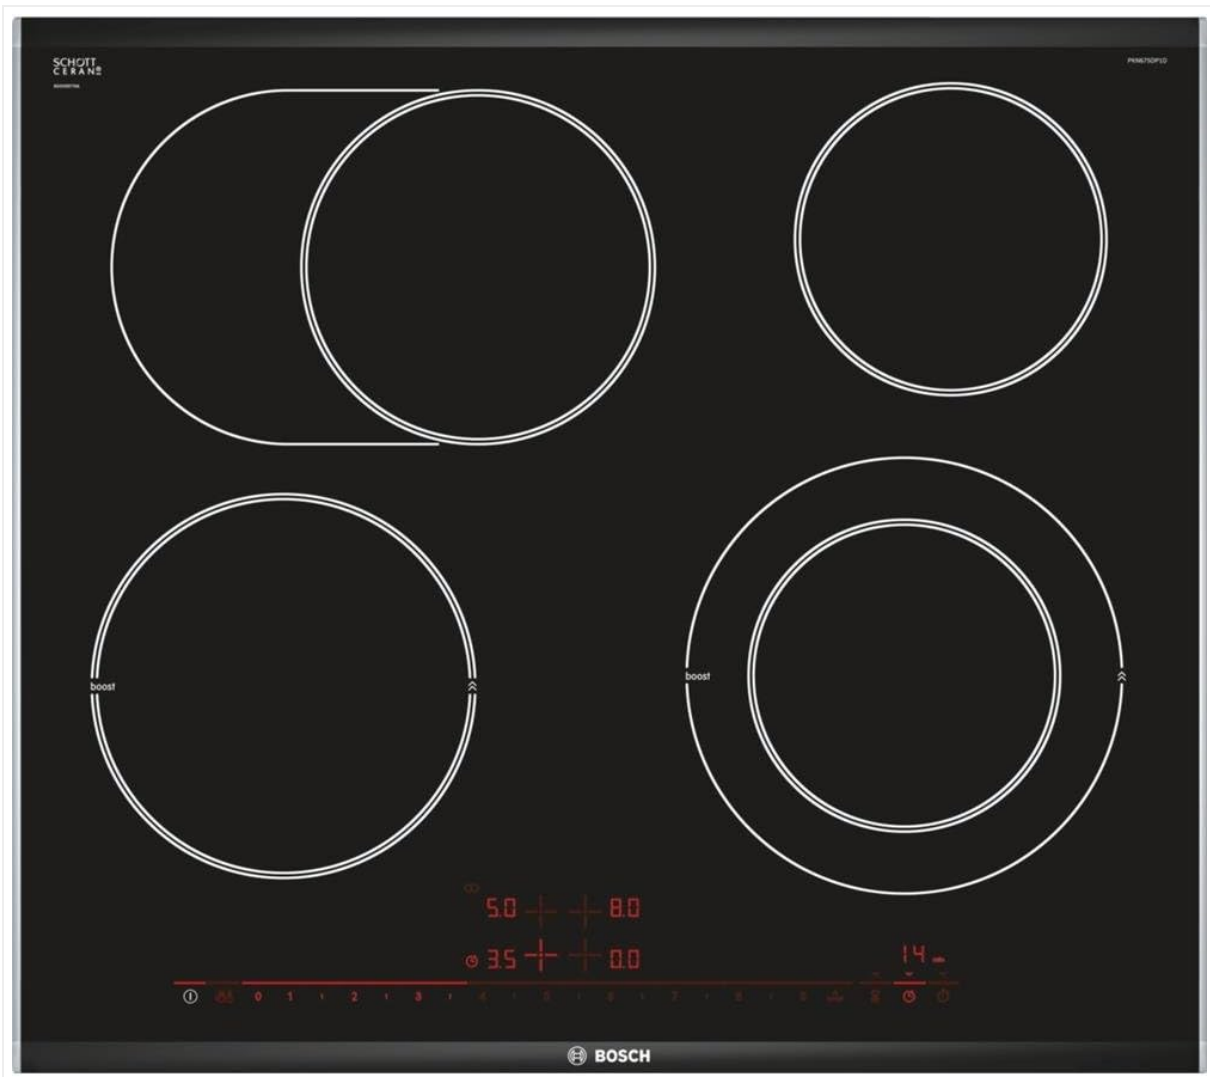


Image 1: Front view of the Bosch PKN675DP1D Electric Ceramic Hob, showcasing its black glass ceramic surface and four cooking zones with touch controls.

## SAFETY INSTRUCTIONS

---

Observe the following safety instructions to prevent accidents and damage to the appliance:

- **Electrical Connection:** The appliance must be hard-wired and installed by a qualified electrician. Ensure the mains voltage matches the rating plate.
- **Hot Surfaces:** The hob surface becomes very hot during operation. Avoid touching hot cooking zones. Use oven mitts.
- **Overheating:** Do not leave cooking unattended, especially when cooking with fats or oils, as they can ignite.
- **Spillage:** Clean up any liquid spills immediately to prevent interference with touch controls and potential hazards. The hob will alert you with bleeps if controls are covered by spillage.
- **Child Safety:** Activate the child lock function to prevent accidental operation by children.
- **Cleaning:** Always switch off the appliance and allow it to cool before cleaning.
- **Repairs:** Only authorized service personnel should perform repairs. Incorrect repairs can lead to significant hazards.

## SETUP AND INSTALLATION

---

The Bosch PKN675DP1D hob is designed for built-in installation. Professional installation by a qualified technician



## Basic Operation:

1. **Switching On/Off:** Touch the main power symbol to switch the hob on or off.
2. **Selecting a Cooking Zone:** Touch the desired cooking zone indicator.
3. **Adjusting Power Level:** Use the '+' and '-' symbols or the direct selection bar (1-9) to set the heat level. The hob offers 17 power levels, including a 'Turbo' or 'Boost' mode for rapid heating.
4. **Audible Feedback:** The hob provides a single beep for each successful touch input. Multiple beeps indicate a control panel obstruction (e.g., spillage).

## Special Functions:

- **Expandable Cooking Zones:** Certain cooking zones (e.g., rear left and front right) can be expanded to accommodate larger cookware. Refer to the hob's markings for these zones.
- **Timer Function:** Each cooking zone can be set with an individual timer. This feature automatically switches off the zone after the set time, preventing overcooking or forgotten dishes.
- **Child Lock:** To activate or deactivate the child lock, press and hold the designated child lock symbol. This prevents accidental changes to settings or switching on the hob.

## MAINTENANCE AND CLEANING

---

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your hob.

- **Daily Cleaning:** After each use, allow the hob to cool down completely. Wipe the glass ceramic surface with a soft, damp cloth and a small amount of mild detergent.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized ceramic hob scraper and a ceramic hob cleaner. Follow the product instructions carefully.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass ceramic surface.
- **Oil Stains:** Oil stains can be difficult to remove if left to burn on. Clean them as soon as the hob has cooled to prevent permanent marks.
- **Control Panel:** Keep the control panel clean and dry to ensure proper touch response.

## TROUBLESHOOTING

---

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Hob does not switch on.	No power supply; Child lock activated.	Check circuit breaker; Deactivate child lock.
Cooking zone not heating.	Incorrect power level selected; Pan not suitable.	Adjust power level; Ensure cookware is flat-bottomed and suitable for ceramic hobs.
Control panel beeps continuously.	Spillage or object covering controls.	Remove spillage or object and clean the control area.
Hob switches off unexpectedly.	Overheating protection activated; Timer expired.	Allow hob to cool; Check timer settings.

If the problem persists after attempting these solutions, please contact Bosch customer service or a qualified technician.

## SPECIFICATIONS

---

<b>Brand</b>	Bosch
<b>Model Number</b>	PKN675DP1D
<b>Product Dimensions (L x W x H)</b>	60.6 x 52.7 x 4.4 cm
<b>Weight</b>	8 Kilograms
<b>Material</b>	Glass Ceramic
<b>Installation Type</b>	Built-in
<b>Number of Cooking Zones</b>	4
<b>Power Levels</b>	17
<b>Voltage</b>	220 Volts
<b>Power Output</b>	9.2 kW (approx. 9200W)
<b>Components Included</b>	Cooktop (electric/built-in)
<b>Country of Origin</b>	China

## WARRANTY AND SUPPORT

---

Your Bosch PKN675DP1D Electric Ceramic Hob typically comes with a manufacturer's warranty. For specific warranty details, please refer to the documentation provided with your purchase or visit the official Bosch website.

- **Amazon Warranty:** Purchases made through Amazon often include a 2-year warranty. Please check your Amazon order details for specific terms.
- **Customer Service:** For technical assistance, spare parts, or service requests, please contact Bosch customer support. You can find contact information on the official Bosch website or in your product documentation.
- **Online Resources:** Additional manuals and support resources may be available on the Bosch website.